


**STIHL MS 362, 362 C**

**2010-09**

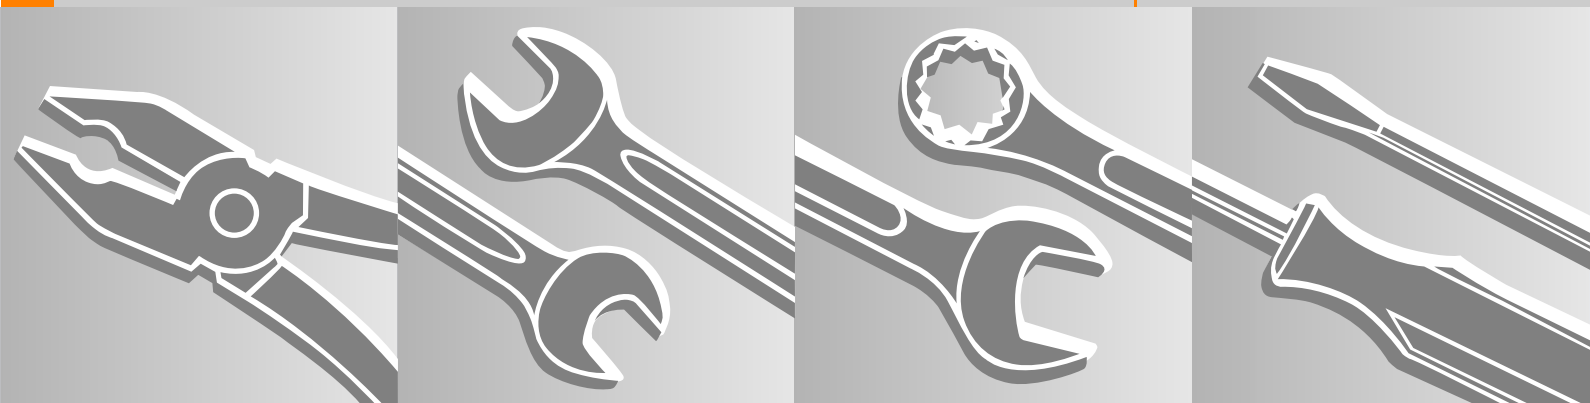

## Contents

<b>1.</b>	<b>Introduction and Safety Precautions</b>	<b>3</b>	<b>6.</b>	<b>Engine</b>	<b>33</b>	<b>9.</b>	<b>Servicing the AV System</b>	<b>67</b>
1.1	Introduction	3	6.1	Muffler	33	9.1	Buffer on Oil Tank	67
1.2	Safety Precautions	4	6.2	Leakage Test	34	9.2	AV Spring on Oil Tank	67
			6.2.1	Preparations	34	9.2.1	AV Spring on Oil Tank - Machines with Heating	67
			6.2.2	Vacuum Test	35			
			6.2.3	Pressure Test	35	9.3	AV Spring on Fuel Tank	68
<b>2.</b>	<b>Specifications</b>	<b>5</b>	6.3	Oil Seals	36	9.4	AV Spring on Handlebar	69
2.1	Motor	5	6.4	Shroud	37	9.4.1	Machines with Heating	70
2.2	Fuel System	5	6.5	Cylinder	37	9.5	Annular and Stop Buffers	70
2.3	Ignition System	5	6.6	Crankshaft	39	9.6	Handlebar	71
2.4	Chain Lubrication	5	6.6.1	Bearings / Crankcase	44	9.7	Handlebar with Heating	72
2.5	Tightening Torques	6	6.7	Piston	46			
			6.8	Piston Rings	48			
			6.9	Decompression Valve	48			
<b>3.</b>	<b>Troubleshooting</b>	<b>8</b>				<b>10.</b>	<b>Control Levers</b>	<b>78</b>
3.1	Clutch	8	<b>7.</b>	<b>Ignition System</b>	<b>49</b>	10.1	Master Control Lever	78
3.2	Chain Drive, Chain Brake, Chain Tensioner	9	7.1	Ignition Timing	49	10.1.1	Removing and Installing	78
3.3	Chain Lubrication	10	7.2	Preseparator	49	10.2	Throttle Trigger/ Interlock Lever	79
3.4	Rewind Starter	11	7.3	Ignition Module	49	10.3	Throttle Trigger/ Interlock Lever – QuickStop Super	80
3.5	Ignition System	12	7.4	Testing the Ignition Module	51	10.3.1	Switch Lever – QuickStop Super	82
3.6	Carburetor	13	7.5	Spark Plug Boot / Ignition Lead	52	10.3.2	Interlock Lever – QuickStop Super	82
3.7	Engine	16	7.6	Flywheel	53	10.3.3	Choke Rod	83
			7.7	Short Circuit Wire	54	10.3.4	Throttle Rod	84
			7.7.1	Testing	54			
<b>4.</b>	<b>Clutch</b>	<b>17</b>	7.7.2	Removing and Installing	55			
4.1	Clutch Drum	18	7.7.3	Ground Wire	56			
			7.7.4	Contact Spring	57			
			7.8	Ignition System Troubleshooting	58			
<b>5.</b>	<b>Chain Brake</b>	<b>20</b>				<b>11.</b>	<b>Chain Lubrication</b>	<b>85</b>
5.1	Checking Operation	20	<b>8.</b>	<b>Rewind Starter</b>	<b>61</b>	11.1	Pickup Body	85
5.2	Brake Band	20	8.1	General	61	11.2	Oil Suction Hose	85
5.3	Brake Lever	22	8.2	Fan housing	61	11.3	Oil Pump	86
5.4	Brake Lever on Machines with QuickStop Super	23	8.3	Pawls	61	11.4	Valve	87
5.4.1	Adjusting the Brake Cable	25	8.4	Rope Rotor	62			
5.4.2	Brake Cable	26	8.5	Starter Rope / Grip	63			
5.5	Cam Lever	28	8.6	Tensioning the Rewind Spring	64			
5.6	Pins	29	8.7	Replacing the Rewind Spring	65			
5.7	Chain Tensioner	30						
5.7.1	Quick Chain Tensioner	31						
5.8	Bar Mounting Studs	31						

**STIHL®**

© ANDREAS STIHL AG & Co. KG, 2010

## Contents

<b>12.</b>	<b>Fuel System</b>	<b>88</b>	<b>13.</b>	<b>Heating System</b>	<b>109</b>
12.1	Air Filter	88	13.1	Carburetor Heating	109
12.2	Baffle	88	13.1.1	Testing the Complete System	109
12.3	Filter Base	88	13.1.2	Testing the Heating Element	109
12.4	Air Guide Shroud	89	13.1.3	Thermostatic Switch	110
12.5	Carburetor	92	13.2	Carburetor Heating System Troubleshooting Chart	111
12.5.1	Leakage Test	94	13.3	Handle Heating System	112
12.6	Servicing the Carburetor	94	13.3.1	Troubleshooting	112
12.6.1	Metering Diaphragm	94	13.4	Heater Switch	112
12.6.2	Inlet Needle	95	13.5	Heating Element in Rear Handle	113
12.6.3	Pump Diaphragm	96	13.6	Heating Element in Handlebar	114
12.6.4	Air Valve	97	13.7	Generator	115
12.6.5	Levers on Throttle Shaft	98	13.7.1	Handle Heating and Generator Troubleshooting Chart	117
12.6.6	Adjusting Screws	99	13.7.2	Test Connections and Test Values	119
12.7	Adjusting the Carburetor	100	13.8	Wiring Harness	121
12.7.1	Basic Setting	100			
12.7.2	Standard setting	101	<b>14.</b>	<b>Special Servicing Tools</b>	<b>123</b>
12.8	Carburetor Carrier	102			
12.9	Intake Manifold	103	<b>15.</b>	<b>Servicing Aids</b>	<b>125</b>
12.10	Tank Vent	104			
12.10.1	Testing	104			
12.10.2	Removing and Installing	105			
12.11	Fuel Intake	106			
12.11.1	Pickup Body	106			
12.11.2	Fuel Hose	106			
12.11.3	Tank Housing	107			

## 1. Introduction and Safety Precautions

### 1.1 Introduction

This service manual contains detailed descriptions of all the repair and servicing procedures specific to this power tool.

You should make use of the illustrated parts lists while carrying out repair work. They show the installed positions of the individual components and assemblies.

Refer to the latest edition of the relevant parts list to check the part numbers of any replacement parts.

A fault on the machine may have several causes. To help locate the fault, consult the chapter on "Troubleshooting" and the "STIHL Service Training System" for all assemblies.

Refer to the "Technical Information" bulletins for engineering changes which have been introduced since publication of this service manual. Technical information bulletins also supplement the parts list until a revised edition is issued.

The special tools mentioned in the descriptions are listed in the chapter on "Special Servicing Tools" in this manual. Use the part numbers to identify the tools in the "STIHL Special Tools" manual. The manual lists all special servicing tools currently available from STIHL.

Symbols are included in the text and pictures for greater clarity. The meanings are as follows:


In the descriptions:

- = Action to be taken that is shown in the illustration (above the text)
- = Action to be taken that is not shown in the illustration (above the text)

In the illustrations:

- ➡ Pointer
- ➡ Direction of movement
- 📖 4.2 = Reference to another chapter, i.e. chapter 4.2 in this example.


Service manuals and all technical information bulletins are intended exclusively for the use of properly equipped repair shops. They must not be passed to third parties.

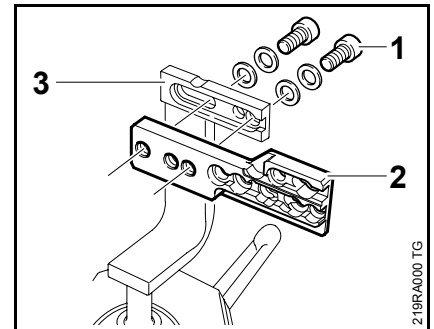

Servicing and repairs are made considerably easier if the machine is mounted to assembly stand (3) 5910 890 3100. To do this, secure the mounting plate (2) 5910 850 1650 to the assembly stand with two screws (1) and washers.

The screws must not project since they, depending on the machine, may damage housings when the machine is clamped in position.

The above operation is not necessary with the new assembly stand 5910 890 3101 since the mounting plate is already fitted.

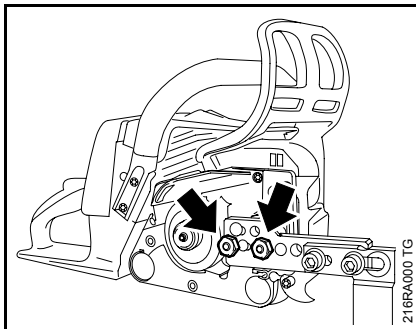

Engage the bar mounting studs in the outer bores in the mounting plate and secure the saw in position with the nuts (arrows).

### Preparations for servicing

Remove the chain sprocket cover, saw chain and guide bar before carrying out repairs or mounting the machine to the assembly stand.

Always use original STIHL replacement parts. They can be identified by the STIHL part number, the **STIHL** logo and the STIHL parts symbol . This symbol may appear alone on small parts.

### Storing and disposing of oils and fuels

Collect fuel or lubricating oil in a clean container and dispose of it properly in accordance with local environmental regulations.

## 1.2 Safety Precautions

If the power tool is started up in the course of repairs or maintenance work, observe all local and country-specific safety regulations as well as the safety precautions and warnings in the instruction manual.

Gasoline is an extremely flammable fuel and can be explosive in certain conditions.

Always wear suitable protective gloves for operations in which components are heated for assembly or disassembly.

Improper handling may result in burns or other serious injuries.

Do not smoke or bring any fire, flame or other source of heat near the fuel. All work with fuel must be performed outdoors only. Spilled fuel must be wiped away immediately.

Always perform leakage test after working on the fuel system and the engine.

Damaged parts must always be replaced in order to avoid consequential damage.

Run the chain saw only with the shroud mounted in position – there is otherwise a risk of injury from the fanwheel and a risk of engine damage due to overheating.


### Fuel system – hose barb connectors

Pull off or push on fuel hoses in line with the connector, preferably by hand, to ensure the tightness of the fuel system.


Avoid damaging the hose barb – do not use sharp-edged pliers, screwdrivers, etc.

Do not cut open fuel hoses with a knife or similar tool.

Do not re-use fuel hoses after removal. Always install new hoses – fuel hoses can be overstretched during removal.

Install new fuel hoses either dry or with the aid of STIHL press fluid,  15.

Other press fluids are not approved and may result in damage to the fuel hoses.

Coat the ends of the hoses and the connectors with STIHL press fluid and then push the new hoses onto the hose barbs,  15.

## 2. Specifications

### 2.1 Motor

	MS 362
Displacement:	59 cm <sup>3</sup>
Bore:	47.0 mm
Stroke:	34.0 mm
Engine power to ISO 7293:	3.4 kW (4.6 bhp) at 9,500 rpm
Maximum permissible engine speed with bar and chain:	14,000 rpm
Idle speed:	2,800 rpm
Clutch:	Centrifugal clutch without linings
Clutch engages at:	3,500 rpm
Crankcase leakage test at gauge pressure:	0.5 bar
under vacuum:	0.5 bar

---

### 2.2 Fuel System

Carburetor leakage test at gauge pressure:	0.8 bar
Operation of tank vent at gauge pressure:	0.5 bar
Fuel:	refer to instruction manual

---

### 2.3 Ignition System

Air gap between ignition module and fanwheel:	0.20...0.30 mm
Spark plug (suppressed):	NGK BPMR 7 A BOSCH WSR6F
Electrode gap:	0.5 mm

---

### 2.4 Chain Lubrication

Speed-controlled oil pump with reciprocating piston and manual flow control	
Oil delivery rate: Ematic oil pump	9.5 (+/- 2.5) cm <sup>3</sup> /min at 10,000 rpm
Oil delivery rate: Adjustable oil pump	5.5...15.0 (+/- 3.0) cm <sup>3</sup> /min at 10,000 rpm

## 2.5 Tightening Torques

DG and P (Plastoform) screws are used in polymer and light metal components. These screws form a permanent thread when they are installed for the first time. They can be removed and installed as often as necessary without impairing the strength of the screwed assembly, providing the specified tightening torque is observed. For this reason it is **essential to use a torque wrench**.

Fastener	Thread size	For component	Torque Nm	Remarks
Screw	M 4x8	Chain tensioner cover plate/crankcase	3.0	
Screw	P 6x21.5	Cover, handlebar/tank housing (VW, R)	6.0	
Screw	M 7x12.5	Starter post/fan housing	12.0	
Screw	M 4x12	Brake band/crankcase	3.0	1), 4)
Screw	P 4x12	Brake cable retainer/tank housing (Q)	1.0	
Collar screw	M 8x21.5	Collar stud for bar	23.0	1)
Collar stud	M 8/ M 10	Bar mounting, quick chain tensioner	30.0	3)
Screw	M 4x12	Cover, chain brake/crankcase	2.0	4)
	M 10x1	Decompression valve	14.0	
Screw	B 2.9x9.5	Spark arresting screen/muffler	2.0	
Screw	M 4x12	Generator/crankcase (VW)	3.0	1)
Screw	M 6x19.5	Handlebar/stiffener (VW, R)	10.0	
Screw	P 5x16	Handlebar/plug, AV spring	3.0	
Screw	M 5x16	Handlebar/plug, AV spring (VW)	6.0	4)
Screw	P 6x26.5	Handlebar/tank housing	7.0	
Screw	P 6x40	Handlebar/tank housing (VW, R)	8.0	
Screw	M 5x35	Hand guard/fan housing/crankcase	6.0	4)
Screw	P 6x28	Chain catcher/crankcase/bearing plug	6.0	
Screw	M 5x12	Spiked bumper/crankcase/upper locknut	8.0	4)
Screw	M 5x16	Spiked bumper/crankcase, bottom	8.0	
Screw	M 4x12	Manifold/cylinder	4.0	4)
Screw	M 5x25	Crankcase, sprocket side/fan side, 1st stage	4.0	4)
Screw	M 5x25	Crankcase, sprocket side/fan side, 2n stage	10.0	4)
Screw	P 6x21.5	Bearing plug/crankcase	6.0	
Screw	M 5x16	Bearing plug/cylinder	10.0	4)
Screw	M 5x20	Fan housing/crankcase	6.0	4)
Screw	M 4x12	Air guide shroud/crankcase	4.0	4)
Carrier	M 14x1	Carrier/crankshaft	50.0	

Fastener	Thread size	For component	Torque Nm	Remarks
Screw	M 4x12	Oil pump/crankcase	3.0	4)
Screw	M 5x25	Muffler/crankcase	10.0	
Screw	M 5x16	Muffler / cylinder	10.0	4)
Nut	M 12x0.75	Switch/handle housing (VW)	6.0	
Screw	M 4x10	Guard/tank housing	1.5	
Nut	M 8x1	Flywheel/crankshaft	33.0	5)
Screw	M 4x8	Side plate/crankcase	3.0	
Nut	M 5	Carburetor/collar stud	3.5	
Screw	M 4x12	Preseparator/crankcase	3.0	1), 4)
Screw	M 5x20	Elbow/handlebar (R)	7.0	4)
Screw	D 4x15	Cover plate/fan housing	3.0	
	M 14x1.25	Spark plug	25.0	
Screw	M 5x20	Ignition module/crankcase	8.0	4)
Screw	M 5x25	Cylinder/crankcase, 1st stage	4.0	4)
Screw	M 5x25	Cylinder/crankcase, 2nd stage	10.0	4)
Screw	P 6x25	Crankcase/bearing plug (R)	5.0	

#### Remarks:

- 1) Loctite 242 or 243, medium strength
- 2) Loctite 649, high strength
- 3) Loctite 270, high strength
- 4) Screws with binding head
- 5) Degrease crankshaft/flywheel and mount oil-free
- VW) Carburetor and handle heating system
- R) Wrap-around handle
- Q) QuickStop Super

Use the following procedure when refitting a DG or P screw in an existing thread:

Place the screw in the hole and rotate it counterclockwise until it drops down slightly.  
Tighten the screw clockwise to the specified torque.

This procedure ensures that the screw engages properly in the existing thread and does not form a new thread and weaken the assembly.

Coat micro-encapsulated screws with medium strength Loctite 242 or 243 before reinstalling.

Power screwdriver setting for polymer: DG and P screws max. 500 rpm  
Do not use an impact wrench for releasing or tightening screws.

Do not mix up screws with and without binding heads.



### 3. Troubleshooting

#### 3.1 Clutch

Condition	Cause	Remedy
Saw chain stops under load at full throttle	Clutch shoes badly worn	Install new clutch
	Clutch drum badly worn	Install new clutch drum
Saw chain rotates at idle speed	Engine idle speed too high	Readjust with idle speed screw <b>LA</b> (counterclockwise)
	Clutch springs stretched or fatigued	Replace the clutch springs or install new clutch
	Clutch spring hooks broken	Replace the clutch springs
Loud noises	Clutch springs stretched or fatigued	Replace all clutch springs
	Needle cage damaged	Fit new needle cage
	Clutch shoe retainer broken	Install new retainer or clutch
	Clutch shoes and carrier worn	Install new clutch

### 3.2 Chain Drive, Chain Brake, Chain Tensioner

Condition	Cause	Remedy
Chain sprocket wears rapidly	Chain not properly tensioned	Tension chain as specified
	Wrong chain pitch	Fit chain of correct pitch
	Insufficient chain lubrication	Check chain lubrication
	Chain sprocket worn	Fit new chain sprocket
Saw chain stops under load at full throttle	Clutch shoes badly worn	Install new clutch
	Clutch drum badly worn	Install new clutch drum
	Brake band blocked	Check freedom of movement and operation of brake band
Saw chain rotates at idle speed	Engine idle speed too high	Readjust with idle speed screw <b>LA</b> (counterclockwise)
	Clutch springs stretched or fatigued	Replace the clutch springs or install new clutch
	Clutch spring hooks broken	Replace the clutch springs
Saw chain does not stop immediately when brake is activated	Brake spring stretched or broken	Fit new brake spring
	Brake band stretched or worn	Fit new brake band
	Clutch drum worn	Install new clutch drum

### 3.3 Chain Lubrication

In the event of trouble with the chain lubrication system, check and rectify other sources of faults before disassembling the oil pump.

Condition	Cause	Remedy
Chain receives no oil	Oil tank empty	Fill up with oil and check setting of oil pump if necessary
	Oil inlet hole in guide bar is blocked	Clean oil inlet hole
	Intake hose or pickup body clogged or intake hose ruptured	Fit new intake hose and pickup body
	Valve in oil tank blocked	Clean or replace valve
	Teeth on worm worn	Install new worm
	Oil pump damaged or worn	Install new oil pump
Machine losing chain oil	Oil pump body damaged	Install new oil pump
	Oil pump damaged or worn	Install new oil pump
	Oil suction hose connection damaged	Install new oil intake hose
Oil pump delivers insufficient oil	Oil pump worn	Install new oil pump
	Oil pump delivery rate set too low	Adjust oil pump (only on version with adjustable oil pump)

### 3.4 Rewind Starter

Condition	Cause	Remedy
Starter rope broken	Rope pulled out too vigorously as far as stop or over edge, i.e. not vertically	Fit new starter rope
	Normal wear	Fit new starter rope
Starter rope does not rewind	Very dirty or corroded	Clean or replace rewind spring
	Insufficient spring tension	Check rewind spring and increase tension
	Rewind spring broken	Fit new rewind spring
Starter rope cannot be pulled out far enough	Spring overtensioned	Check rewind spring and reduce tension
Starter rope can be pulled out almost without resistance (crankshaft does not turn)	Guide peg on pawl or pawl itself is worn	Fit new pawl
	Spring clip on pawl fatigued	Fit new spring clip
Starter rope is difficult to pull or rewinds very slowly	Starter mechanism is very dirty	Thoroughly clean complete starter mechanism
	Lubricating oil on rewind spring becomes viscous at very low outside temperatures (spring windings stick together)	Coat rewind spring with a small amount of standard solvent-based degreasant (containing no chlorinated or halogenated hydrocarbons), then pull rope carefully several times until normal action is restored
	Decompression valve is not open	Open, check and replace decompression valve if necessary

### 3.5 Ignition System

Exercise extreme caution while carrying out maintenance and repair work on the ignition system. The high voltages which occur can cause serious or fatal accidents.

Condition	Cause	Remedy
Engine runs roughly, misfires, temporary loss of power	Spark plug boot is loose	Press boot firmly onto spark plug and fit new spring if necessary
	Spark plug sooted, smeared with oil	Clean the spark plug or replace if necessary. If sooting keeps recurring, check air filter
	Ignition lead loose in ignition module	Secure ignition lead properly
	Fuel/oil mixture – too much oil	Use correct mixture of fuel and oil
	Incorrect air gap between ignition module and flywheel	Set air gap correctly
	Flywheel cracked or damaged or pole shoes have turned blue	Install new flywheel
	Ignition timing wrong, flywheel out of adjustment, key in flywheel has sheared off	Fit key if necessary and secure flywheel properly or install new flywheel
	Weak magnetization in flywheel	Install new flywheel
Irregular spark		Check operation of switch shaft/contact springs and ignition module. Faulty insulation or break in ignition lead or short circuit wire. Check ignition lead/ignition module and replace ignition module if necessary. Check operation of spark plug. Clean the spark plug or replace if necessary.
	Crankcase damaged (cracks)	Install new crankcase

### 3.6 Carburetor

Condition	Cause	Remedy
Carburetor floods; engine stalls	Inlet needle not sealing – foreign matter in valve seat or cone	Remove and clean the inlet needle, clean the carburetor
	Inlet needle worn	Replace the inlet needle
	Inlet control lever sticking on spindle	Check the inlet control lever and replace if necessary.
	Helical spring not located on nipple of inlet control lever	Remove the inlet control lever and refit it correctly
	Perforated disc on diaphragm is deformed and presses constantly against the inlet control lever	Fit a new metering diaphragm
	Metered diaphragm deformed	Fit a new metering diaphragm
Poor acceleration	Setting of low speed screw too lean	Check basic carburetor setting, correct if necessary
	Setting of high speed screw too lean	Check basic carburetor setting, correct if necessary
	Inlet needle sticking to valve seat	Remove inlet needle, clean and refit
	Diaphragm gasket leaking	Fit new diaphragm gasket
	Metering diaphragm damaged or shrunk	Fit a new metering diaphragm
	Tank vent faulty	Replace tank vent
	Leak on fuel hose from tank to carburetor	Seal connections or install new fuel hose

Condition	Cause	Remedy
Engine will not idle, idle speed too high	Throttle shutter opened too wide by idle speed screw <b>LA</b>	Reset idle speed screw <b>LA</b> correctly
	Oil seals/crankcase leaking	Seal or replace oil seals/crankcase
	Throttle shutter does not close	Replace throttle shutter and shaft.
	Choke shutter does not close	Replace end cover with choke shutter.
Engine stops while idling	Idle jet bores or ports blocked	Clean the carburetor
	Low speed screw too rich or too lean	Reset low speed screw <b>L</b> correctly
	Setting of idle speed screw <b>LA</b> incorrect – throttle shutter completely closed	Reset idle speed screw <b>LA</b> correctly
	Tank vent faulty	Replace tank vent
	Leak on fuel hose from tank to carburetor	Seal connections or install new fuel hose
Saw chain rotates at idle speed	Engine idle speed too high	Readjust with idle speed screw <b>LA</b> (counterclockwise)
	Clutch springs stretched or fatigued	Replace the clutch springs or install new clutch
	Clutch spring hooks broken	Replace the clutch springs

Condition	Cause	Remedy
Engine speed drops quickly under load – low power	Air filter dirty	Clean air filter or replace if necessary
	Throttle shutter not opened fully	Check throttle cable and rod
	Tank vent faulty	Replace tank vent
	Fuel pickup body dirty	Install new pickup body
	Fuel strainer dirty	Clean fuel strainer in carburetor, replace if necessary
	Leak on fuel hose from tank to carburetor	Seal connections or install new fuel hose
	Setting of high speed screw <b>H</b> too rich	Check basic carburetor setting, correct if necessary
	Main jet bores or ports blocked	Clean the carburetor
	Pump diaphragm damaged or fatigued	Fit new pump diaphragm
	Ignition timing wrong, flywheel out of adjustment, key in flywheel is missing or has sheared off	Fit key if necessary and secure flywheel properly or install new flywheel
Engine running extremely rich, has no power and a very low maximum speed	Choke shutter does not open	Check the carburetor and service or replace if necessary.
Engine running too rich, loss of power and maximum speed too low	Choke shutter does not open fully in full throttle position	Check the carburetor and service or replace if necessary.
Erratic idle – too lean	Choke shutter does not close completely	Check the end cover with choke shutter and replace if necessary
	Anti-vibration elements worn	Replace anti-vibration elements on carburetor.



### 3.7 Engine


Always check and, if necessary, repair the following parts before looking for faults on the engine:

- Air filter
- Fuel system
- Carburetor
- Ignition system


Condition	Cause	Remedy
Engine does not start easily, stalls at idle speed, but operates normally at full throttle	Oil seals in crankcase damaged	Replace the oil seals
	Crankcase leaking or damaged (cracks)	Seal or replace the crankcase
Engine does not deliver full power or runs erratically	Piston rings worn or broken	Fit new piston rings
	Muffler / spark arresting screen carbonized	Clean the muffler (inlet and exhaust), replace spark arresting screen, replace muffler if necessary
	Air filter dirty	Replace air filter
	Fuel/impulse hose severely kinked or damaged	Fit new hoses or position them free from kinks
	Decompression valve is not closed	Close, check and replace decompression valve if necessary
Engine overheating	Insufficient cylinder cooling. Air inlets in fan housing blocked or cooling fins on cylinder very dirty	Thoroughly clean all cooling air openings and the cylinder fins

## 4. Clutch


- Troubleshooting, 3
- Remove the clutch drum, 4.1
- Remove the shroud, 6.4.

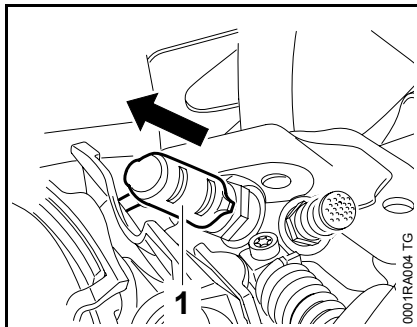


- Pull boot (1) off the spark plug.
- Unscrew the spark plug.

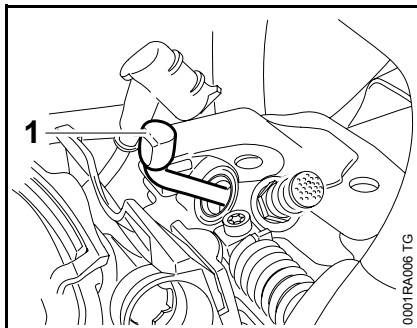

- Push the locking strip (1) 0000 893 5903 into the spark plug hole, wide end first, so that "OBEN-TOP" faces up.

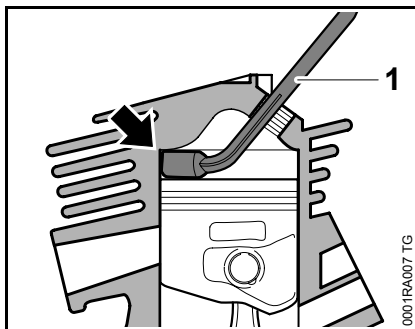


- The locking strip (1) 0000 893 5903 must butt against the cylinder wall (arrow) as shown.

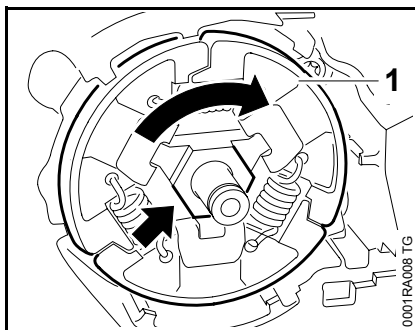


- Apply wrench to hexagon (arrow) and unscrew the clutch (1).

Note that the clutch has a left-hand thread.


### Disassembling

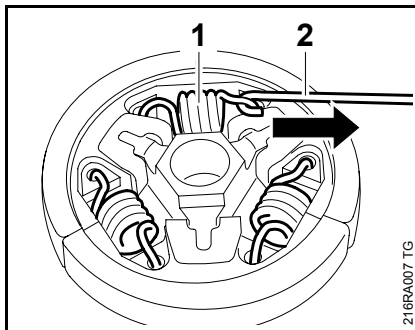

- Use hook (2) 5910 890 2800 to remove the clutch springs (1).

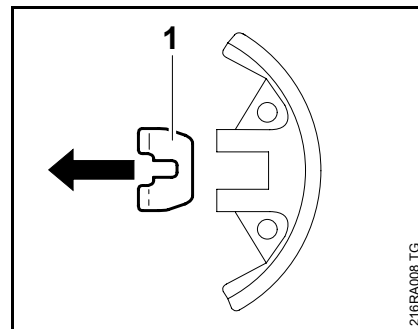


- Pull the clutch shoes off the carrier.
- Remove the retainers (1).

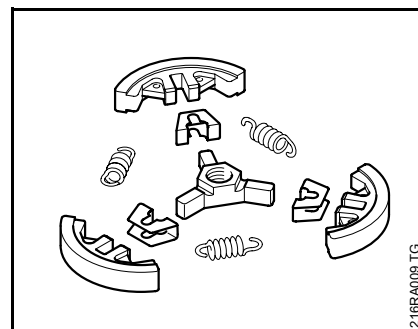


- Clean all parts.
- Replace any damaged parts.


If the clutch is noticeably worn, replace all three clutch shoes at the same time – not individual shoes – since runout may otherwise affect correct operation of the clutch.

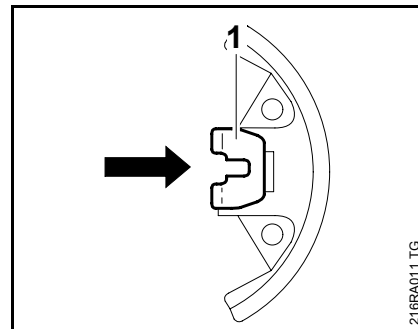


- Fit the retainers (1).

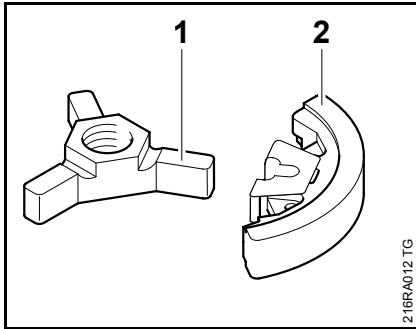

- Fit the clutch shoes (2) over the arms (2).

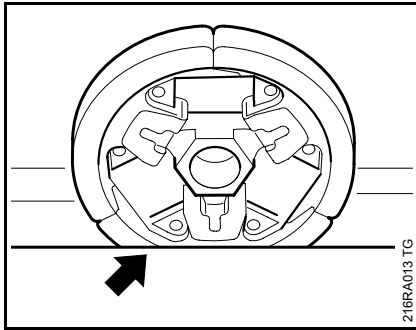


- Clamp the clutch in a vise (arrow).

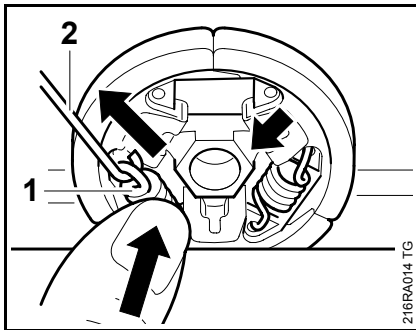


Attach the springs on the side with the raised hexagon (arrow).

- Attach one end of each spring (1) to the clutch shoes.
- Use the hook (2) 5910 890 2800 to attach the other ends of the springs and press them firmly into the clutch shoes.

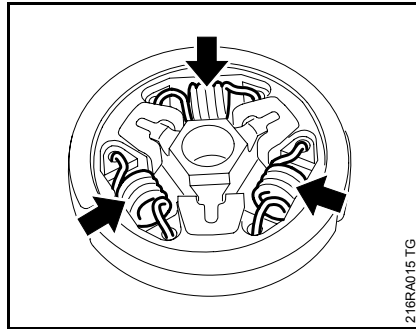


- Check the clutch – all springs (arrows) must be properly attached.

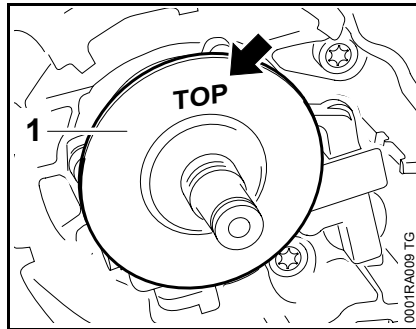


Make sure washer (1) is in place.

Installed position is correct when "TOP" (arrow) faces outwards.

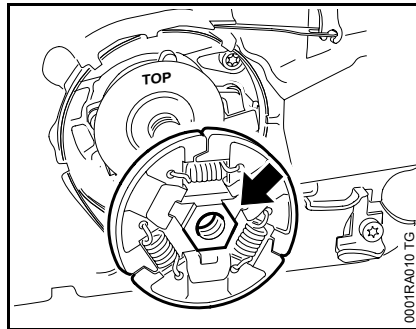

- Position the clutch on the crankshaft stub so that the raised hexagon (arrow) faces outwards.

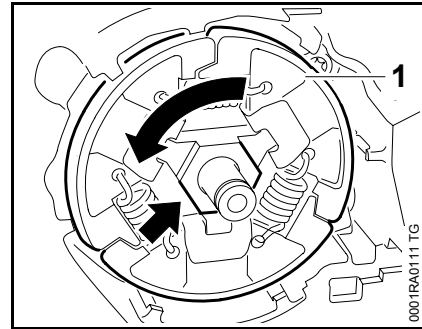


- Screw the clutch (1) on to the crankshaft stub and tighten down the hexagon (arrow) firmly – left-hand thread.


- Tightening torques, 2.5
- Remove the locking strip from the cylinder.
- Reassemble all other parts in the reverse sequence.

#### 4.1 Clutch Drum

- Remove and install the clutch drum, see instruction manual.

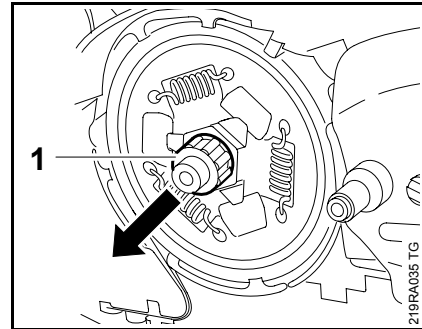

- Pull off the needle cage (1).
- Clean the needle cage and crankshaft stub, 15
- Lubricate the needle cage and crankshaft stub, 15

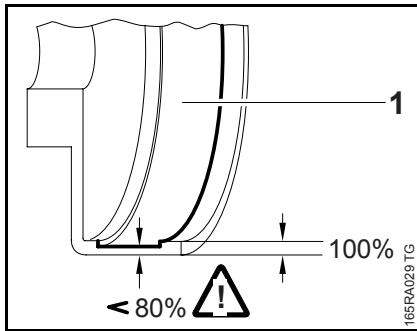

- Inspect the clutch drum (1) for signs of wear.

If there are signs of serious wear on the inside diameter of the clutch drum (1), check the remaining wall thickness. If it is less than about 80% of the original thickness, install a new clutch drum.

- Install the clutch drum.

## 5. Chain Brake

### 5.1 Checking Operation

The chain brake is one of the most important safety devices on the chain saw. Its efficiency is measured in terms of the chain braking time, i.e. the time that elapses between activating the brake and the saw chain coming to a complete standstill.


Contamination (with chain oil, chips, fine particles of abrasion, etc.) and smoothing of the friction surfaces of the brake band and clutch drum impair the coefficient of friction, which prolongs the braking time. A fatigued or stretched brake spring has the same negative effect.

- Start the engine.
- With the chain brake activated (locked), open the throttle wide for a brief period (max. 3 seconds) – the chain must not rotate.
- With the chain brake released, open the throttle wide and activate the brake manually – the chain must come to an abrupt stop.


#### Machines with QuickStop Super


With the chain brake released, open the throttle wide and release the interlock lever on the rear handle – the chain must come to an abrupt stop.


The braking time is in order if deceleration of the saw chain (less than a second) is imperceptible to the eye.

If the chain brake does not operate properly, refer to troubleshooting,  3.2.

### 5.2 Brake Band


- Remove the clutch drum,  4.1

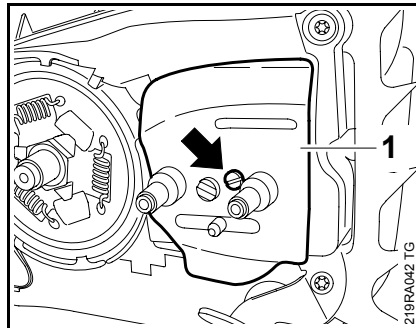


- Troubleshooting,  3.2

- Take out the screw (arrow) and remove the side plate (1).


#### Machines with Quick Chain Tensioner

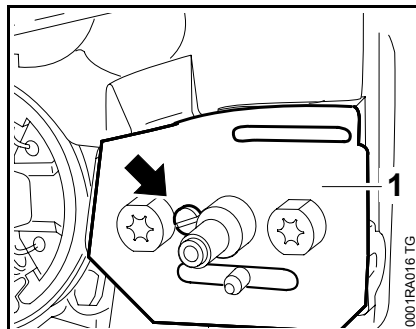

- Take out the screw (arrow) and remove the side plate (1).

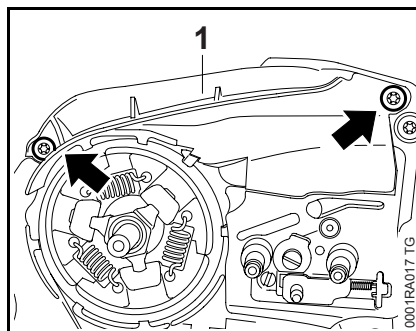


- Take out the screws (arrows).
- Remove the cover (1).

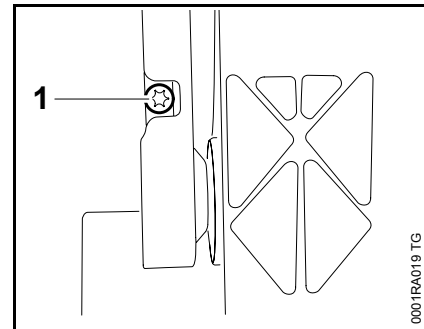

- Engage the chain brake.

The brake band is now tensioned.

- Remove the screw (1) from the underside of the machine.

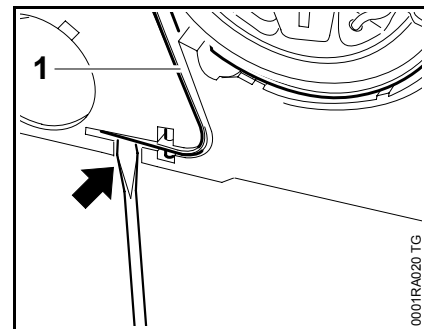


- Pry the brake band (1) out of its seat (arrow).


- Remove the brake band (1).

Do not overstretch the brake band.

- Pull the hand guard towards the handlebar to simplify assembly of the brake band.

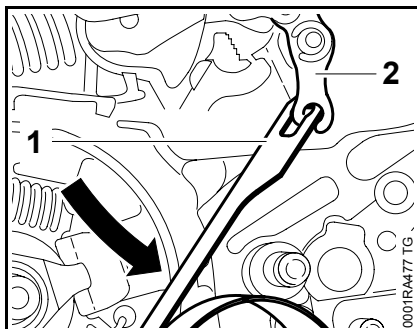


- Turn the brake band (1) to one side and disconnect it from the brake lever (2).

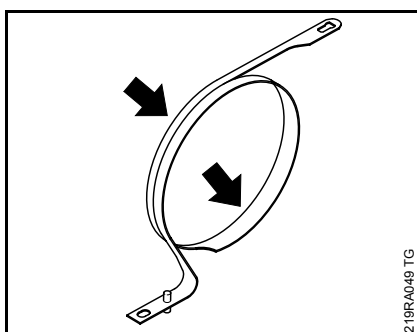


Install a new brake band if there are noticeable signs of wear (large areas on inside diameter and/or parts of outside diameter – arrows) and its remaining thickness is less than 0.6 mm.

### Installing

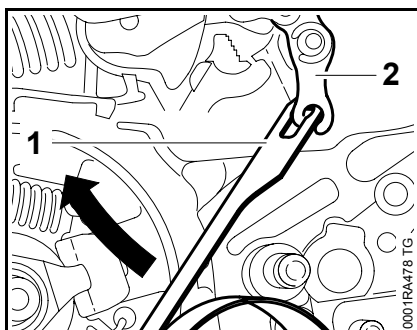


- Hold the brake band (1) sideways, attach it to the brake lever (2) and then swing it in the direction of its seat.

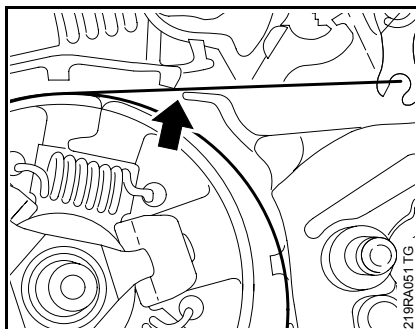


- Position the brake band (1) on the guide (arrow) first.


– Disengage the chain brake.

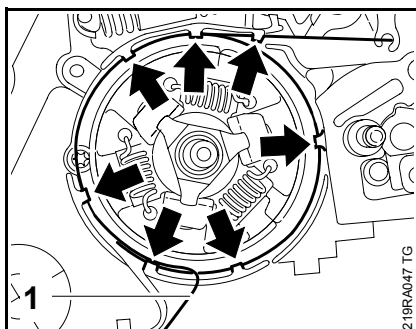


- Push the brake band (1) over the guide lugs (arrows) and into its seat.

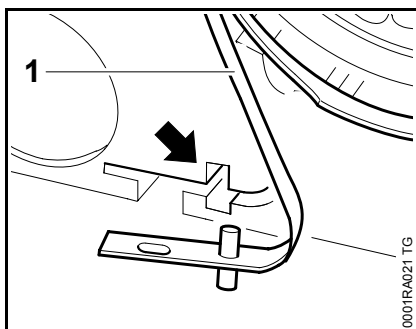

- Push the brake band (1) into its seat (arrow) as far as stop.

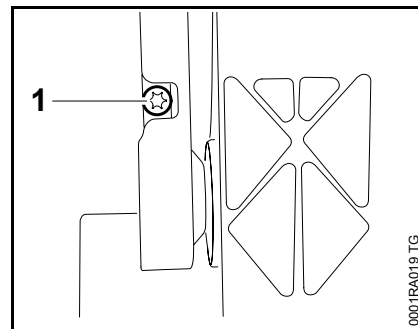


- Fit the screw (1) on the underside of the machine and tighten it down firmly.

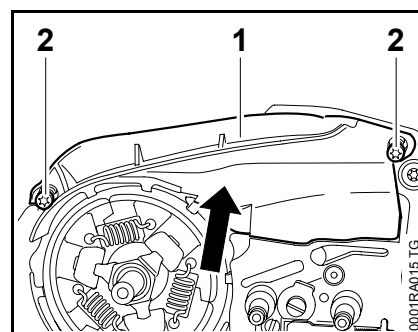

- Place the cover (1) in position.
- Fit and tighten down the screws (2) firmly.
- Tightening torques, [2.5](#)
- Install the clutch drum, [4.1](#)
- Check operation, [5.1](#)
- Reassemble all other parts in the reverse sequence.


### 5.3 Brake Lever

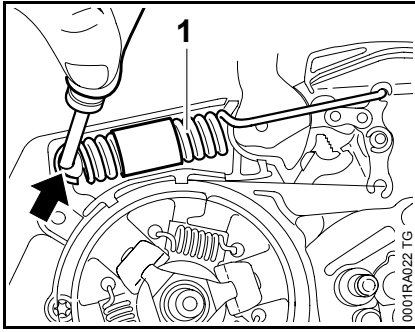


- Troubleshooting, 3.2
- Remove the brake band, 5.2
- Engage the chain brake.

The brake spring is now relaxed.


- Use the assembly tool 1117 890 0900 to disconnect the brake spring (1) from the anchor pin (arrow).
- Remove the brake spring from the brake lever.

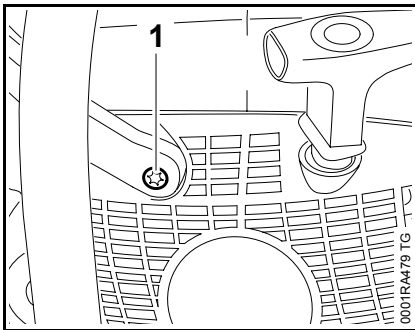


- Take out the screw (1).

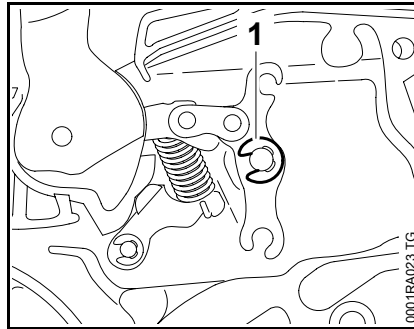

- Remove the E-clip (1).

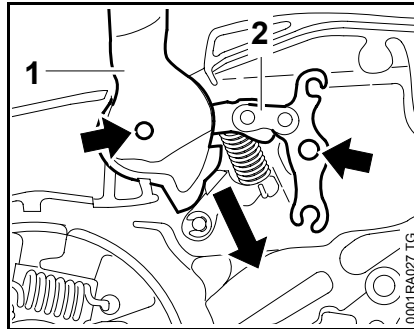


- Pull the hand guard (1) and brake lever (2) off the pivot pins (arrows) together.
- Remove the hand guard and brake lever.

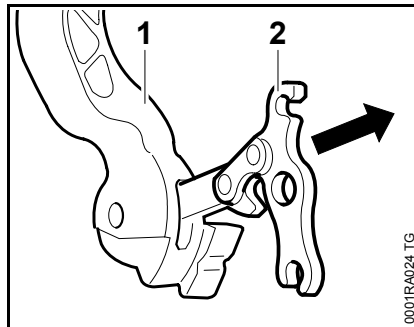


- Take the brake lever (2) out of the hand guard (1).

- Inspect the brake lever and hand guard and replace if necessary.
- Inspect the pivot pins and replace if necessary, 5.6
- Inspect the cam lever and replace if necessary, 5.5


#### Installing

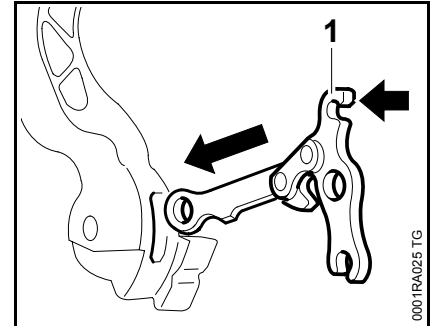


- Clean all disassembled parts with a little standard commercial solvent-based degreasant containing no chlorinated or halogenated hydrocarbons.
- Hold the brake lever (1) so that the brake spring attachment point (arrow) is at the top.
- Push the brake lever (1) into the hand guard recess and line up the holes.

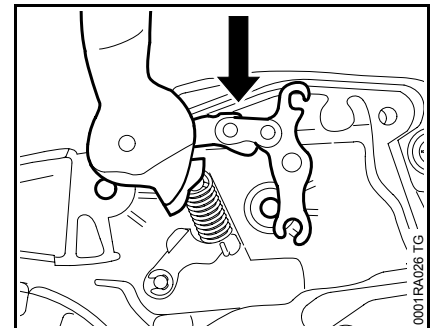


- Push the hand guard with brake lever over the machine until they are positioned against the pivot pins.

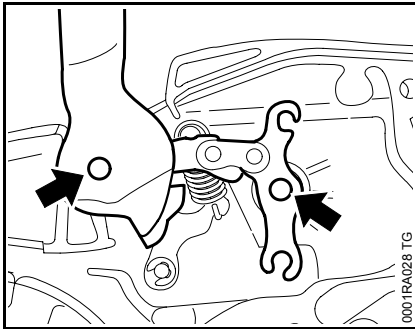


- Lift the bearing boss of the hand guard and the brake lever a little and position them over the pivot pins (arrows).

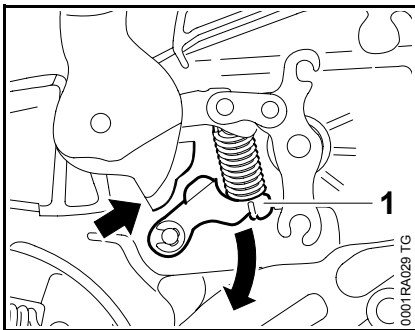

- Turn the cam lever (1) to one side until the cam of the hand guard (arrow) slips past it.
- Push the hand guard bearing boss and the brake lever on to the pivot pins.

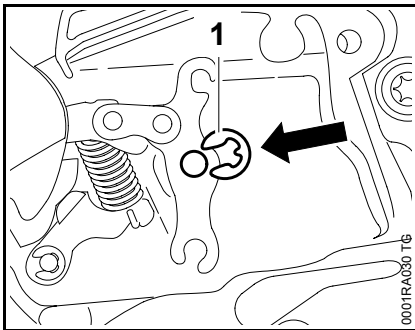


- Fit the E-clip (1).

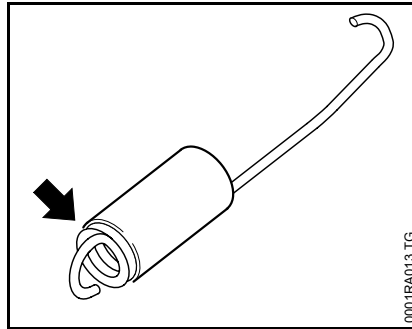


The turns of brake spring must be tightly against one another in the relaxed condition. If this is not the case, replace the brake spring.

- Position the protective tube so that it leaves the first turn (arrow) free.
- If the groove in the spring's anchor pin is worn, install a new pin, [5.6](#)

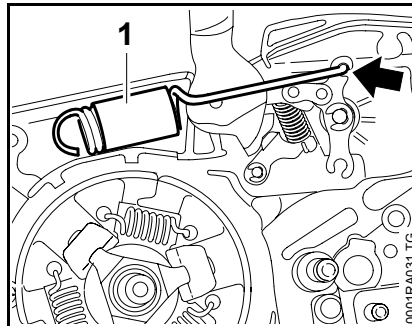


- Hook the brake spring (1) to the brake lever (arrow).

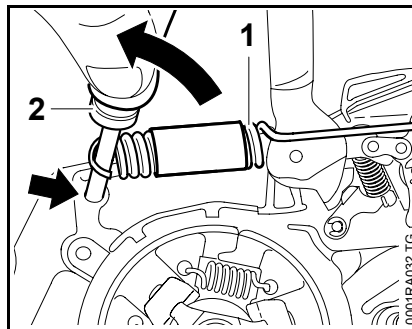

- Use the assembly tool (2) 1117 890 0900 to attach the brake spring (1) to the anchor pin (arrow).

- Reassemble all other parts in the reverse sequence.
- Tightening torques, [2.5](#)
- Lubricate the brake lever, [15](#)

#### 5.4 Brake Lever on Machines with QuickStop Super

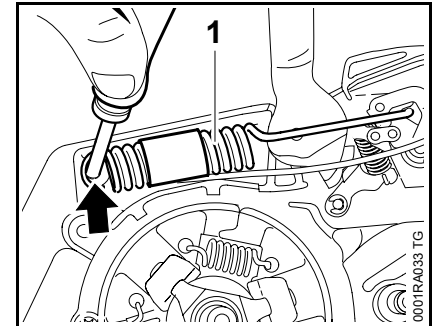


- Troubleshooting, [3.2](#)
- Remove the brake band, [5.2](#)
- Engage the chain brake.


The brake spring is now relaxed.

- Use the assembly tool 1117 890 0900 to disconnect the brake spring (1) from the anchor pin (arrow).
- Remove the brake spring from the brake lever.




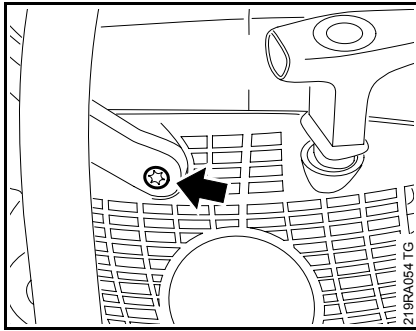


- Take out the screw (arrow).

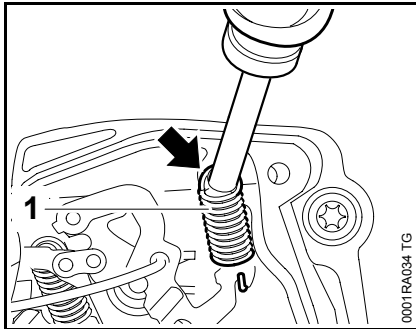


- Use the assembly tool 1117 890 0900 to disconnect the brake spring (1) from the anchor pin (arrow).
- Remove the brake spring (1) from the brake lever.

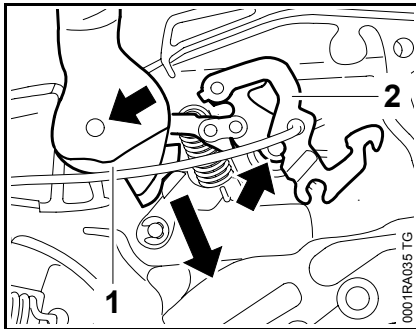

- Pull the hand guard (1) and brake lever (2) off the pivot pins (arrows) together.
- Remove the hand guard and brake lever.

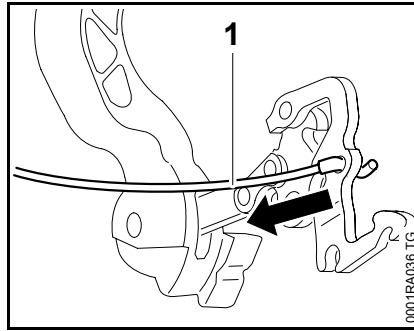


- Disconnect the brake cable (1).

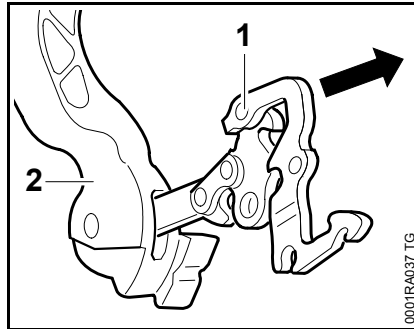

- Take the brake lever (1) out of the hand guard (2).
- Inspect the brake lever and hand guard and replace if necessary.


## Installing

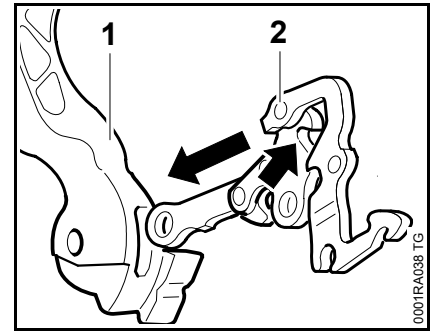


- Inspect the pivot pins and replace if necessary, 5.6
- Inspect the cam lever and replace if necessary, 5.5

- Clean all disassembled parts with a little standard commercial solvent-based degreasant containing no chlorinated or halogenated hydrocarbons.


- Hold the brake lever (2) so that the brake spring attachment point (arrow) is at the top.
- Push the brake lever (2) into the recess in the hand guard (1) and line up the holes.

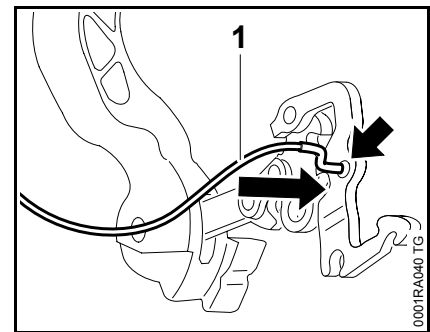


- Fit the brake cable (1) in the hole (arrow).

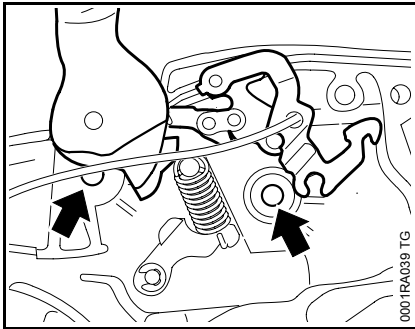


- Push the hand guard with brake lever over the machine until they are positioned against the pivot pins.

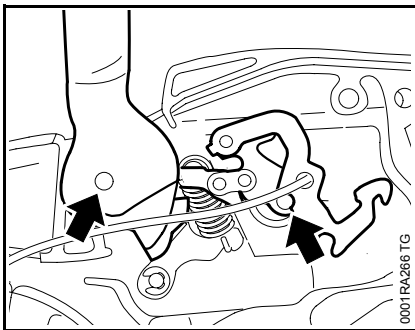

- Lift the bearing boss of the hand guard and the brake lever a little and position them over the pivot pins (arrows).

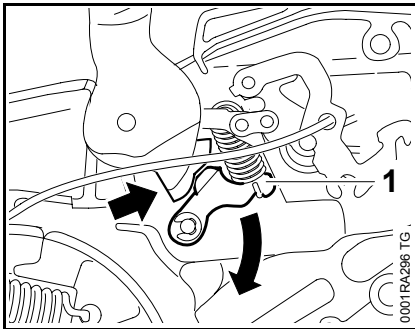

- Turn the cam lever (1) to one side until the cam of the hand guard (arrow) slips passed it.
- Push the hand guard bearing boss and the brake lever on to the pivot pins.

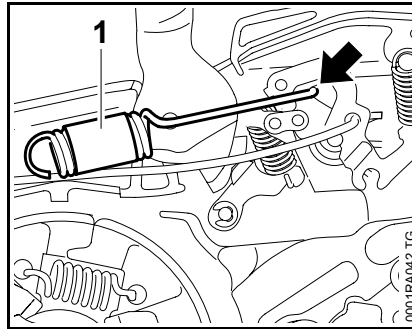


- Attach the spring (1) to the brake lever (arrow).

The installation procedure is now the same as for the brake without QuickStop Super, 5.3


#### 5.4.1 Adjusting the Brake Cable

If problems occur on the chain brake even though the brake band is in order, the reason may be the adjustment of the brake cable.


- Troubleshooting, 3.2
- Remove the chain brake cover, 5.2

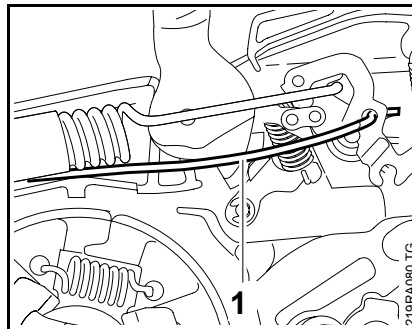


The brake cable (1) must be relaxed when the interlock lever is released.

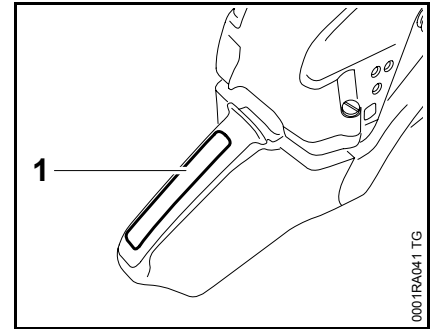

- Disengage the chain brake.
- Press down the interlock lever (1) and hold it in that position.

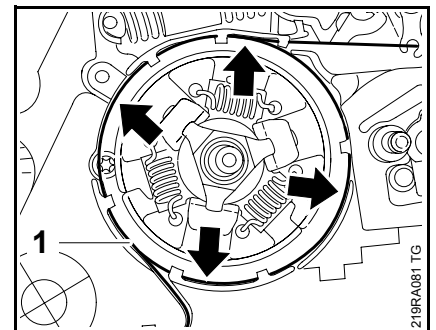

The brake band (1) must locate against the crankcase (arrows) without any play.

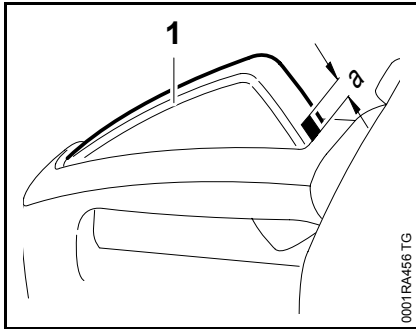


- Release the interlock lever (1).
- Carefully press the interlock lever (1) to check free travel.
- Free travel must be within the mark (a).

Free travel means that the interlock lever (1) can be moved without the brake lever moving.


A certain free travel is necessary to guarantee correct operation of the chain brake.

If there is too much free travel, it must be adjusted.


- Remove the throttle rod, 10.3.4
- Fit the handle molding, 10.3

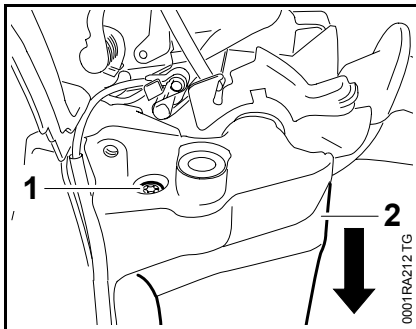

- Take out the screw (1).
- Lower the tank housing (2).

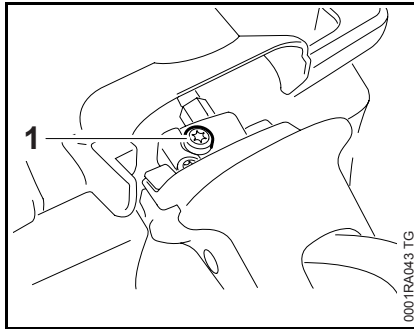


- Loosen the clamp screw (1).

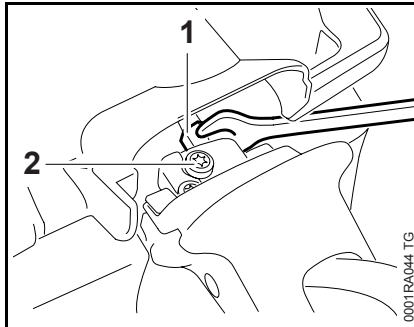


- Use open end wrench the set free travel on the adjusting screw (1).
- Turn the adjusting screw counterclockwise to increase free travel.
- Turn the adjusting screw clockwise to reduce free travel.
- When the setting is correct, tighten down the clamp screw (2) firmly.
- Install the throttle rod, 10.3.4
- Fit the handle molding, 10.3
- Reassemble all other parts in the reverse sequence.
- Tightening torques, 2.5

## 5.4.2 Brake Cable


- Disconnect the brake spring, 5.3
- Remove the carburetor, 12.5
- Remove the throttle trigger, 10.3
- Remove the switch lever, 10.3.1

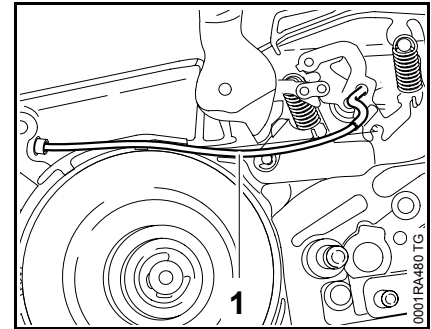

- Pull out the brake cable (1) a little and disconnect it.

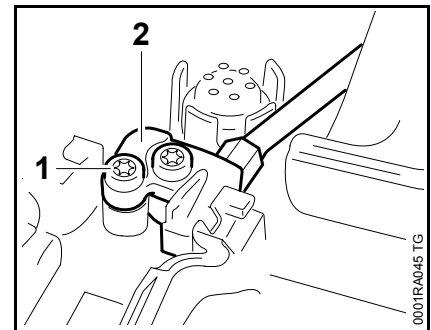


- Take out the screw (1).
- Remove the brake cable retainer (2) with brake cable.
- Pull the brake cable out of the crankcase.

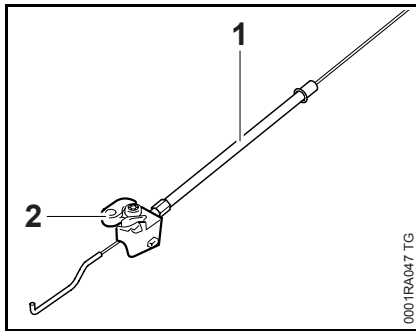


- Check the brake cable (1) and retainer (2), replace if necessary

### Disassembling the brake cable and retainer

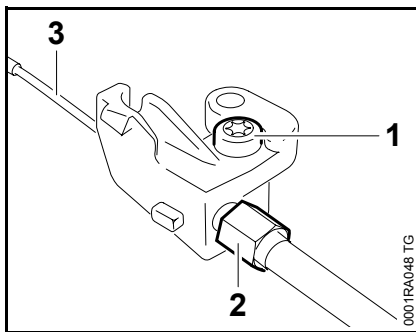


- Loosen the clamp screw (1) and take out the adjusting screw (2).
- Pull out the brake cable (3) and replace the retainer.


### Installing

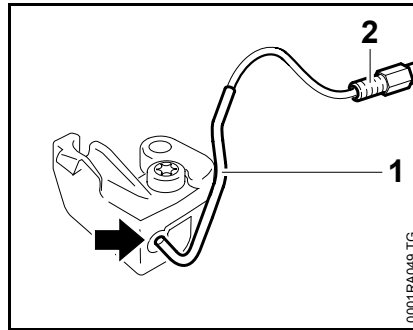


- Push the long hook (1) of the brake cable into the hole (arrow) and screw home the adjusting screw (2) as far as stop.

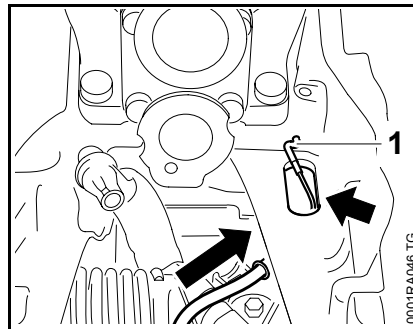


- Push the short hook of the brake cable (1) up through the slot (arrow) from below.

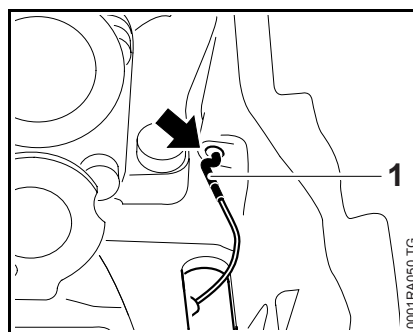


- Push the short hook (1) through the hole (arrow).

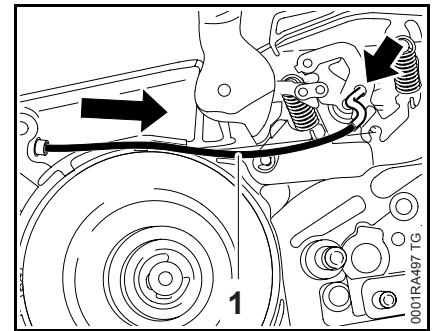


- Push the brake cable (1) into the bore (arrow) in the brake lever.

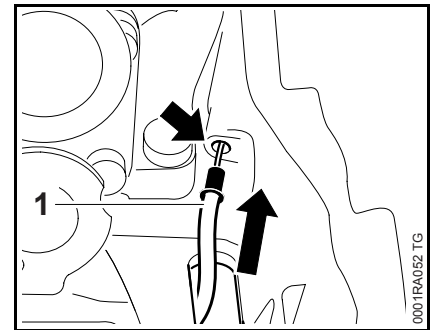

- Push the brake cable grommet (1) into the housing bore (arrow) until it is properly seated.

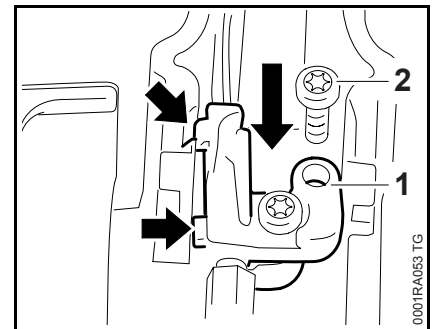

- Push the lugs of the brake cable retainer (1) into the seats (arrows) as far as stop.
- Insert and tighten down the screw (2) firmly.

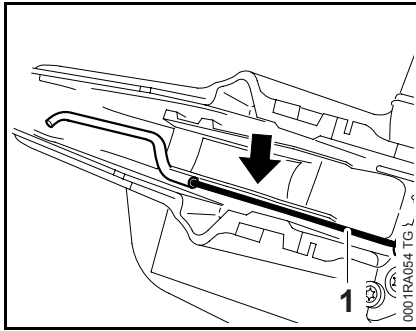


- Place the brake cable (1) in the guide (arrow).
- Install the switch lever, [10.3.1](#)
- Check operation and adjust the brake cable, [5.4.1](#)
- Reassemble all other parts in the reverse sequence.


## 5.5 Cam Lever

The cam lever defines the locked position of the hand guard.

- Remove the brake lever, [5.3](#)

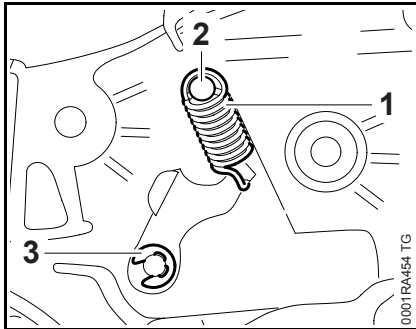


- Disconnect the spring (1) from the anchor pin (2).
- Remove the E-clip (3).
- Pull off the cam lever.

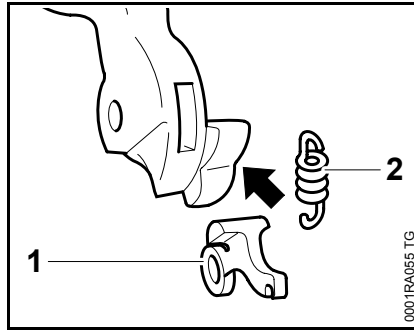


- Check the cam lever (1) and spring (2) and replace if necessary.
- Check the condition of the cam contour (arrow) and replace the hand guard if necessary.


### Installing

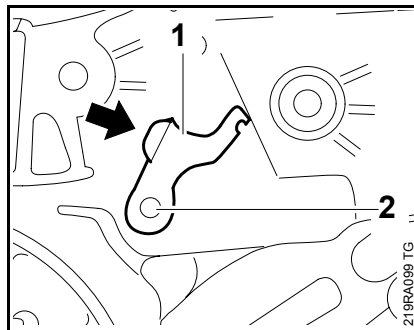

- Position the cam lever (1) so that its cam (arrow) faces the cam on the hand guard.
- Push the cam lever (1) onto the pivot pin (2).

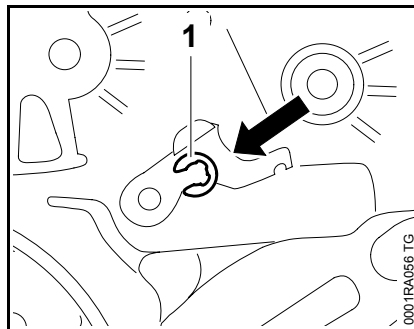

- Fit the E-clip (1).

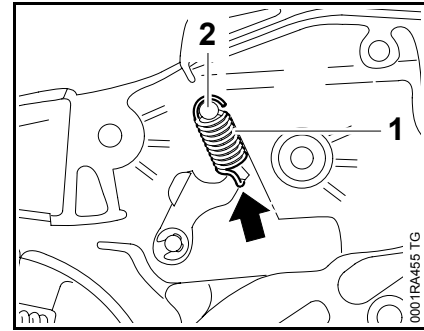

- Attach the spring (1) to the cam lever so that the open side of the spring hook (arrow) points toward the housing.

If the groove in the spring's anchor pin is worn, install a new pin, [5.6](#)

- Attach the spring (1) to the anchor pin (2).

The cam lever is not yet under tension – the spring may become detached.


- Reassemble all other parts in the reverse sequence.
- Tightening torques, [2.5](#)
- Lubricate the cam lever, [15](#)

## 5.6 Pins

The anchor pins secure the springs. Worn pins must be replaced.  
– The springs may otherwise become detached and pop out.

The pins must be driven home squarely.


For greater clarity, all parts have been removed from the pins in the following illustrations.

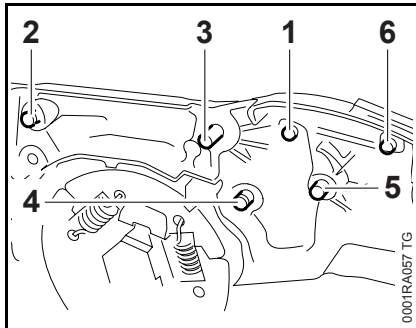


- Use suitable tool to remove the pins (1 - 6).

Pin 6 is fitted only on machines with QuickStop Super.

## Installing

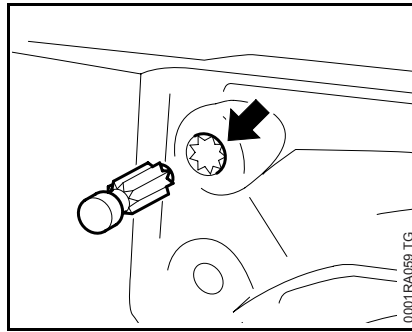


- Before installing the new pin, coat its knurled shank with threadlocking adhesive,  15


- Position the new pin in the bore (arrow) so that the knurling on the pin meshes with the existing knurling in the bore.

Turn pin back and forth as necessary.


The pins must be driven home squarely.

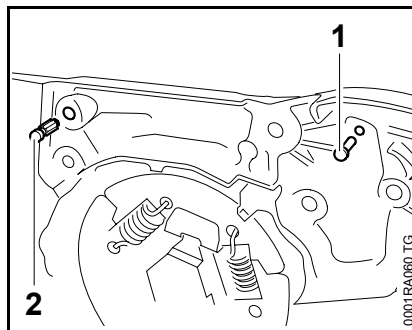


- Drive home the pins (1 and 2) as shown in the illustrations.

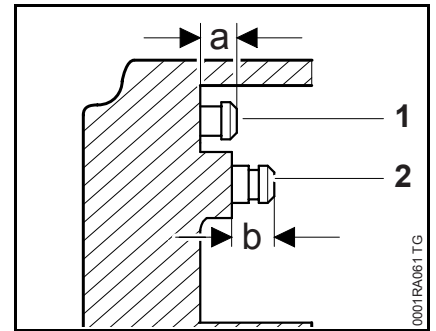

- Pin (1) a = about 2.9...3.3 mm  
Pin (2) b = about 4.3...4.7 mm

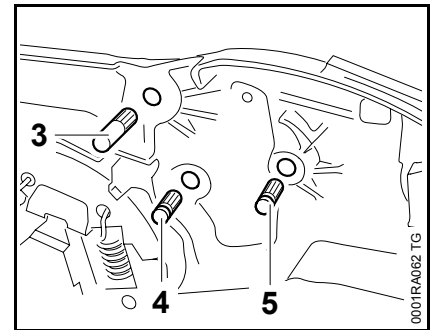


- Drive home pins (3, 4 and 5) as specified below.

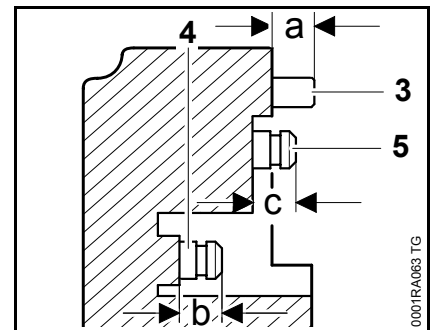


- Pin (3) a = about 9.6...9.8 mm  
Pin (4) b = about 4.6...4.8 mm  
Pin (5) c = about 5.1...5.3 mm

## Machines with QuickStop Super

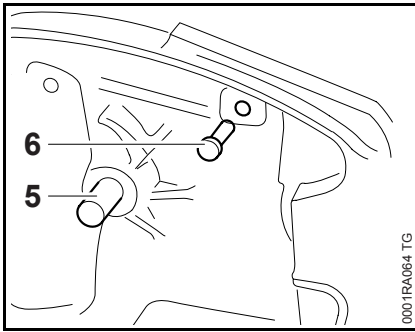


- Drive home the pins (5 and 6) as specified below.

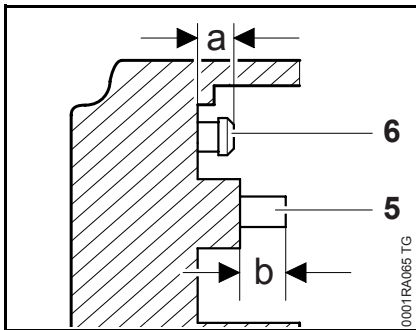

- Pin (5)  $c = \text{about } 5.9...6.1 \text{ mm}$   
Pin (6)  $c = \text{about } 2.9...3.3 \text{ mm}$
- Reassemble all other parts in the reverse sequence.
- Tightening torques, 2.5
- Lubricate the brake and cam levers, 15


## 5.7 Chain Tensioner

- Troubleshooting, 3.2

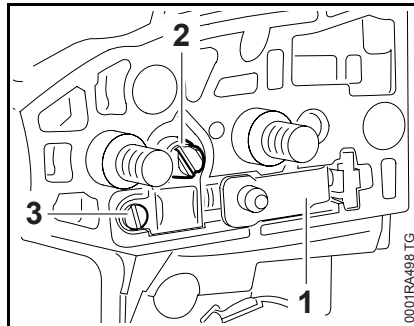


- Remove the side plate, 5.2


- Turn the spur gear (2) clockwise until the tensioner slide (1) butts against the right-hand end and the screw (3) is visible.

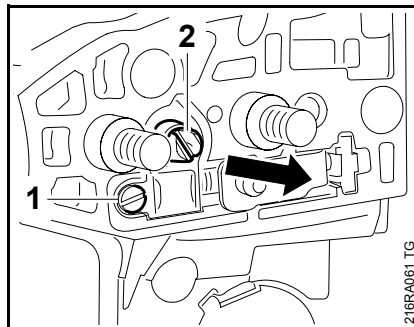


- Take out the screw (1).
- Pull out the cover plate (2) with spur gear and support.
- If necessary, remove the O-ring.

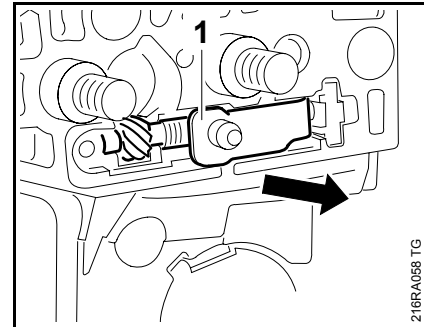


- Take out the tensioner slide (1) with adjusting screw.

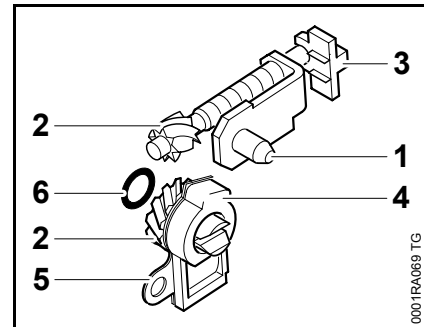


- Inspect the thrust pad (3), support (4), tensioner slide (1), cover plate (5), spur gear set (2) and O-ring (6) and replace as necessary.

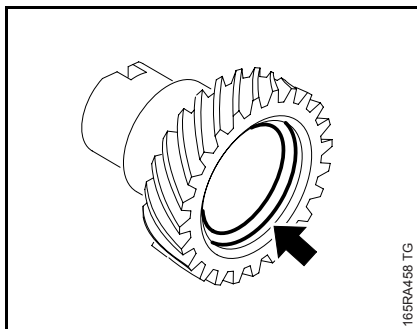


- Fit the O-ring in the spur gear recess (arrow).
- Clean all disassembled parts with a little standard commercial solvent-based degreasant containing no chlorinated or halogenated hydrocarbons.
- Lubricate the threads, gears and O-ring with STIHL multipurpose grease,  15
- Reassemble in the reverse sequence.

### 5.7.1 Quick Chain Tensioner


The quick chain tensioner is installed in the sprocket cover.

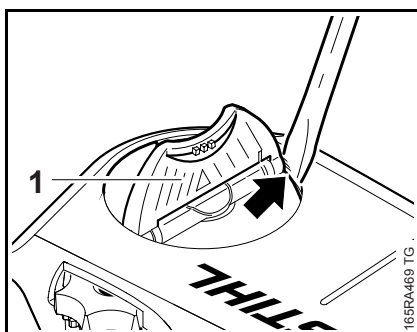

- Carefully pry the wing nut (1) out of the sprocket cover (arrow).
- Check the wing nut (1) and replace if necessary

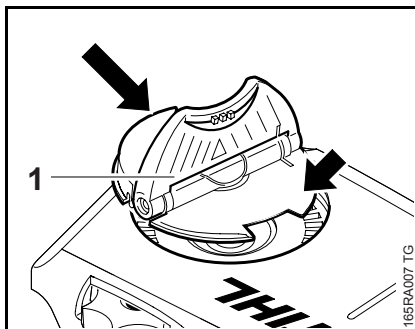

- Swing the wing nut (1) upright.
- Push the wing nut (1), thin side first (see arrow), into the opening and press it down until it snaps into position.

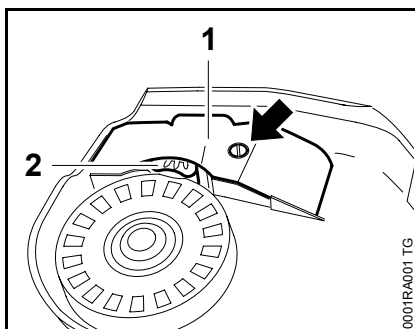



- Take out the screw (arrow).
- Remove the cover plate (1) and adjusting wheel (2).


When installing the adjusting wheel, make sure its teeth face the cover plate.



- Reassemble in the reverse sequence.
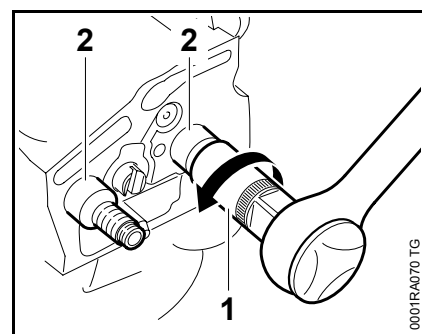
## 5.8 Bar Mounting Studs

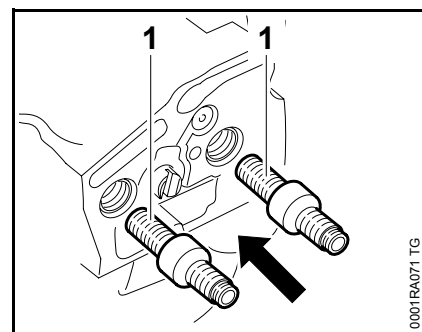


- Remove the side plate,  5.2
- Push stud puller 5910 893 0506 (1) over the collar studs (2) as far as it will go and unscrew the studs (2) counterclockwise.




- Before installing, coat the threads (1) of the collar studs with Loctite,  15
- Fit the collar studs and tighten them down firmly.
- Tightening torques,  2.5
- Reassemble all other parts in the reverse sequence.



## Machines with quick chain tensioner

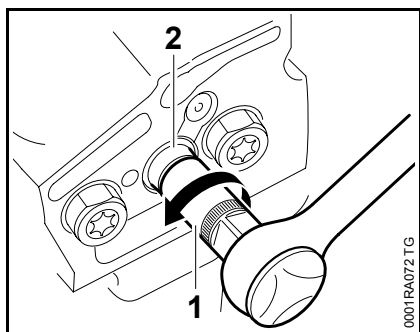

- Remove the side plate, 5.2
- Push stud puller (1) 5910 893 0506 over the collar stud as far as it will go and unscrew the stud (2) counterclockwise.

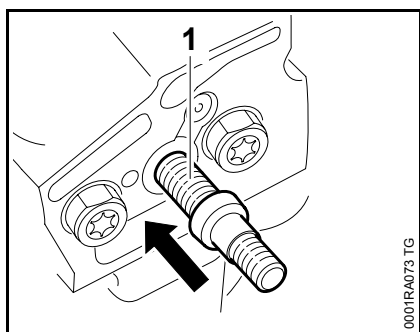



- Before installing, coat the thread (1) of the collar stud with Loctite, 15
- Fit collar stud and tighten it down firmly.
- Tightening torques, 2.5
- Reassemble all other parts in the reverse sequence.


## 6. Engine

### 6.1 Muffler


Always check and, if necessary, repair the fuel system, carburetor, air filter and ignition system before looking for faults on the engine.

- Troubleshooting,  3
- Remove the shroud,  6.4


Before removing the muffler, set the piston to top dead center to ensure that no dirt falls into the cylinder.

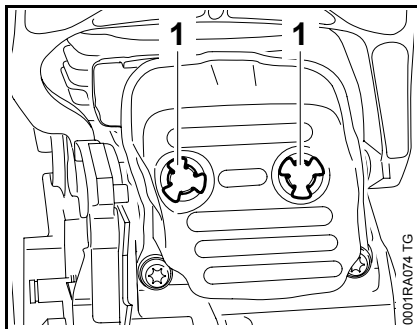

- Pry out the plug (1).
  - Do not refit old plugs, always fit new ones.

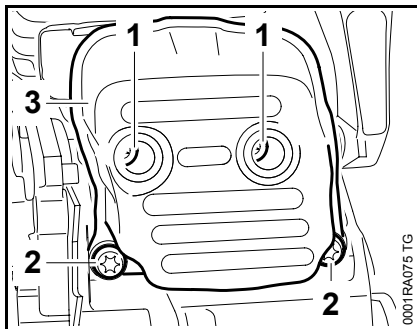


- Take out the screws (1) and (2).
- Remove the muffler (3), check and replace if necessary.

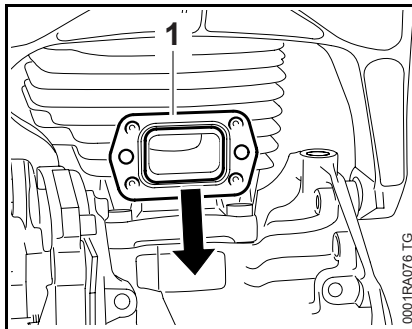


- Remove the exhaust gasket (1).
- Remove and install the spark arresting screen – see instruction manual.

#### Installing

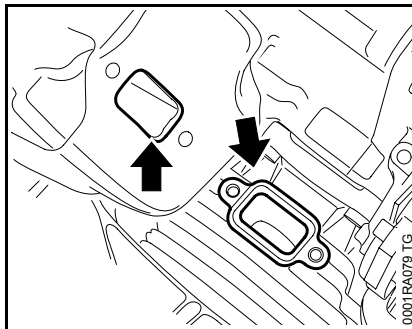


- Hold the machine upright.
- Inspect and clean the sealing faces (arrows) and remove any gasket residue.


Always replace components with damaged sealing faces.

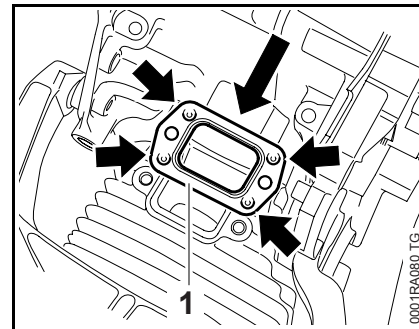

- Position the exhaust gasket (1) so that the warts (arrows) point towards the cylinder.
- Fit the exhaust gasket (1) and line it up with the warts (arrows) against the cylinder exhaust port.

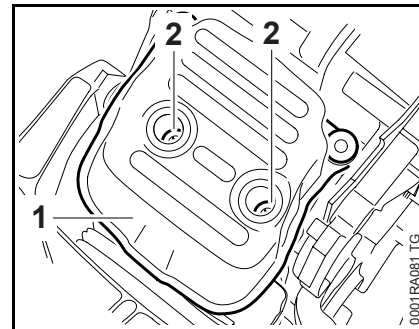

- Carefully place the muffler (1) in position.
- Check the position of the gasket and fit the screws (2).
- Do not tighten down the screws (2) yet.

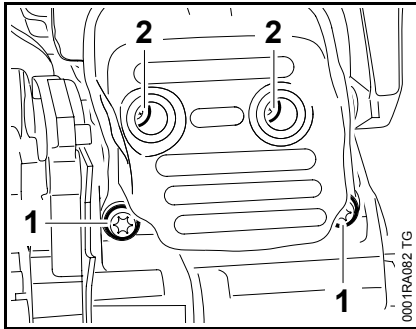

- Fit and tighten down the screws (1) firmly.
- Tighten down the screws (2) firmly.
- Fit new plugs.
- Tightening torques, 2.5

## 6.2 Leakage Test

Defective oil seals and gaskets or cracks in castings are the usual causes of leaks. Such faults allow supplementary air to enter the engine and upset the fuel-air mixture.


This makes adjustment of the prescribed idle speed difficult, if not impossible.

Moreover, the transition from idle speed to part or full throttle is not smooth.


Always perform the vacuum test first and then the pressure test.

The engine can be checked thoroughly for leaks with the pump 0000 850 1300.


### 6.2.1 Preparations

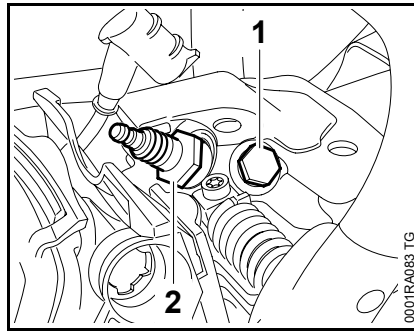

- Remove the shroud, 6.4
- Pull off the boot and unscrew the spark plug.
- Set the piston to top dead center. This can be checked through the spark plug hole.
- Remove the decompression valve, 6.9
- Fit the plug (1) 1122 025 2200 and tighten it down firmly.
- Fit the spark plug (2) and tighten it down firmly.
- Tightening torques, 2.5

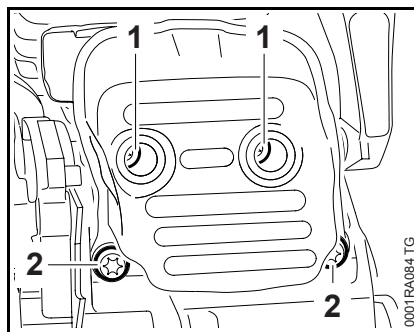


- Pry out the plugs.
  - Do not refit old plugs, always fit new ones.
- Loosen the screws (1) and (2).

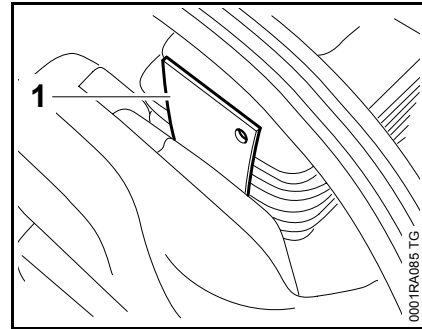


- Fit the sealing plate (1) 0000 855 8107 between the cylinder exhaust port and muffler and tighten down the screws moderately.

The sealing plate must completely fill the space between the two screws.

- Remove the carburetor, 12.5

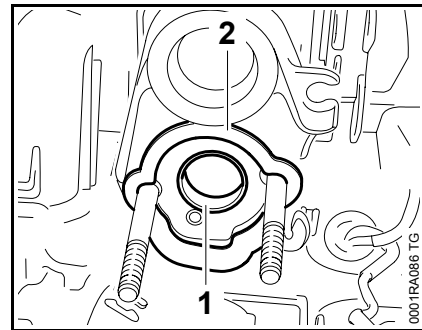

- Check that the sleeve (1) and washer (2) are in place.

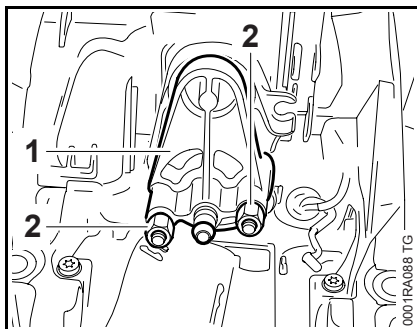


- Line up the flange and fit it over the studs.

- Fit the test flange (1) 1140 890 1200.
- Fit the nuts (1) and tighten them down firmly.

## 6.2.2 Vacuum Test

Oil seals tend to fail when subjected to a vacuum, i.e. the sealing lip lifts away from the crankshaft during the piston's induction stroke because there is no internal counterpressure.

A test can be carried out with pump 0000 850 1300 to detect this kind of fault.

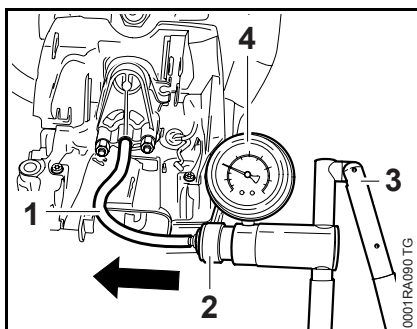

- Connect suction hose (1) of pump 0000 850 1300 to the nipple (arrow).
- Push ring (2) to the left.

- Operate the lever (3) until the pressure gauge (4) indicates a vacuum of 0.5 bar.


If the vacuum reading remains constant, or rises to no more than 0.3 bar within 20 seconds, it can be assumed that the oil seals are in good condition.

However, if the pressure continues to rise (reduced vacuum in the engine), the oil seals must be replaced, 6.3.

- After finishing the test, push the ring to the right to vent the pump.
- Continue with pressure test, 6.2.3

## 6.2.3 Pressure Test

Carry out the same preparations as for the vacuum test, 6.2.2

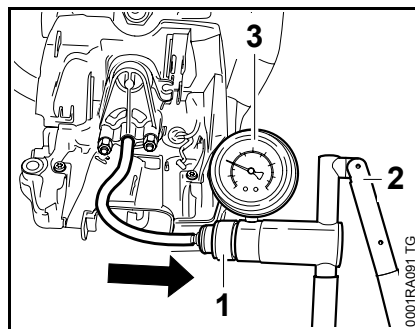

- Push ring (1) to the right.
- Operate the lever (2) until the pressure gauge (3) indicates a pressure of 0.5 bar. If this pressure remains constant for at least 20 seconds, the crankcase is airtight.
- If the pressure drops, the leak must be located and the faulty part replaced.




To find the leak, coat the suspect area with oil and pressurize the crankcase again. Bubbles will appear if a leak exists.


- After finishing the test, push the ring to the left to vent the pump – disconnect the hose.
- Remove the flange 1140 890 1200.
- Tighten down muffler screws firmly and fit new plugs.
- Install the carburetor, 12.5
- Reassemble all other parts in the reverse sequence.

## 6.3 Oil Seals

It is not necessary to disassemble the engine to replace the oil seals.


### Ignition side

- Remove the fan housing,  8.2
- Remove the flywheel,  7.6
- On versions with handle heating, remove the generator,  13.7

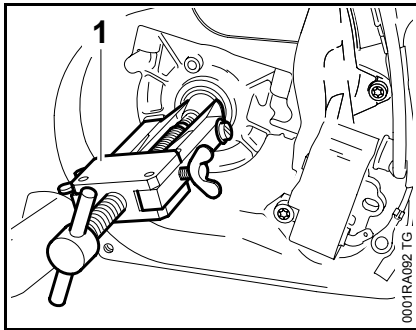


- Free off the oil seal in its seat by tapping it with a suitable tube or a punch.
- Apply puller (1) 5910 890 4400 with No. 3.1 jaws 0000 893 3706.
- Clamp the puller arms.
- Pull out the oil seal.

Take care not to damage the crankshaft stub.

- Clean the sealing face with a little standard solvent-based degreasant containing no chlorinated or halogenated hydrocarbons.
- Lubricate sealing lips of new oil seal with grease,  15

### Installing

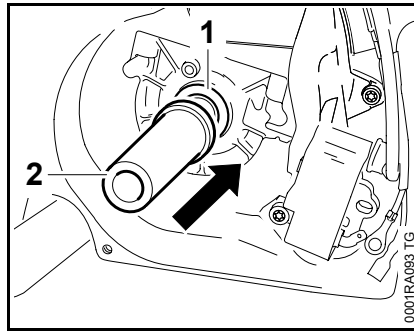

- Slip the oil seal, open side facing the crankcase, over the crankshaft stub.

- Use press sleeve (2) 1122 893 2405 to install the oil seal (1).



The seating face must be flat and free from burrs.


- Wait about one minute, then rotate the crankshaft several times.

Clean the crankshaft with a little standard commercial solvent-based degreasant containing no chlorinated or halogenated hydrocarbons.


- Reassemble all other parts in the reverse sequence.

### Clutch side

- Remove the clutch,  4
- Remove the oil pump,  11.3

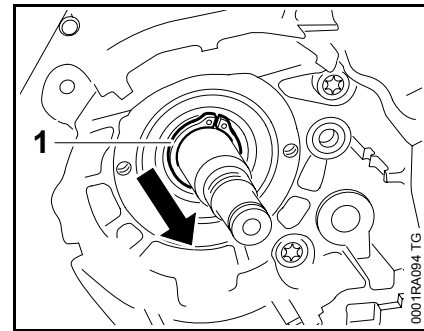

- Remove the E-clip (1).

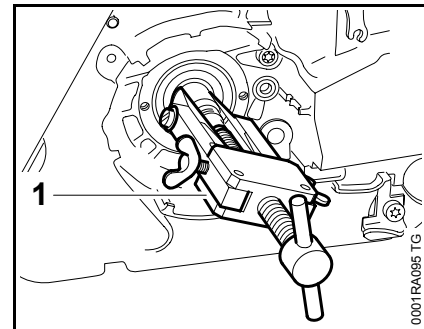


- Free off the oil seal in its seat by tapping it with a suitable tube or a punch.


- Apply puller (1) 5910 890 4400 with No. 3.1 jaws 0000 893 3706.

- Clamp the puller arms.
- Pull out the oil seal.


The crankshaft stub and oil pump spur gear must not be damaged.

- Clean the sealing face with a little standard solvent-based degreasant containing no chlorinated or halogenated hydrocarbons.
- Lubricate sealing lips of new oil seal with grease,  15


## Installing

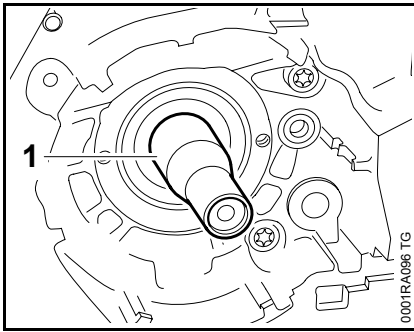

- Fit the installing sleeve (1) 1122 893 4600.
- Slip the oil seal, open side facing the crankcase, over the installing sleeve.
- Remove the installing sleeve (1).

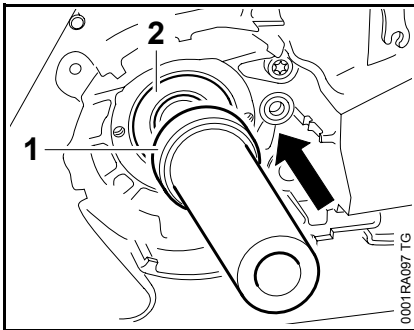


- Use press sleeve (1) 1118 893 2401 to install the oil seal (2).

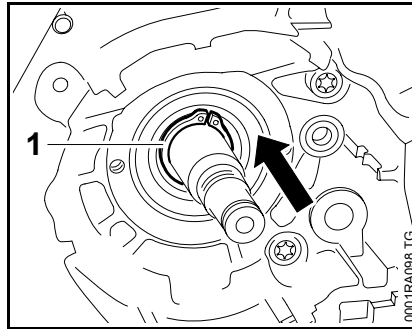

- Fit the E-clip (1).
- Wait about one minute, then rotate the crankshaft several times.
- Reassemble all other parts in the reverse sequence.
- Tightening torques, 2.5

## 6.4 Shroud

- Set the Master Control lever to "0".
- Push the front hand guard forwards to engage the chain brake.

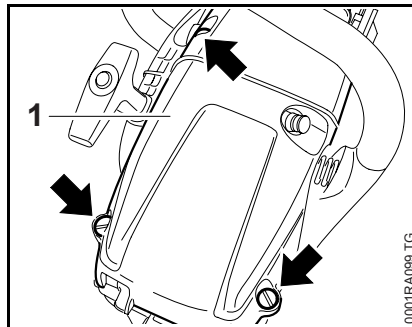

- Open the quick-action locks (arrows).
- Use the combination wrench to turn them a 1/4 turn counterclockwise.
- Remove the shroud (1).

- Reassemble in the reverse sequence.

## 6.5 Cylinder

Before removing the piston, decide whether or not the crankshaft has to be removed as well.


### Cylinder installed

To remove the flywheel and clutch, the crankshaft has to be blocked by inserting the locking strip in the spark plug hole.


### Cylinder removed

To remove the flywheel and clutch, the crankshaft has to be blocked by resting the piston on the wooden assembly block.


- Remove the shroud, 6.4
- Pull off the boot and unscrew the spark plug, 4
- Remove the fan housing, 8.2
- Remove the filter base, 12.3
- Remove the carburetor, 12.5
- Remove the manifold, 12.9
- Remove the muffler, 6.1
- Remove the decompression valve, 6.9
- Remove AV spring from handlebar, 9.4

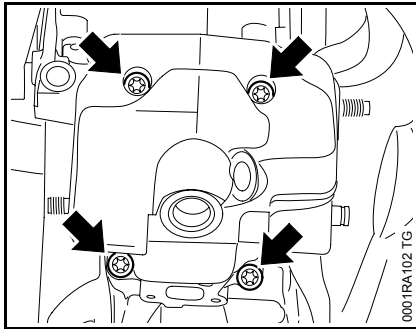


- Take out the screws (arrows).

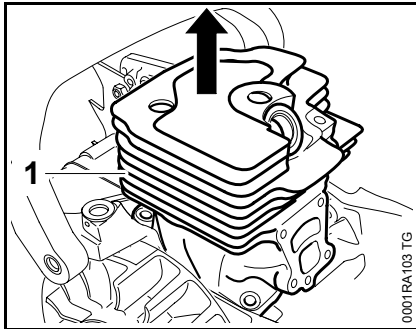

- Carefully lift the cylinder (1) away.

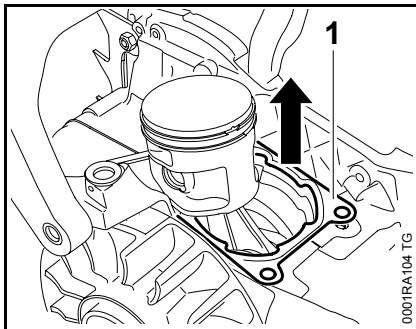

- Remove the cylinder gasket (1).

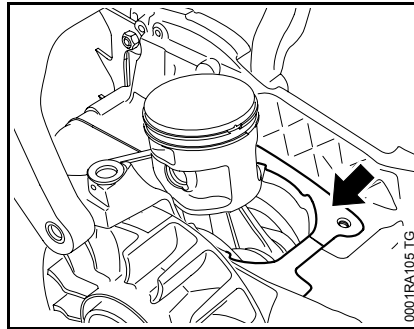


- Inspect and clean the sealing face (arrow), 15


The sealing face must be in perfect condition. Always replace components with damaged sealing faces, 3.7.

Always use a new cylinder gasket when re-installing the cylinder.

#### Installing

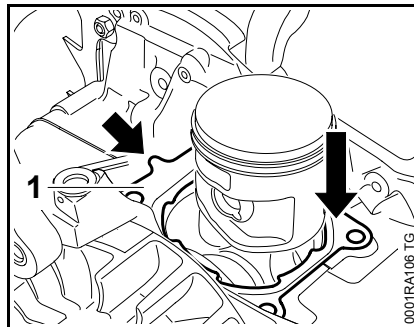


- Line up the cylinder gasket (1) so that the tab (arrow) points towards the spiked bumper.
- Place the cylinder gasket (1) in position.

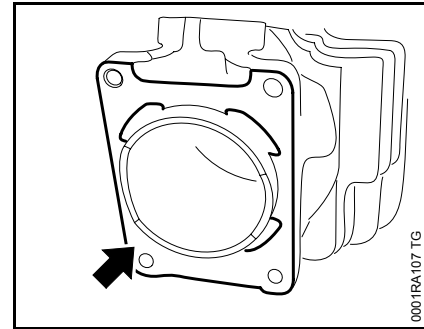

- Inspect and clean the sealing face (arrow) and remove any gasket residue.


- Check the sealing face on the cylinder exhaust port.

The sealing faces must be in perfect condition. If the sealing faces are damaged, install a new cylinder.

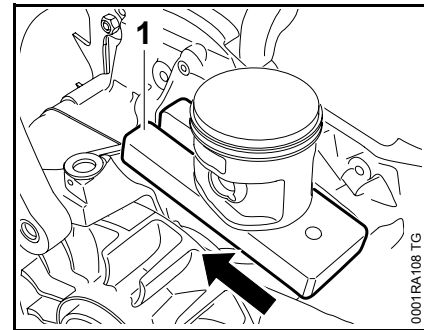


- Slide the wooden assembly block (1) 1108 893 4800 between the piston and crankcase.

Take care not to damage the cylinder gasket.

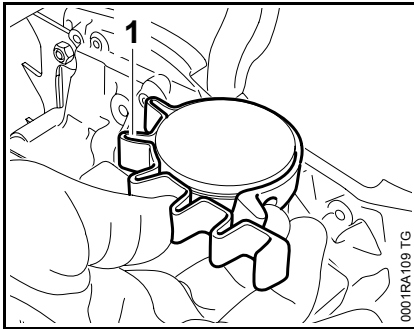

- Lubricate the piston, piston rings and cylinder wall with oil, 15
- Use the clamping strap (1) 0000 893 2600 to compress the rings around the piston.
- Check correct installed position of rings, 6.8

Apply the clamping strap (1) so that the piston rings do not project beyond the cylinder wall.

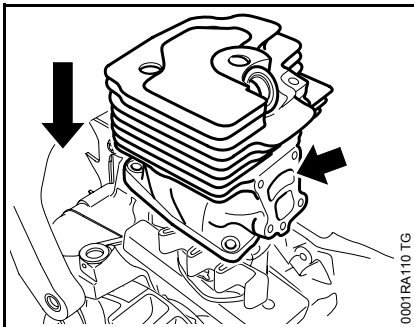


- Align the cylinder so that the intake port (arrow) points toward the tank housing.

While sliding the cylinder over the piston, hold the clamping strap tightly around the piston so that the rings do not project


- they might otherwise break.

- Slide the cylinder over the piston, the clamping strap moves downwards at the same time.

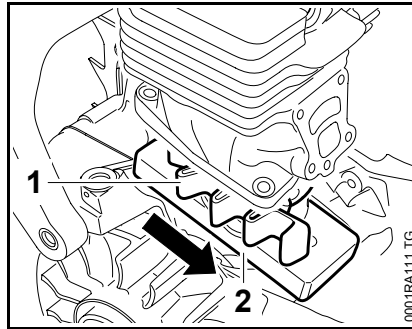

- Remove the clamping strap (1) and wooden assembly block (2).

Make sure the cylinder gasket is properly seated.

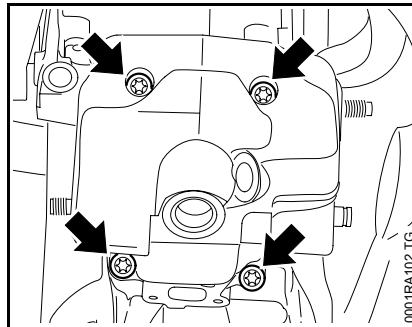


- Push the cylinder fully home.
- Insert the screws (arrows) to hold the cylinder and gasket in position..
- Tighten down the screws through the holes (arrows) in the cylinder in a crosswise pattern.
- Tightening torques, 2.5
- Reassemble all other parts in the reverse sequence.

## 6.6 Crankshaft

- Remove the brake band, 5.2
- Remove the oil pump, 11.3
- Remove the brake lever, 5.3 QuickStop Super, 5.4
- Drain the fuel and oil tanks, 1.2
- Remove the tank housing, 12.11.3
- Remove the flywheel, 7.6
- Machines with handle heating: Remove the generator, 13.7
- Remove the cylinder, 6.5
- Remove the piston, 6.7


Always install new bearings and oil seals after removing the crankshaft, 6.6.1 and 6.3.

### Clutch side of crankcase

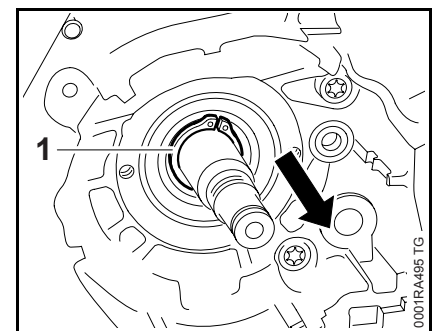


- Remove the E-clip (1).



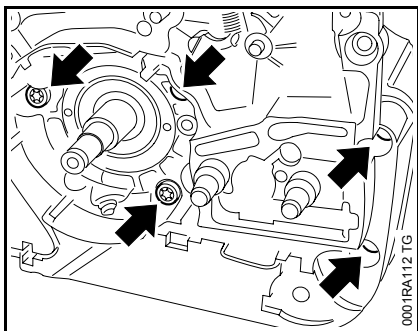


Use the tools in the service tool set 5910 007 2205 for removing and installing.

- Take out the screws (arrows).

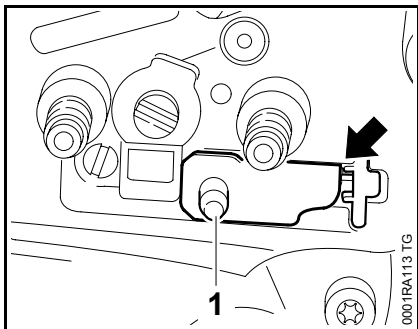

- The tensioner slide (1) must butt against the thrust pad (arrow).

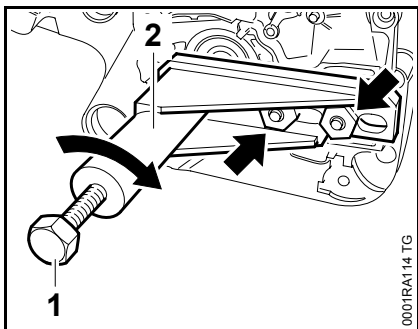


- Back off the spindle (1) in service tool until it is clear of the crankshaft stub.
- Push the service tool (2) 5910 890 2205 over the collar screws (arrows), fit the nuts and tighten them down firmly.

- Turn the spindle (1) clockwise until the crankshaft stub is pushed out of the ball bearing.


This operation releases the clutch side of the crankcase and separates the two halves.

- Install new ball bearings and oil seals, 6.6.1 and 6.3

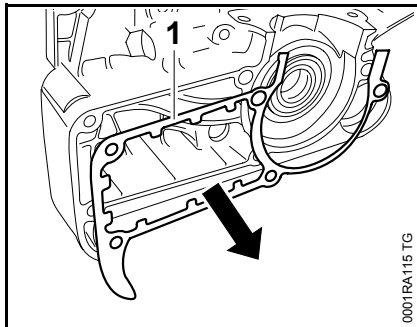

- Remove the gasket (1).

#### Ignition side of crankcase

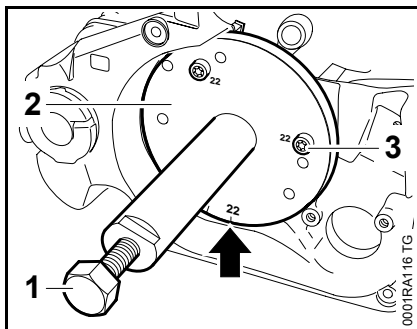

Use the tools in the service tool set 5910 007 2201 for removing and installing.

- Use drilled plate 5910 893 2103.


The drilled plate 5910 893 2103 can be added to and used with service tool set 5910 007 2200.

All three drilled plates are included in the new service tool set 5910 007 2201.


- Unscrew the spindle of service tool (1) until the drilled plate (2) butts against the crankcase – left-hand thread.

- Service tool (1) with plate (2) 5910 893 2103 against the ignition side of the crankcase so that the number "22" (arrow) is at the bottom.


- Insert three M5x72 screws (3) in the holes marked "22" and tighten them down until they butt against the crankcase.

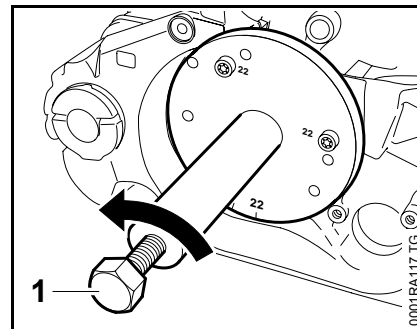

- Turn the spindle (1) counterclockwise until the crankshaft is pushed out of the ignition side of the crankcase.

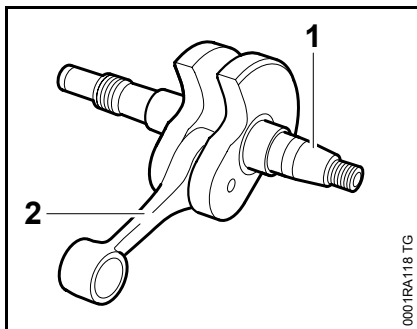

The crankshaft (1), connecting rod (2) and needle bearing form an inseparable unit. Always replace as a complete unit.

- Check the two halves of the crankcase and ball bearings and replace if necessary,  6.6.1


Before installing, clean the crankshaft with a standard commercial, solvent-based degreasant containing no chlorinated or halogenated hydrocarbons.

## Installing

### Ignition side of crankcase

Take care not to damage the crankshaft stub.


Sealing faces must not be damaged in any way.

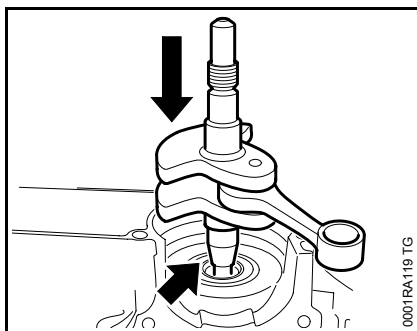

- Position the tapered stub of the crankshaft (arrow) above the ball bearing at the ignition side.

- Wear protective gloves to reduce risk of burn injury.
- Heat the inner bearing race to about 150°C (300°F).
- Push the crankshaft home as far as stop.

This operation must be carried out very quickly because heat is absorbed by the crankshaft, and the inner bearing race shrinks.

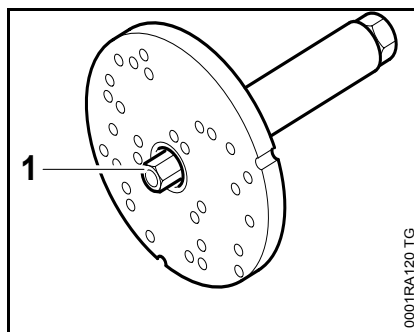


If it is not possible to heat the inner bearing race, use service tool 5910 007 2200 or 5910 007 2201 to install the crankshaft.


- Use drilled plate 5910 893 2103.

- Screw the threaded sleeve (1) 5910 893 2420 onto the spindle as far as stop.


Coat tapered stub of crankshaft with oil.

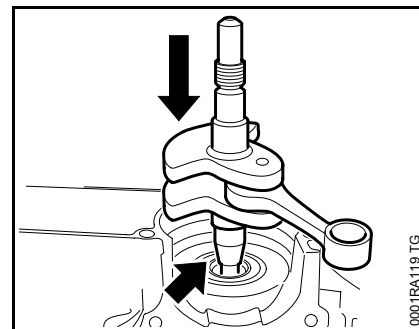


- Position the tapered stub of the crankshaft (arrow) above the ball bearing at the ignition side and push it home.

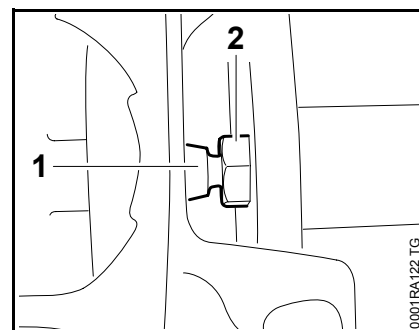

- Position the screw sleeve (2) on the crankshaft thread (1) and screw it into place.

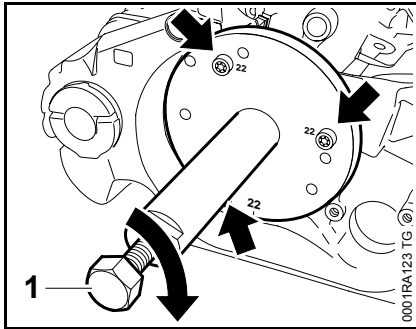


- Turn the spindle bolt (1) to position the drilled plate 5910 893 2103 against the ignition side of the crankcase and line it up so that the number "22" is at the bottom.
- Fit the M5x72 screws (arrows) through the holes marked "22" and tighten them down.
- Turn the spindle bolt (1) clockwise.
- Install the ignition side of the crankcase as far as stop.

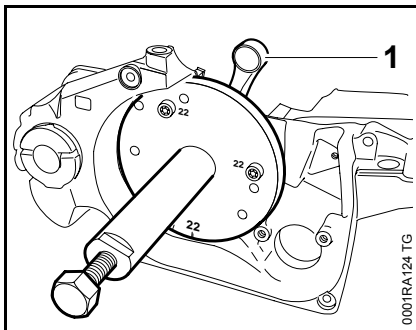

The crankshaft turns when it is being pulled into place with the service tool. Therefore, make sure the small end (1) of the connecting rod always points upward to the cylinder.

- Remove the service tool.

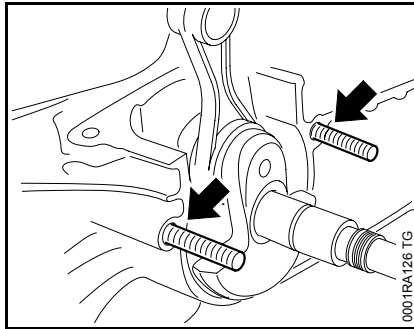


- At the ignition side, fit three M5x72 screws (arrows) in the holes to help alignment and avoid twisting.
- Coat the straight stub of the crankshaft with oil.

### Installing


#### Clutch side of crankcase

Take care not to damage the crankshaft stub.


Inspect and clean the sealing faces on the clutch side of the crankcase (including the cylinder sealing face)  
– the sealing faces must not be damaged in any way.

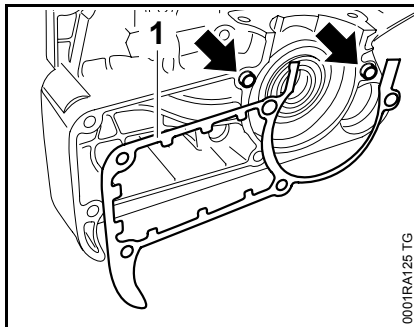

- Fit a new gasket (1) and locate it on the sleeves (arrows).

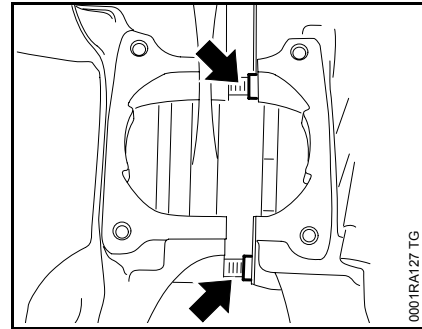

Make sure the sleeves (arrows) engage the holes and the gasket is not pinched or twisted.

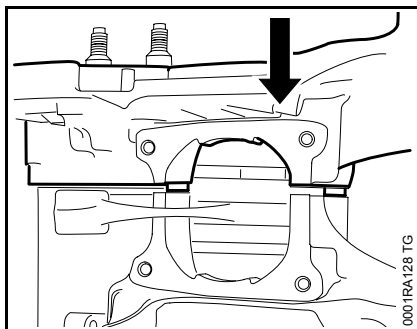


- Wear protective gloves to reduce risk of burn injury.
- Heat the inner bearing race to about 150°C (300°F).
- Position the clutch side of the crankcase on the straight crankshaft stub and the screws.
- Push the crankcase fully home.


This operation must be carried out very quickly because heat is absorbed by the crankshaft, and the inner bearing race shrinks.

If it is not possible to heat the inner bearing race, use service tool 5910 890 2205 to install the crankcase.


- Coat the straight stub of the crankshaft with oil.
- Position the clutch side of the crankcase on the straight crankshaft stub and the two screws.

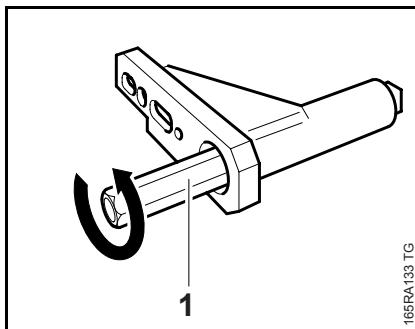


- Screw the spindle (counterclockwise, left-hand thread) fully into the service tool.
- Screw the threaded sleeve (1) 5910 893 2409 onto the spindle as far as stop – left-hand thread.

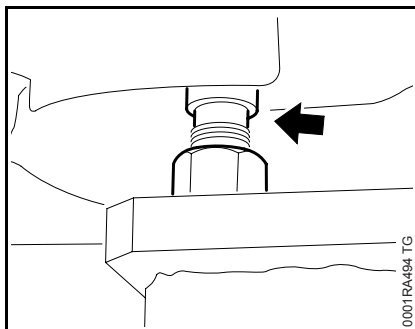


- Apply the screw sleeve to the crankshaft stub (arrow) and push the service tool over the bar studs.

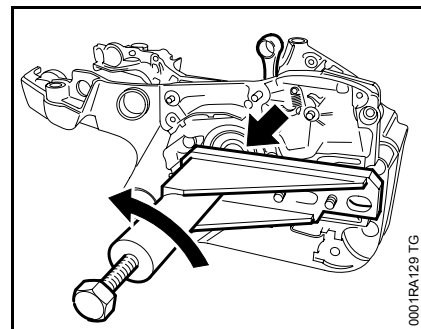

- Hold the crankshaft steady and rotate the spindle counterclockwise to screw the screw sleeve onto the crankshaft stub.
- Release the crankshaft. Hold the service tool steady and continue turning the spindle until the tool butts against the crankcase.
- Fit the sprocket cover mounting nuts on the bar studs and screw them down finger-tight.

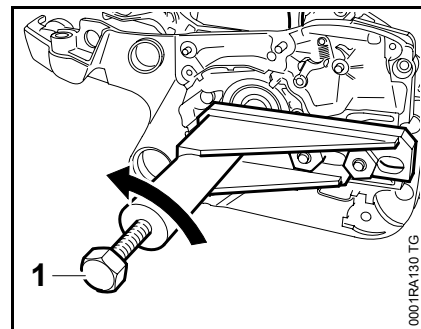


- Turn the spindle (1) counterclockwise until the crankcase locates against the guide sleeves.

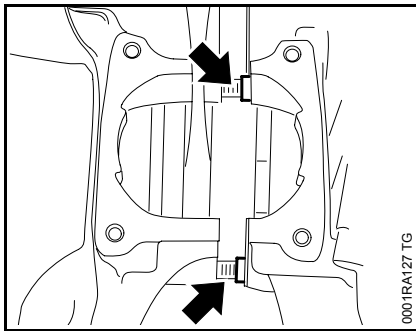


Make sure the sleeves (arrows) engage the holes and the gasket is not pinched or twisted.

- Continue turning the service tool's spindle until the gap between the two halves of the crankcase is closed.
- Unscrew the mounting nuts.
- Unscrew the spindle clockwise and take away the service tool.
- Take out the M5x72 screws.

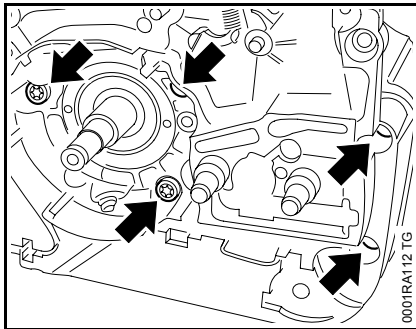

- Insert the screws (arrows) and tighten them down firmly in a crosswise pattern.
- Tightening torques, 2.5

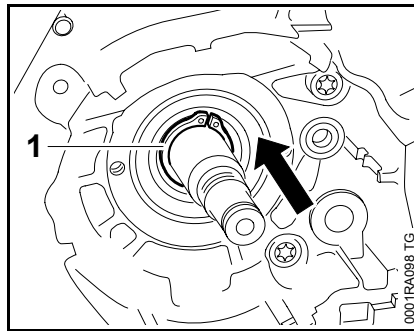

- Fit the circlip (1) in the groove (arrow).
- Check and install the piston, 6.7
- Check and install the cylinder, 6.5
- Reassemble all other parts in the reverse sequence.

#### 6.6.1 Bearings / Crankcase

Each half of the crankcase can be replaced separately if it is damaged.

New crankcase halves are supplied with the main parts preassembled – see the parts list.

Parts not supplied with the new crankcase must be transferred from the original crankcase – check the parts and replace if necessary.


If a new crankcase is installed, the machine's serial number must be stamped on it with 2.5 mm figure stamps.

If the original crankcase is used again, replace the oil seals and ball bearings, remove any gasket residue and clean the sealing surfaces thoroughly. The sealing faces must be in good condition and clean to guarantee a perfect seal.

Inspect both halves of the crankcase for cracks and all sealing faces for signs of damage.


- See also Troubleshooting, 3.7
- Remove the crankshaft, 6.6
- Wear protective gloves to reduce risk of burn injury.

#### Ignition side of crankcase

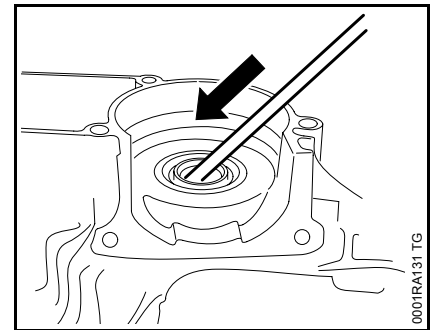

- Use a suitable punch to carefully drive out the oil seal.
- Check and clean the crankcase or replace if necessary.


If this half of the crankcase is in order, install a new ball bearing.

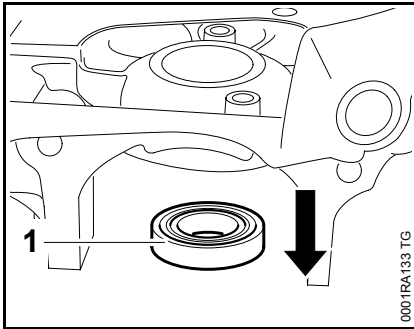

- Heat area of bearing seat to approx. 150°C (300°F).

The bearing (1) drops out as soon as this temperature is reached.

### Installing

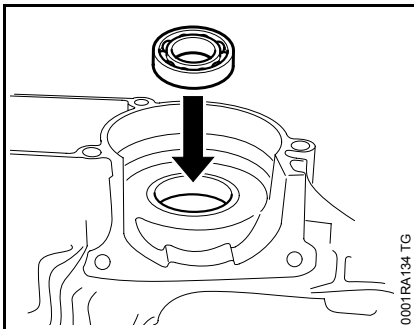


- Heat area of bearing seat to approx. 150°C (300°F).
- Position the ball bearing so that its open side (balls visible) faces the inside of the crankcase.
- Push the ball bearing home as far as stop.


This operation must be carried out quickly because the bearing absorbs heat and begins to expand.

- Check that the bearing is properly seated. If necessary, use press arbor 1127 893 2400 to press the bearing fully home.

### Clutch side of crankcase

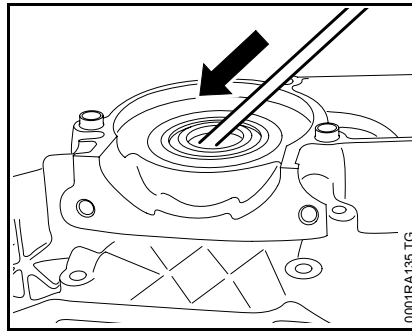

- Use a suitable punch to carefully drive out the oil seal.
- Check and clean the crankcase or replace if necessary.
- If this half of the crankcase is in order, install a new ball bearing.

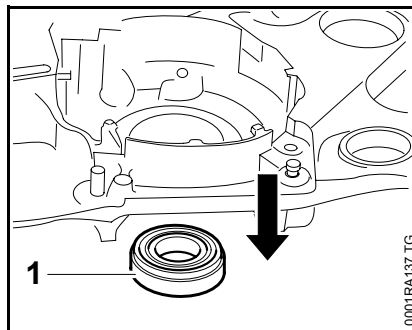

- Heat area of bearing seat to approx. 150°C (300°F).


The bearing (1) drops out as soon as this temperature is reached.

### Installing

As the bearing seat in the clutch half of the crankcase has no locating face, the oil pump must be installed first

- the oil pump serves as a locating face.

- Install the oil pump, 11.3

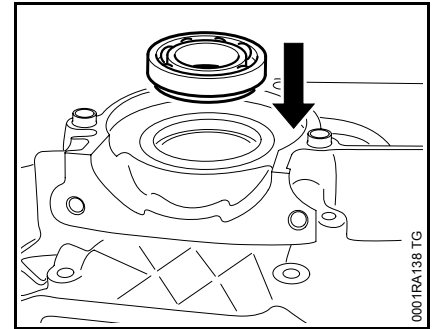



- Heat area of bearing seat to approx. 150°C (300°F).
- Position the ball bearing so that the centering ring points toward the oil pump.
- Push the ball bearing home as far as stop (oil pump).

This operation must be carried out quickly because the bearing absorbs heat and begins to expand.


- Check that the bearing is properly seated. If necessary, use press arbor 1127 893 7200 to press home the bearing until it butts against the snap ring.
- Remove the oil pump, 11.3
- Install the crankshaft, 6.6
- Install the oil seals, 6.3
- Reassemble all other parts in the reverse sequence.
- Tightening torques, 2.5

## 6.7 Piston


Before removing the cylinder, decide whether or not the crankshaft has to be removed as well,  6.6

- Remove the cylinder,  6.5

The snap ring at the clutch side cannot be removed.

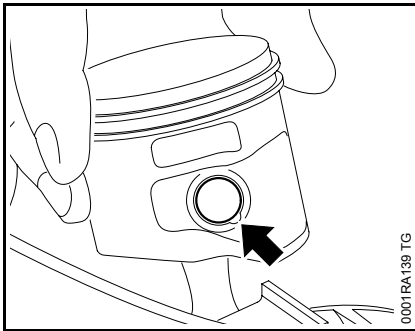


- At the ignition side, use a suitable tool at the recess (arrow) to remove the hookless snap ring from the piston boss.

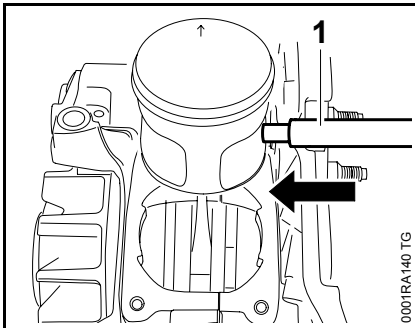


- Push the assembly drift (1) 1108 893 4700 through the installed snap ring.
- Use the assembly drift (1) 1108 893 4700 to push the piston pin out of the piston.

If the piston pin is stuck, release it by tapping the end of the drift lightly with a hammer.


Hold the piston steady during this process to ensure that no jolts are transmitted to the connecting rod.

- Remove the piston.
- Inspect the piston rings and replace if necessary,  6.8

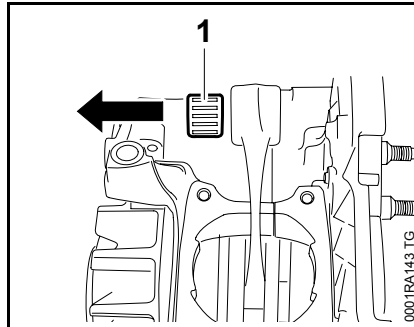

- Pull out the needle cage (1), check it and replace if necessary.

### Installing

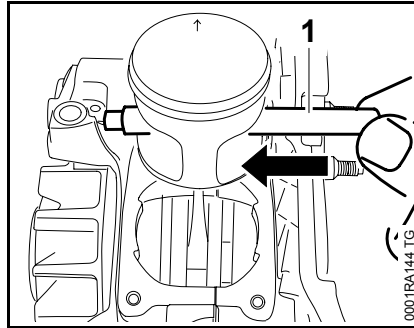


- Lubricate the needle cage with oil and push it into the connecting rod.

Line up the piston so that the arrow on the piston crown points towards the spiked bumper (exhaust port).


The assembly drift can be pushed through the installed snap ring.

- Place the piston on the connecting rod.


- Push the assembly drift (1) 1108 893 4700, small diameter first, through the piston and small end (needle cage) and line up the piston.

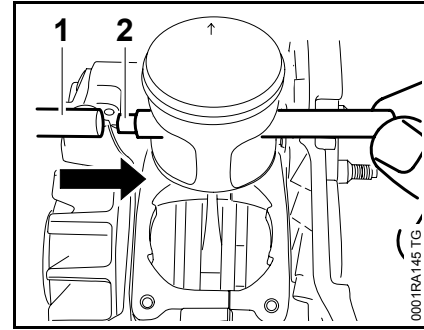


- Lubricate the piston pin with oil.
- Fit the piston pin (1) on the assembly drift (2) and slide it into the piston.

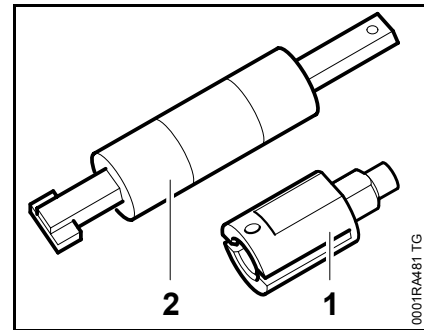

- Remove the sleeve (1) from the installing tool (2) 5910 890 2212.

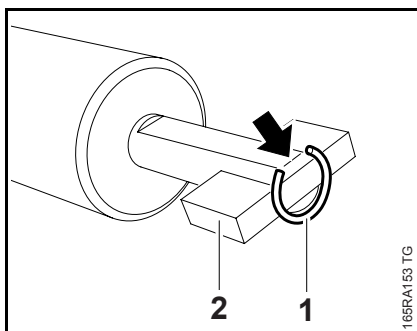


- Attach the snap ring (1) to the magnet (2) so that the snap ring gap is on the flat side of the tool's shank (arrow).

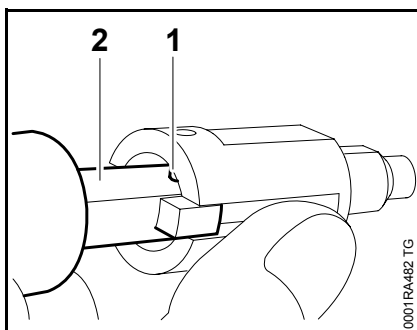


- Push the large slotted diameter of the sleeve over the magnet and snap ring.

The inner pin (1) must point towards the flat face of the tool's shank (2).

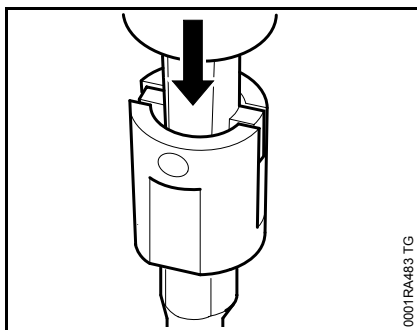


- Press the installing tool downwards into the sleeve until the magnet butts against the end of the guide slot.

Use a suitable base.

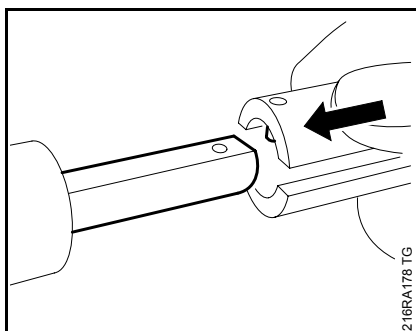


- Remove the sleeve and slip it onto the other end of the shank – the inner pin must point towards the flat face.

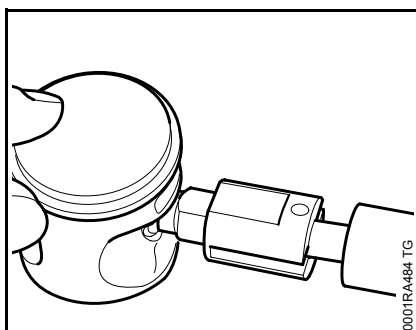


- Apply the installing tool 5910 890 2212 with the sleeve's taper against the piston boss, hold the piston steady, center the tool shank exactly and press home until the snap ring slips into the groove.

Make sure the tool shank is held square on the piston pin axis.

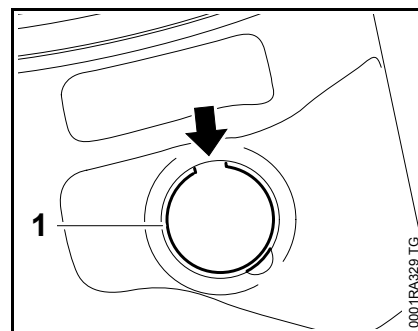

Fit the snap ring (1) so that its gap (arrow) points either up or down.

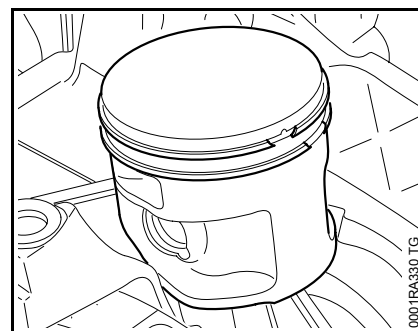


- Inspect the piston rings and replace if necessary, 6.8
- Install the cylinder, 6.5
- Reassemble all other parts in the reverse sequence.
- Tightening torques, 2.5




## 6.8 Piston Rings


- Remove the piston, 6.7
- Remove the piston rings from the piston.

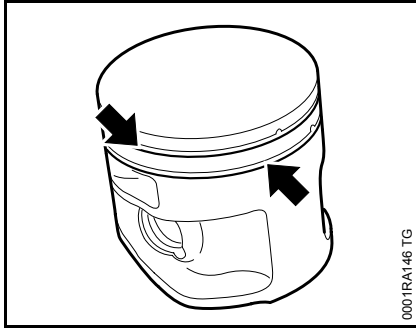

- Use a piece of old piston ring to scrape the grooves (arrows) clean.

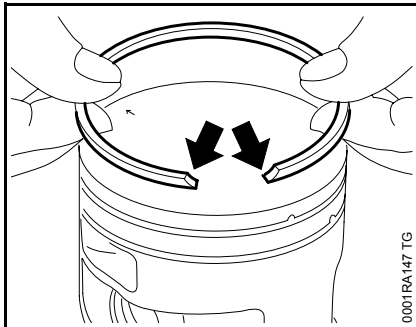


- Install the new piston rings in the grooves so that the radii face upward (arrows).

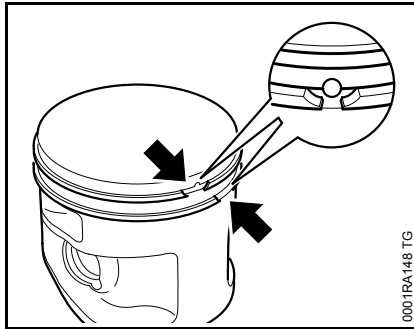


- Position the piston rings so that the radii at the ring gap meet at the fixing pin in the piston groove (arrows).
- Check correct installed position of the piston rings (arrows).
- Install the piston, 6.7
- Reassemble all other parts in the reverse sequence.

## 6.9 Decompression Valve

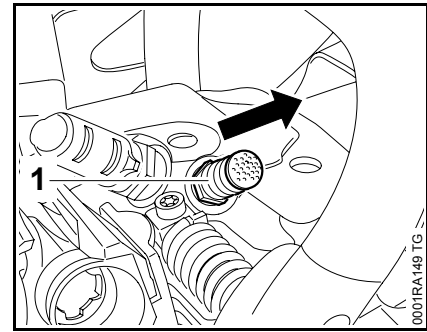


- Remove the shroud, 6.4
- Unscrew the decompression valve (1).

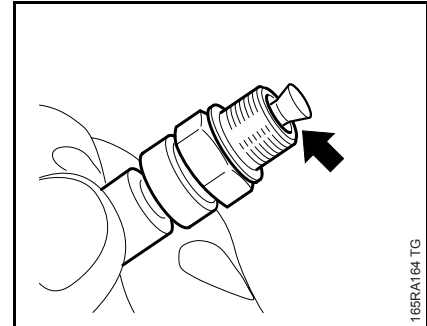


- Check the sealing cone (arrow) on the decompression valve for damage.
- If the sealing cone does not close completely or shows signs of damage, install a new decompression valve.
- Fit the decompression valve and screw it home by hand.
- Tighten down the decompression valve firmly.
- Tightening torques, 2.5
- Reassemble all other parts in the reverse sequence.

## 7. Ignition System

Exercise extreme caution when troubleshooting and carrying out maintenance or repair work on the ignition system. The high voltages which occur can cause serious or fatal accidents.

Troubleshooting on the ignition system should always begin at the spark plug,  3.5

- Remove the fan housing,  8.2

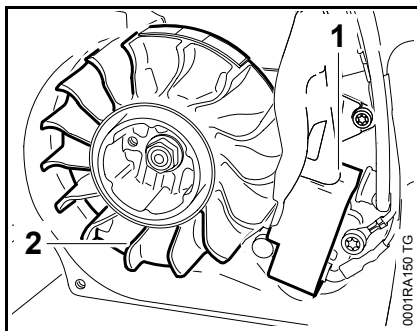


The electronic (breakerless) ignition system basically consists of an ignition module (1) and flywheel (2).



### 7.1 Ignition Timing

Ignition timing is fixed and cannot be adjusted during repair work.


Since there is no mechanical wear in these systems, ignition timing cannot get out of adjustment during operation.
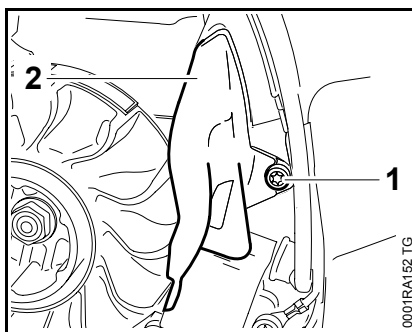
### 7.2 Preseparator



- Remove the fan housing,  8.2
- Take out the screw (1).
- Check the preseparator (2) and replace if necessary
- Reassemble in the reverse sequence.
- Tightening torques,  2.5

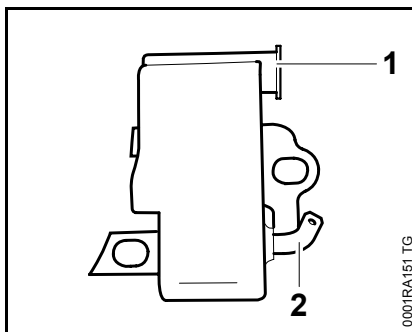

### 7.3 Ignition Module




The ignition module accommodates all the components required to control ignition timing. There are two electrical connections on the coil body:


- the high voltage output (1) for the ignition lead
- the connector tag (2) for the short circuit wire

Testing in the workshop is limited to a spark test. A new ignition module must be installed if no ignition spark is obtained (after checking that wiring and stop switch are in good condition).


- Remove the fan housing,  8.2
- Remove the shroud and pull off the spark plug boot,  6.4

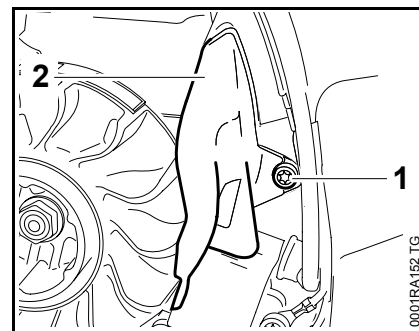


- Take out the screw (1) and remove the preseparator (2).

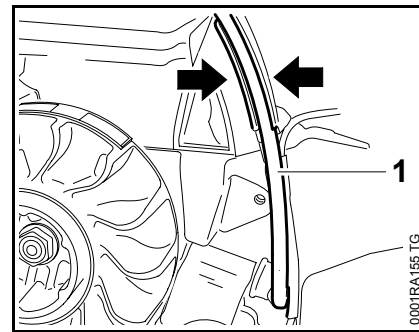

- Pull the ignition lead (1) out of the cable channel (arrows).

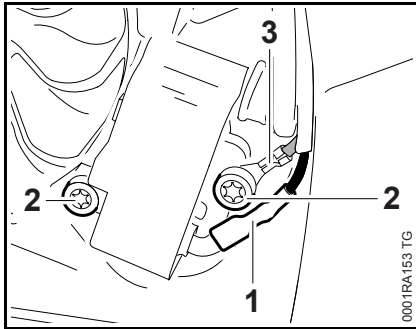

- Disconnect the short circuit wire (1).
- Take out the screws (2).
- Remove the ground wire (3).
- Remove the ignition module.

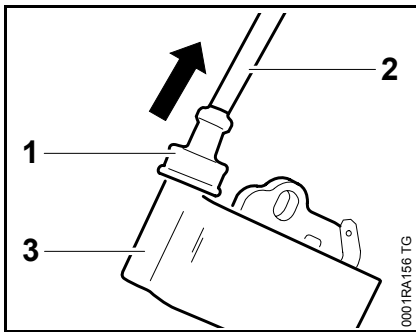

- Pull the grommet (1) off the ignition module.
- Unscrew the ignition module (3) from the ignition lead (2).
- Check the spark plug boot and ignition lead, and replace if necessary, 7.5

– Troubleshooting, 3.5

- Before installing the ignition lead, fill the high voltage output with STIHL multipurpose grease 15.


Do not use either graphite grease or silicone insulating paste.

- Reassemble in the reverse sequence.


Make sure the grommet (1) is fitted properly to avoid ignition system problems that may be caused by contamination or moisture.

## Installing

### Machines with Heating

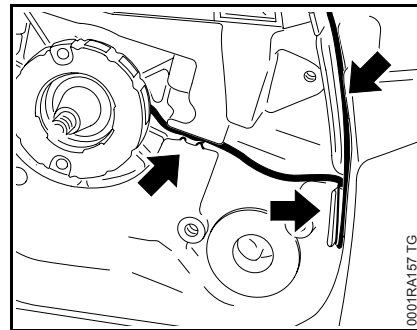


Before installing the ignition module, check that the generator wire (arrows) is properly positioned, 13.7.

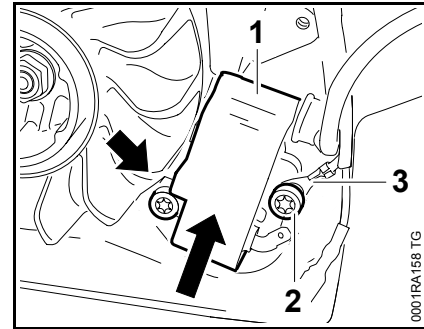


- Fit the ignition module (1) and insert the screw (arrow) – do not tighten down yet.
- Fit the ground wire (3) and insert the screw (2) – do not tighten down yet.

Crimped side of terminal must face the screw head.

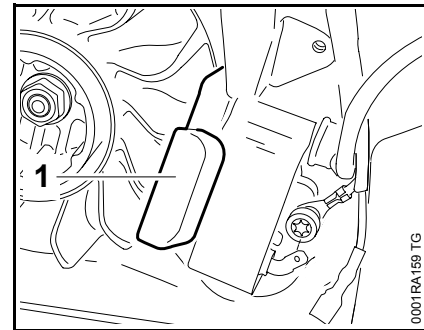

- Push the ignition module back and slide the setting gauge (1) 1111 890 6400 between the arms of the ignition module and the flywheel magnet.

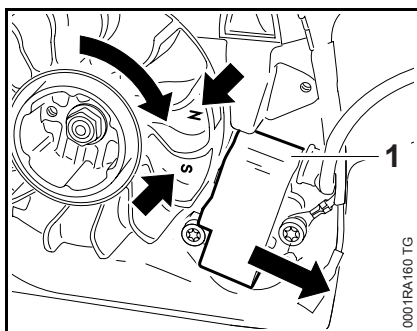


The setting gauge is not shown in the illustration.


- Push the ignition module (1) back and hold it there
- the flywheel must move freely.
- Rotate the flywheel until the magnet poles (arrows) are next to the ignition module (1).
- Press the ignition module (1) against the setting gauge.

Hold the ground wire terminal steady – it must point towards the cable guide.

- Tighten down the screws firmly.
- Tightening torques, 2.5
- Remove the setting gauge.
- Check operation
  - rotate the flywheel and make sure it does not touch the ignition module.

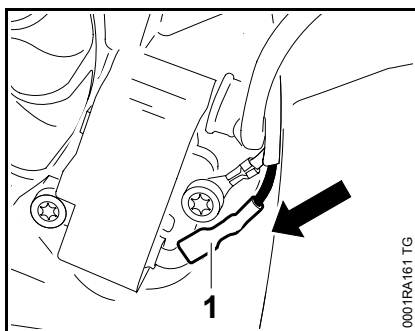

- Connect the short circuit wire terminal (1)
  - the terminal must be pushed fully home.

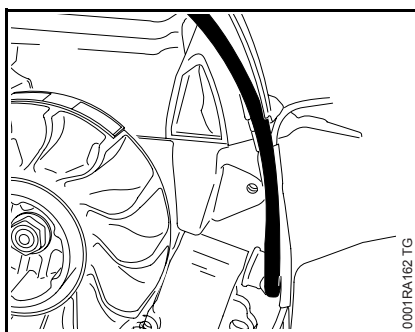


- Starting at the ignition module, push the ignition lead into the cable channel.
- Reassemble all other parts in the reverse sequence.

#### 7.4 Testing the Ignition Module

To test the ignition module, use either the ZAT 4 ignition system tester 5910 850 4503 or the ZAT 3 ignition system tester 5910 850 4520.

The ignition test refers only to a spark test, not to ignition timing.

#### Using ZAT 4 ignition system 5910 850 4503

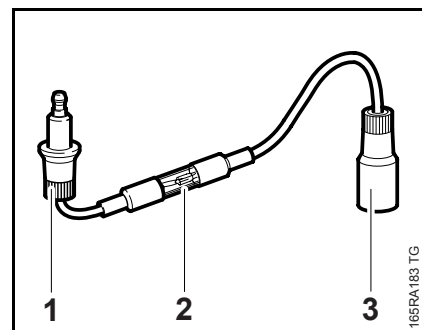

- Before starting the test, install a new spark plug in the cylinder and tighten it down firmly.
- Tightening torques, 2.5
- Connect spark plug boot to the input terminal (1). Push the tester's output terminal (3) on to the spark plug.

High voltage – risk of electric shock.


- Crank the engine quickly with the rewind starter and check spark in the tester's window (2).

The engine may start and accelerate during the test.


If a spark is visible, the ignition system is in order.

- If no spark is visible in the window (2), check the ignition system with the aid of the troubleshooting chart, 7.8

## Using the ZAT 3 ignition tester 5910 850 4520

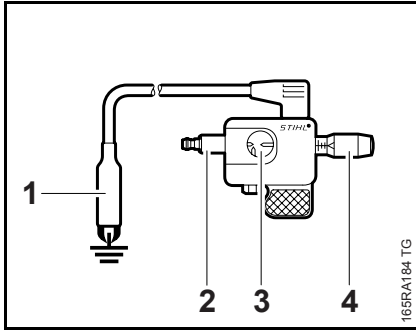

- Before starting the test, install a new spark plug in the cylinder and tighten it down firmly.
- Tightening torques, 2.5
- Connect spark plug boot to the terminal (2).
- Attach the ground terminal (1) to the spark plug.
- Use adjusting knob (4) to set the spark gap to about 2 mm, see window (3).

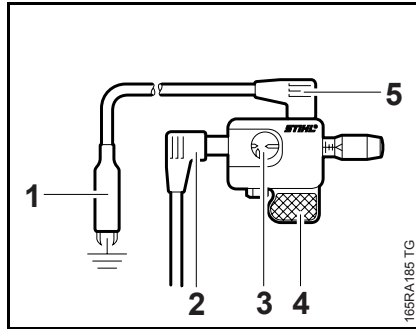

While using the ZAT 3, hold it only by the handle (4) or position it in a safe place. Keep fingers or other parts of your body at least 1 cm away from the spark window (3), high voltage connection (2), ground connection (5) and the ground terminal (1).

High voltage – risk of electric shock.


- Crank the engine quickly with the rewind starter and check spark in the tester's window (3).

The engine may start and accelerate during the test.


If a spark is visible in the window (3), the ignition system is in order.

- If no spark is visible in the window (3), check the ignition system with the aid of the troubleshooting chart, 7.8

## 7.5 Spark Plug Boot / Ignition Lead

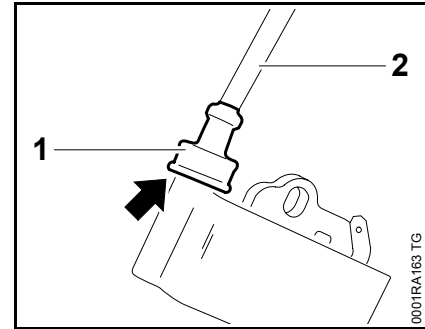


- Remove the ignition module, 7.3
- Pull the grommet (1) off the high voltage output (arrow).
- Unscrew the ignition lead (2) from the ignition module.
- Pull the grommet (1) off the ignition lead.

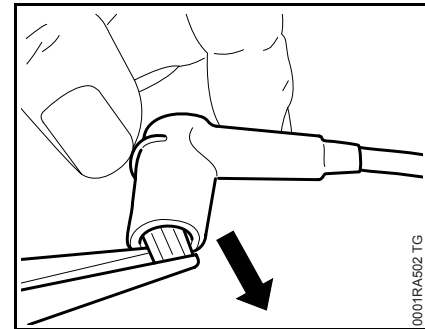


- Use suitable pliers to pull the leg spring out of the spark plug boot.
- Unhook the leg spring from the ignition lead.
- Pull the boot off the ignition lead.
- Cut a new ignition lead to the specified length, see parts list.


## Installing

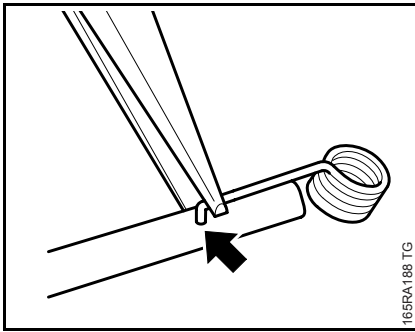


- Use a pointed tool to pierce the center of the new ignition lead's insulation, about 15 mm from the end of the lead.
- Pinch the hook of the leg spring into the pierced hole in the center of the lead (arrow).

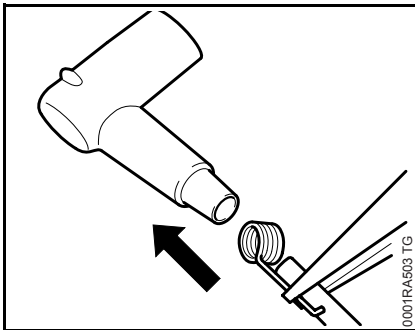

- Coat the inside of the spark plug boot with STIHL press fluid, [15](#)
- Hold the ignition lead and leg spring together and push them into the spark plug boot.

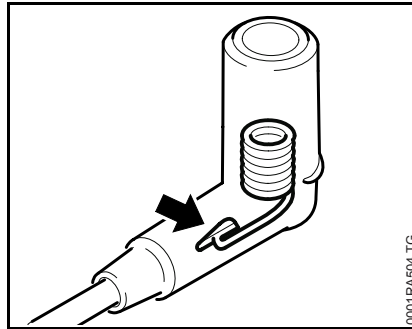


- Make sure the leg spring (arrow) locates properly inside the spark plug boot.

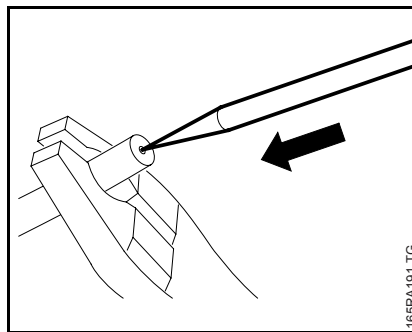

- Use a pointed tool to pierce the center of the other end of the ignition lead which screws into the module.

Before installing the ignition lead, fill the high voltage output with STIHL multipurpose grease [15](#).


Do not use either graphite grease or silicone insulating paste.

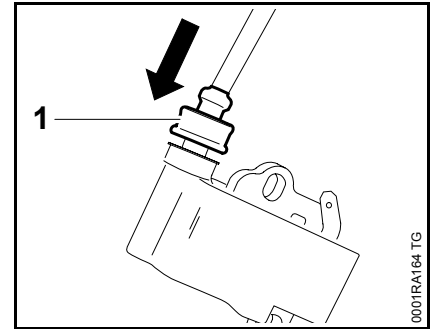


- Screw the ignition lead into the ignition module.
- Push the grommet (1) into position.
- Install the ignition module and set the air gap between the module and flywheel, [7.6](#)
- Reassemble all other parts in the reverse sequence.

## 7.6 Flywheel


- Remove the shroud, [6.4](#)
- Use locking strip to block the piston, [4](#)

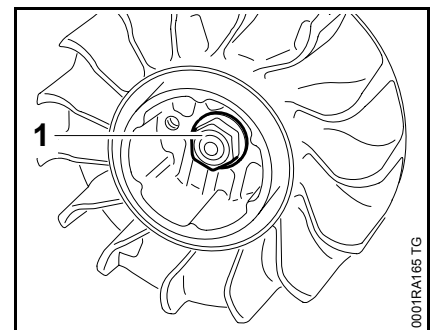

- Unscrew the flywheel nut (1).

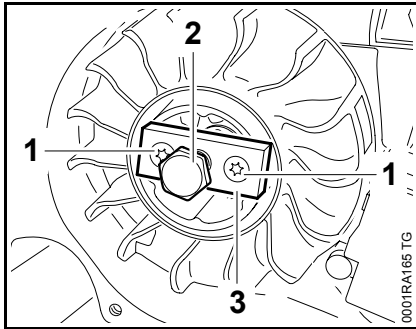


- Fit the puller (3) 1135 890 4500 on the flywheel and tighten the screws (1) as far as stop.
  - Tighten the screws uniformly.
- Screw home the thrust bolt (2) clockwise until the flywheel is released from the crankshaft.
- Remove the puller (3) 1135 890 4500 from the flywheel.

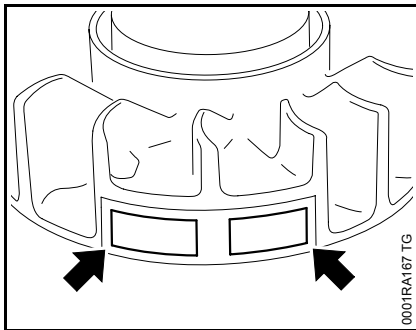

The flywheel and magnet poles (arrows) must not be damaged or have turned blue. Replace flywheel if necessary.

On versions with handle heating, also check the magnet ring for signs of damage, [13.7](#).

The flywheel and crankshaft stub must be free from grease before assembly.

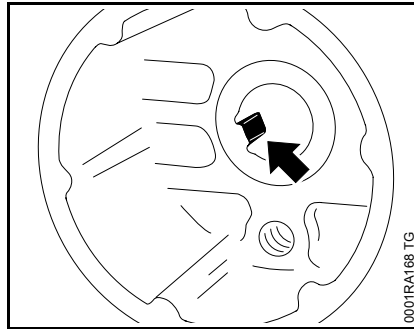


Make sure the key (arrow) engages the slot in the crankshaft.

- Set the air gap between the ignition module and flywheel, [7.3](#)
- Reassemble all other parts in the reverse sequence.
- Tightening torques, [2.5](#)

## 7.7 Short Circuit Wire

### 7.7.1 Testing

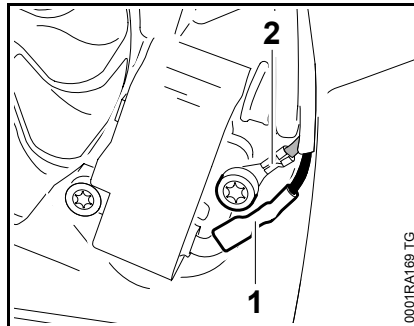

If the spark plug, ignition lead and spark plug boot are in order, check the short circuit wire.

- Remove the fan housing, [8.2](#)
- Disconnect the short circuit wire (1).

- Connect the ohmmeter to ground (2) and the short circuit wire (1).

- Set the Master Control lever to "0".

The resistance measured must be about 0  $\Omega$ . If it is much higher, the reason is a break and the wiring harness has to be replaced, [7.7](#).

- Set the Master Control lever to "I".

The resistance measured must be infinitely high. If not, fit a new short circuit wire, [7.7](#).







Perform the contact and continuity test on the ground wire too.

If the ground wire is damaged, the complete wiring harness has to be replaced.


- If no fault can be found, check the ignition system with the aid of the troubleshooting chart, [7.8](#).

- Reassemble in the reverse sequence.


### 7.7.2 Removing and Installing

- Pull the boot off the spark plug,  5.2
- Remove the shroud,  6.4
- Remove the fan housing,  8.2
- Disconnect the choke rod,  10.3.3
- Remove the contact spring,  7.7.4
- Remove the filter base,  12.3


The ground and short circuit wires are combined in a wiring harness.

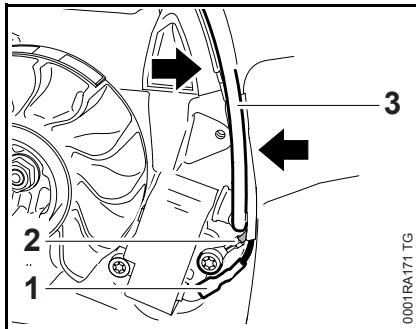


- Pull the ignition lead (3) out of the guide (arrows).
- Remove the connector (1).
- Take out the screw and remove the ground wire (2).

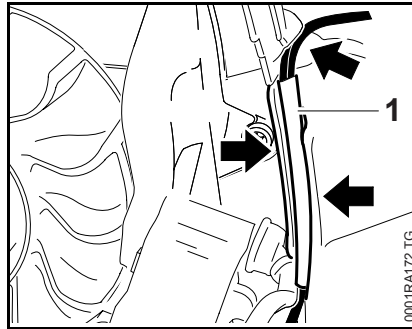


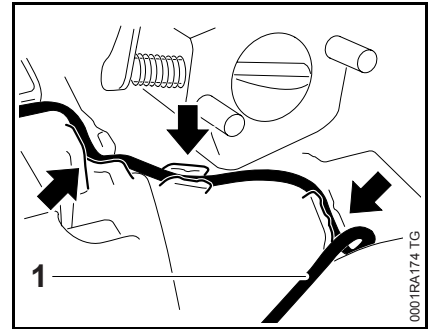
- Pull the wiring harness (1) out of the guides (arrows).

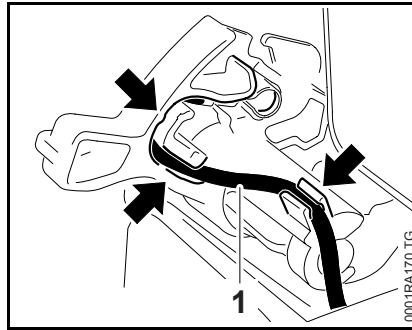

- Pull the short circuit wire (1) out of the guides (arrows).
- Remove the ring terminal from the pivot pin (2).

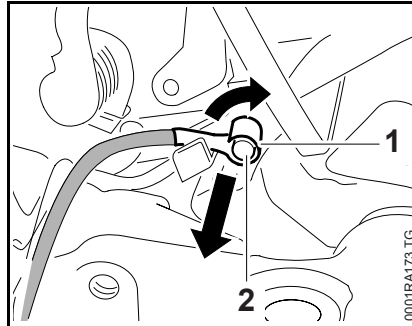


- Swing the ring terminal (1) up and remove it from the pivot pin (2).
- Remove the filter base,  12.3




- Pull the short circuit wire (1) out of the guides (arrows).

### Installing

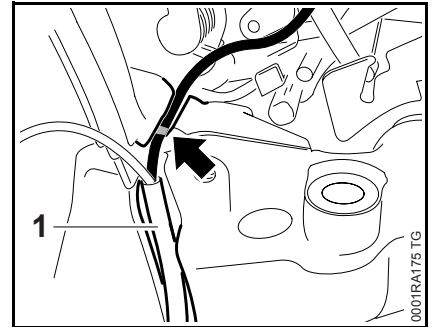


- Position the short circuit wire so that the yellow mark lines up with the edge (arrow) of the air baffle.
- Push the wiring harness (1) into the guide.

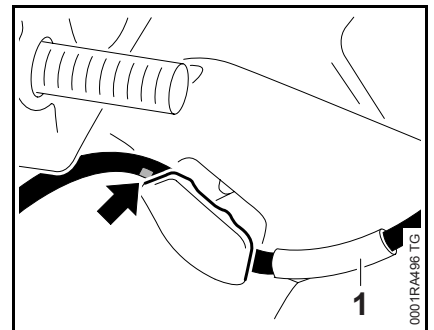


- Position the short circuit wire (1) so that the yellow mark (arrow) is against the guide.



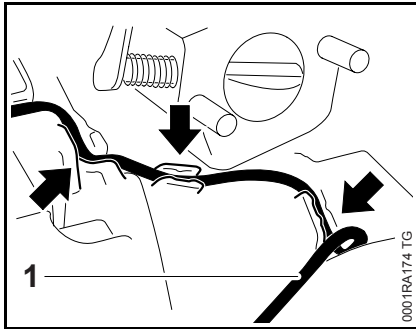


The wire must be laid straight.

- Push the short circuit wire (1) into the guides (arrows).

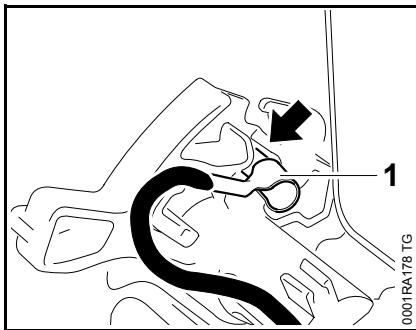


- Install the filter base, [12.3](#)
- Push the ring terminal (1) onto the pivot pin (arrow) as far as stop.

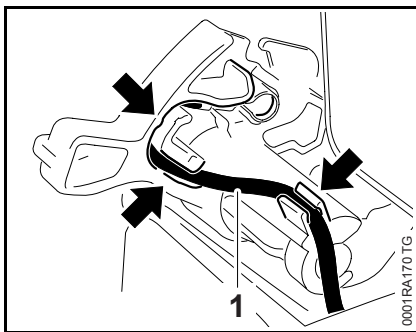


- Push the short circuit wire (1) into the guides (arrows).


Position the short circuit wire so that it forms a loop and can move along with the switch shaft.

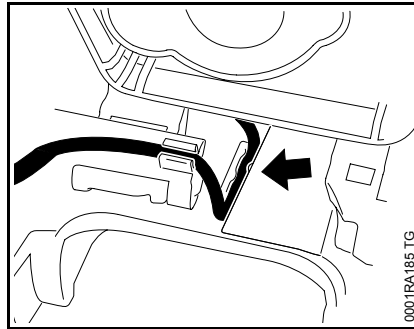


- Check that short circuit wire is properly seated, push it fully into the guide (arrow) if necessary.

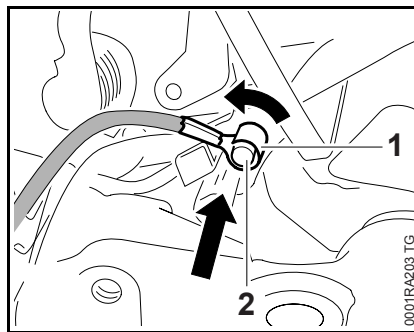

- Fit the ring terminal (1) of the ground wire on the pin (2) and swing it down.

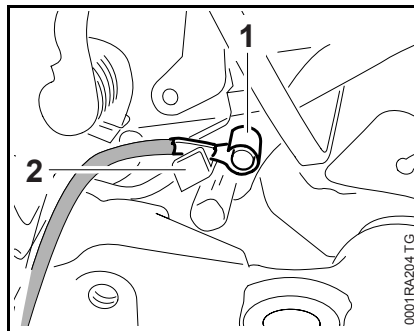

- The ring terminal (1) must engage behind the lug (2).

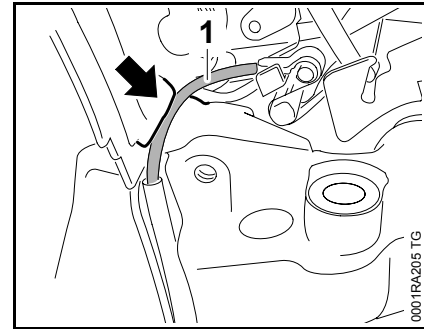

- Fit the contact spring, [7.7.4](#)
- Push the ground wire (1) into the guide (arrow).
- Reconnect the choke rod, [10.3.3](#)
- Reassemble all other parts in the reverse sequence.
- Tightening torques, [2.5](#)



### 7.7.3 Ground Wire


A faulty ground wire may impair or prevent operation of the short circuit wire.

The ground wire is combined with the short circuit wire in a wiring harness. If damaged, the complete wiring harness must be replaced


- Check for contact and continuity and replace the short circuit wire if necessary, [7.7](#)


### 7.7.4 Contact Spring

- Remove the shroud,  6.4
- Remove the choke rod,  10.3.3

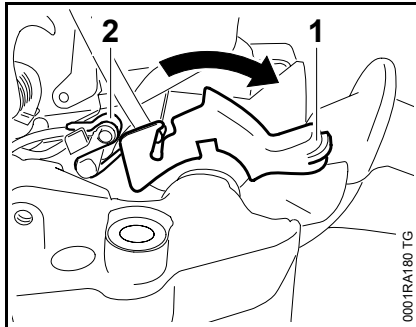


- Move the switch shaft (1) towards the tank housing until the contact spring (2) is free.

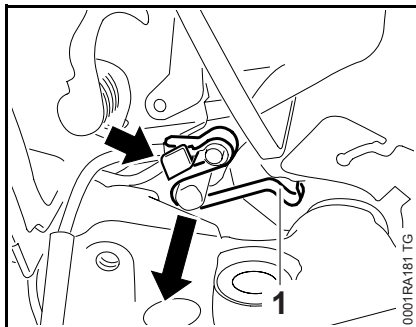


- Lift the contact spring (1) over the lug (arrow) and pull it out.
- Check the contact spring and replace it if necessary,  7.7.4


### Installing

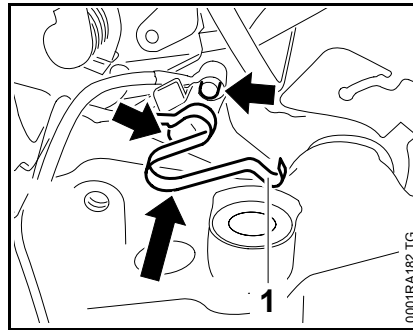


- Push the contact spring (1) onto the pin (arrows) as far as stop.

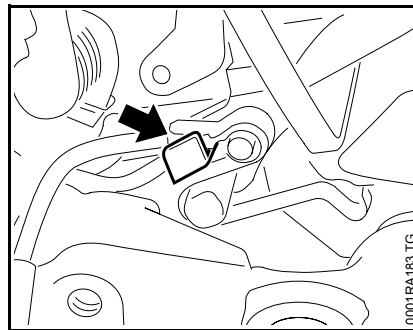


Make sure the lug (arrow) locks the contact spring in position.

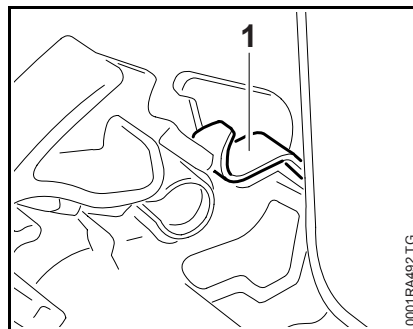



- Lift the contact spring (1) and push it over the switch shaft.

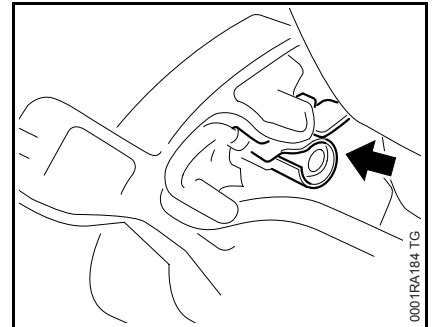

- Check operation
  - short circuit wire's connector must touch the contact spring (arrow) in position "0".
- Reassemble all other parts in the reverse sequence.

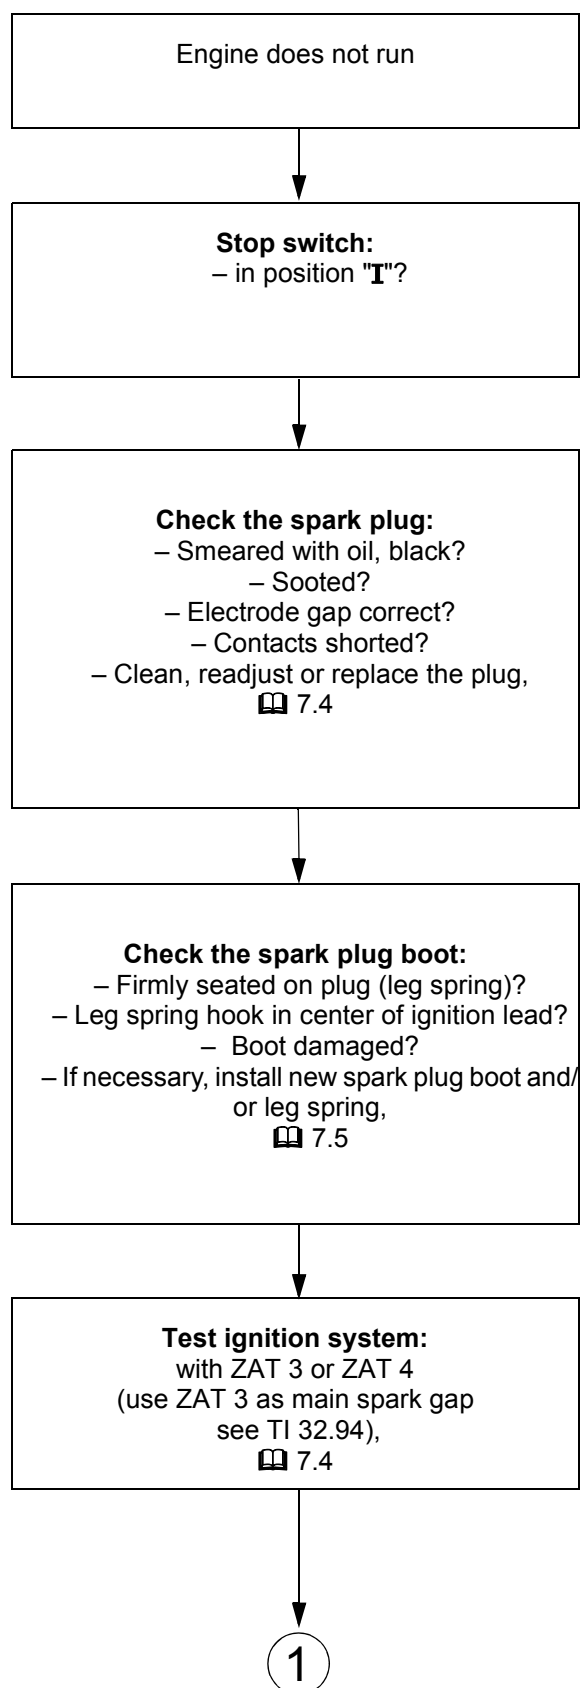

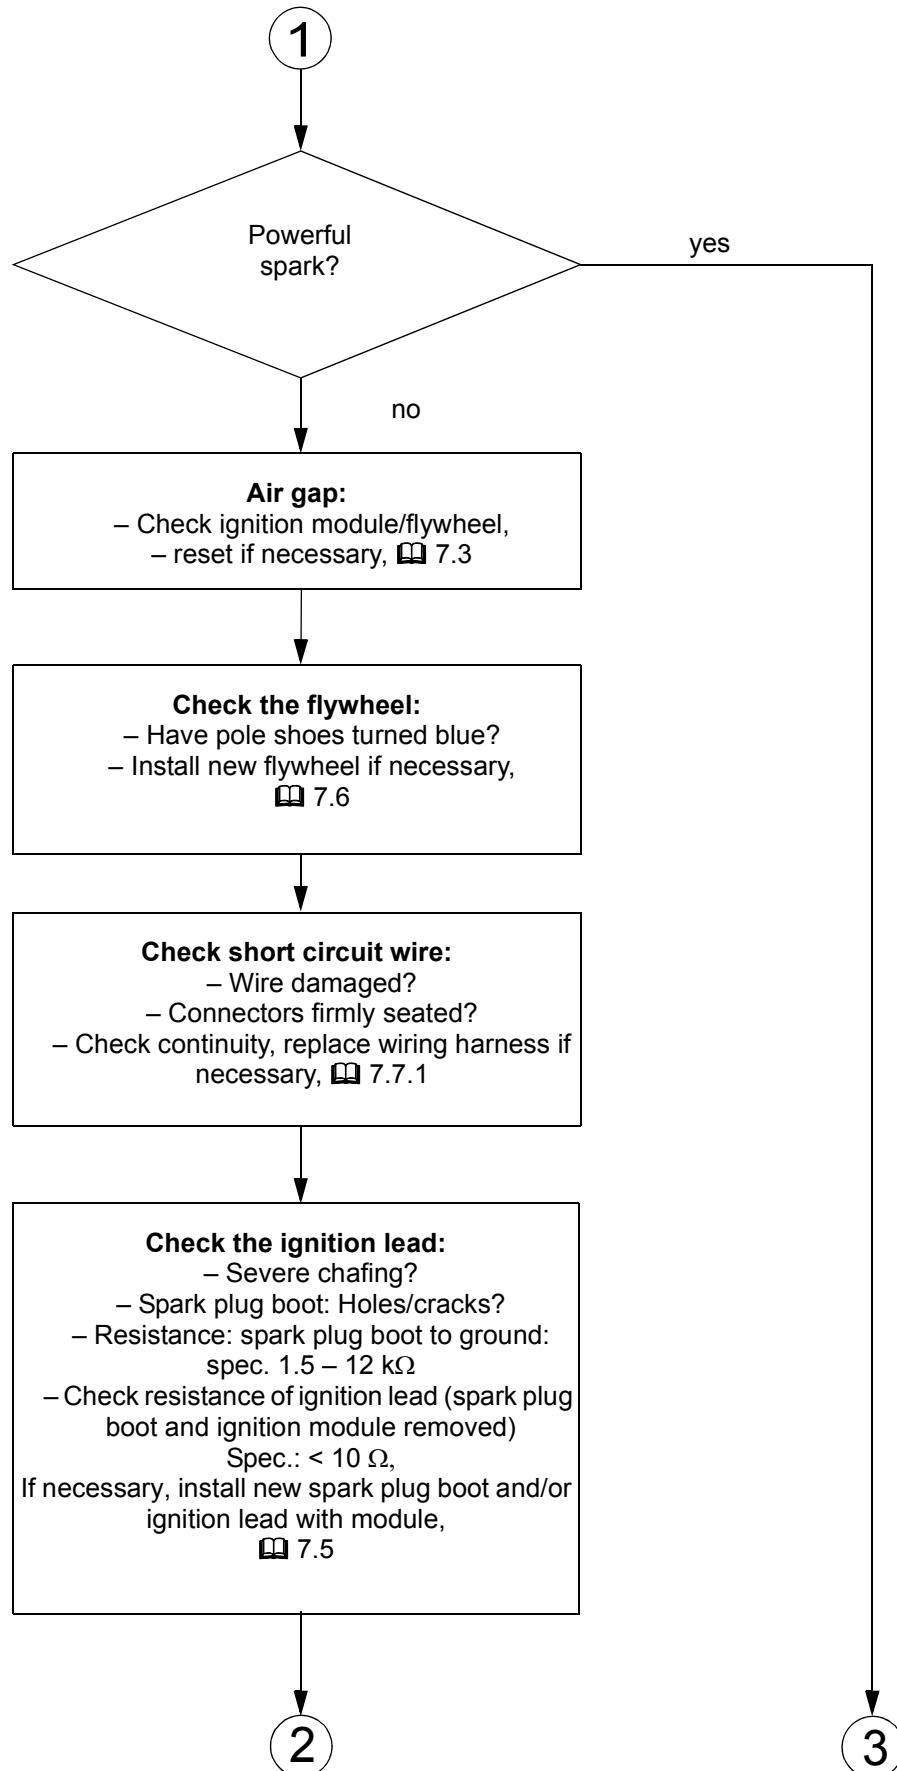

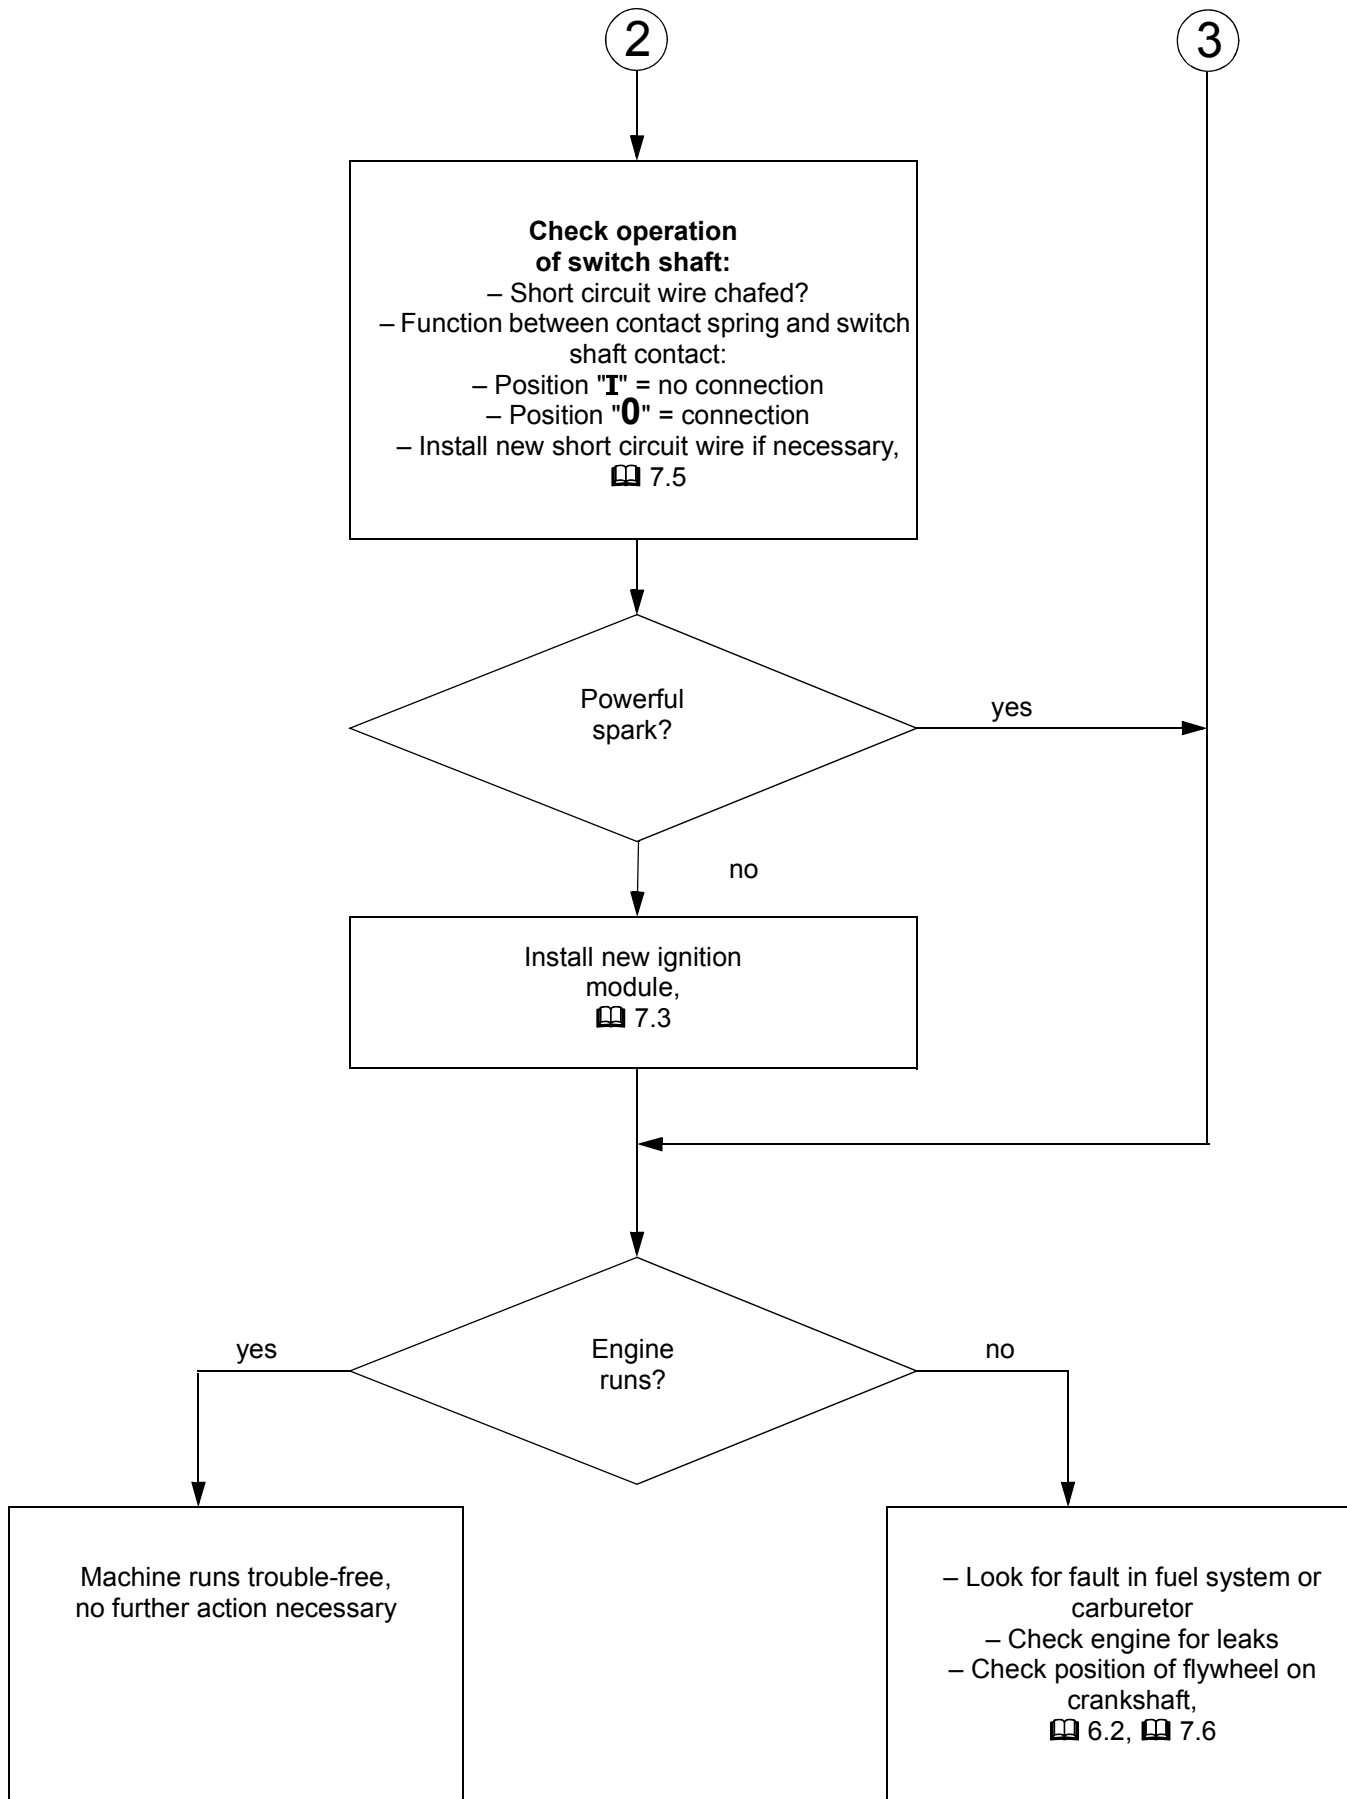

## 8. Rewind Starter

### 8.1 General

If the action of the starter rope becomes very stiff and the rope rewinds very slowly or not completely, it can be assumed that the starter mechanism is in order but plugged with dirt. At very low outside temperatures the lubricating oil on the rewind spring may thicken and cause the spring windings to stick together. This has a detrimental effect on the function of the starter mechanism.

In such a case it is sufficient to apply a few drops of a standard solvent-based degreasant (containing no chlorinated or halogenated hydrocarbons) to the rewind spring.


Carefully pull out the starter rope several times and allow it to rewind until its normal smooth action is restored.

Before installing, lubricate the rewind spring and starter post with STIHL special lubricant, [15](#).


If clogged with dirt or pitch, the entire starter mechanism, including the rewind spring, must be removed and disassembled. Take particular care when removing the spring.

- Clean all components.

### 8.2 Fan housing

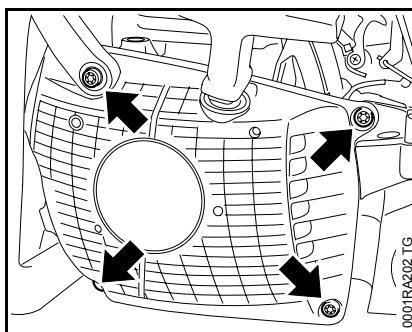


- Remove the shroud, [6.4](#)
- Take out the screws (arrows).
- Lift the hand guard a little and remove the fan housing.

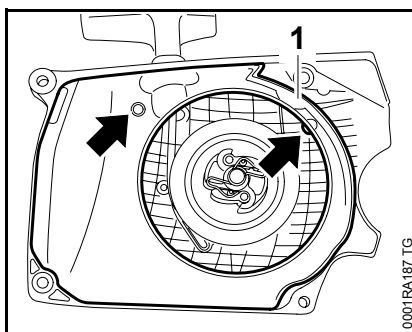


- Pry the segment (1) off the lugs (arrows) and lift it away.
- Examine the fan housing and segment and replace if necessary.

### Installing

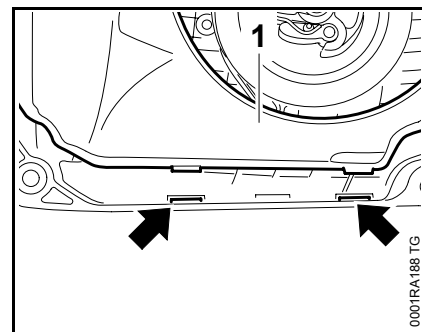


- Engage the segment (1) in the slots (arrows) in the fan housing first and then swing it into position.
- Push the segment (1) into the lugs as far as stop.
- Reassemble in the reverse sequence.
- Tightening torques, [2.5](#)

### 8.3 Pawls

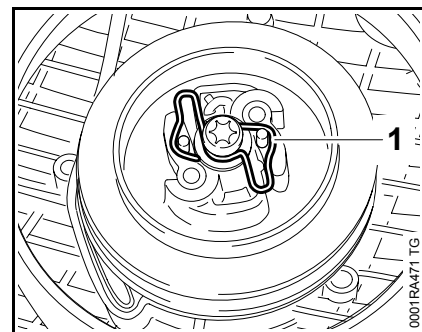


- Remove the fan housing, [8.2](#)
- Relieve tension of rewind spring, [8.4](#)
- Carefully ease the spring clip (1) off the starter post.

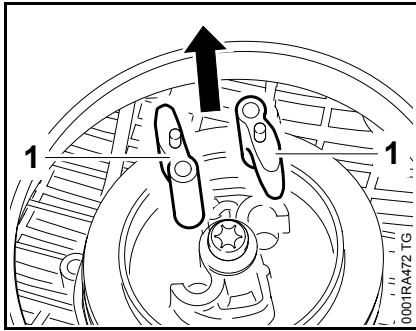


- Remove the pawls (1).


### Installing

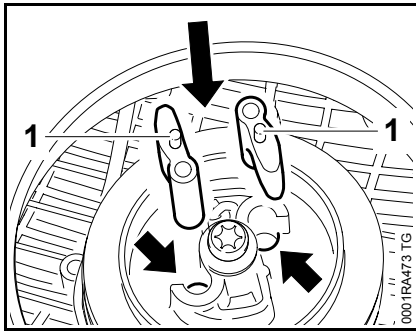

- Fit the new pawls in the bores (arrows) and lubricate the pegs (1), [15](#)

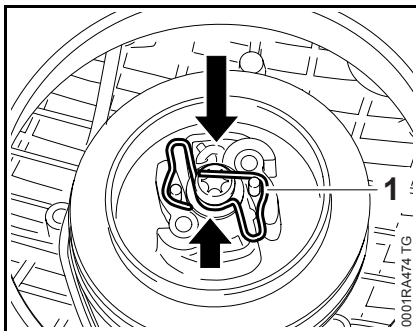

- Position the spring clip (1) so that its loops engage the pegs on the pawls. The rounded part of the spring clip (arrow) must engage the starter post's groove.
- Push the straight part of the spring clip over the starter post until it snaps into the groove.

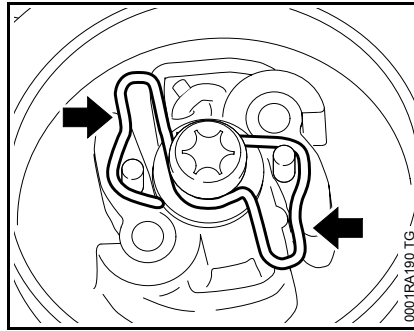


The spring clip's guide loops must be in line with the pawls (arrows).

### Check operation.

- Pull the starter rope, the rotor turns and the pegs on the pawls move in the direction of spring loops – the pawls move outwards.
- Reassemble all other parts in the reverse sequence.

## 8.4 Rope Rotor

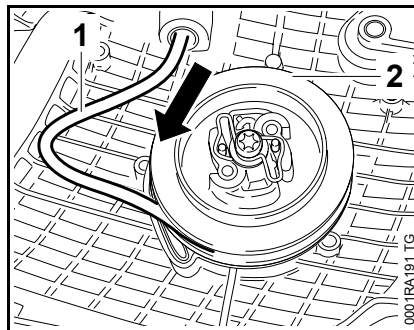


### Relieving tension of rewind spring

The system will not be under tension if either the starter rope or rewind spring is broken.

- Remove the fan housing and the segment, [8.2](#)
- Pull out the starter rope (1) about 5 cm and hold the rope rotor (2) steady.

- Take three full turns of the rope off the rope rotor.
- Pull out the rope with the starter grip and slowly release the rope rotor.
- Remove the starter rope or remaining rope from the rotor, [8.5](#)
- Remove the spring clip and pawls, [8.3](#)

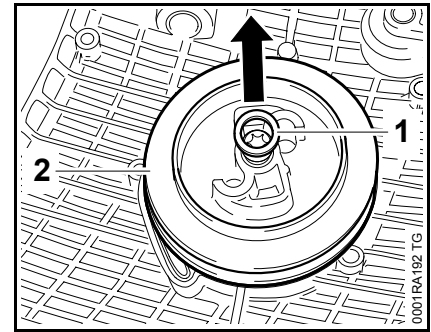


- Remove the cover washer (1).

Rewind spring must be relaxed.

- Carefully remove the rope rotor (2).
- Check the rope rotor and replace if necessary.
- Coat bore in rope rotor with STIHL special lubricant, [15](#)

## Installing

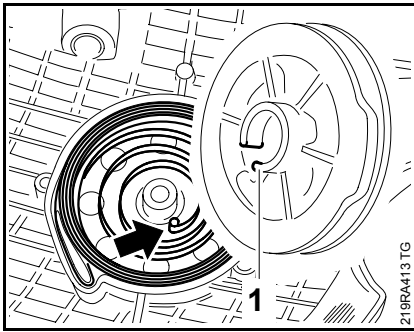

- Fit the rope rotor on the starter post so that the inner spring loop (arrow) engages the recess (1).

The recess in the hub of the rope rotor is the anchor point for the spring.

- Fit the cover washer.
- Install the pawls and spring clip, 8.3
- Install the starter rope, 8.5
- Tension the rewind spring, 8.6
- Lubricate pegs on pawls with grease, 15
- Reassemble all other parts in the reverse sequence.


## 8.5 Starter Rope / Grip

- Remove the fan housing and the segment, 8.2
- Relieve tension of rewind spring, 8.4


The system will not be under tension if the starter rope is broken.

- Remove remaining rope from the rope rotor and starter grip.


Do not shorten the starter rope.

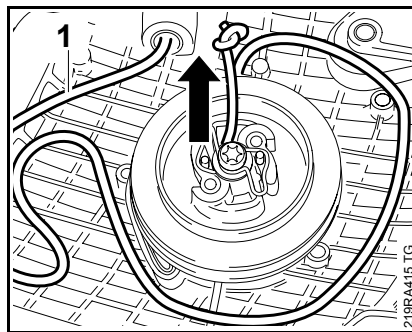

- Push the end of the starter rope (1) out a little and undo the knot.
- Pull the starter rope out of the rope rotor and fan housing.

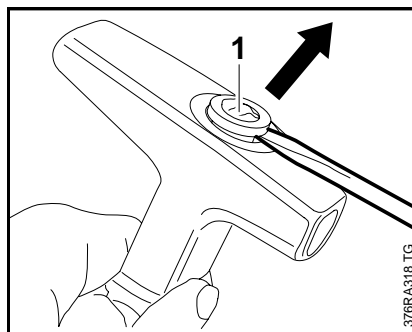

- Use a suitable tool to pry the nipple (1) out of the starter grip.

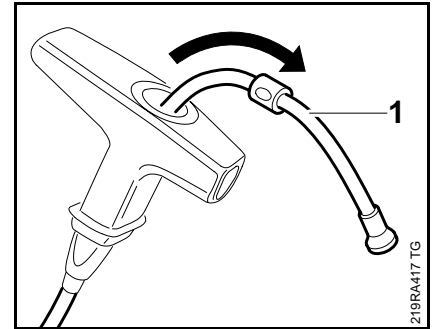


- Pull the starter rope (1) out of the grip.


- Check the starter rope and replace if necessary.

Do not shorten the starter rope.

## Installing

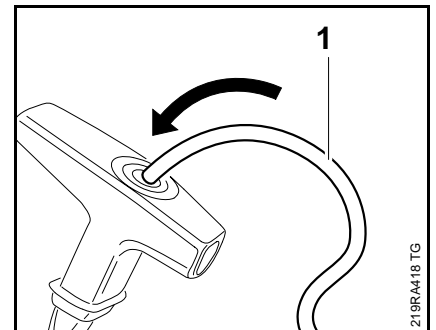


- Thread the new starter rope (1) through the top of the grip as far as stop.

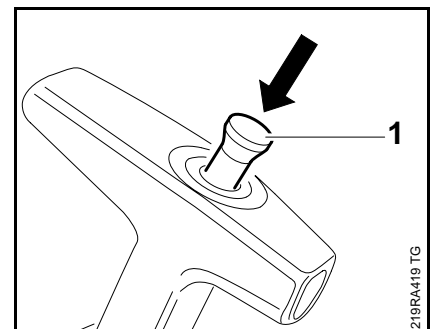


- Press the nipple (1) into the starter grip until it engages.




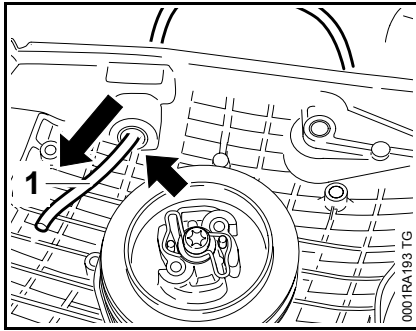

- Thread the starter rope (1) through the guide bushing (arrow).

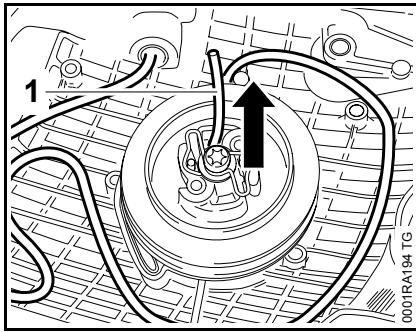


- Thread the starter rope (1) through the side of the rope rotor.
- Secure the rope (1) with a simple overhand knot.

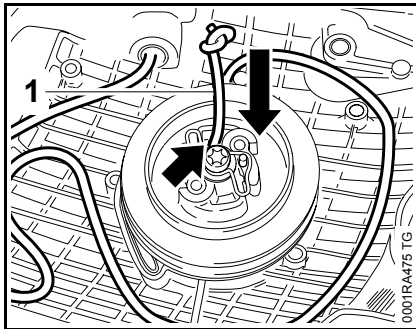

- Pull the rope (1) back into the rotor until the knot locates in the recess (arrow).

- Tension the rewind spring, 8.6
- Install the segment and fan housing, 8.2
- Tightening torques, 2.5


## 8.6 Tensioning the Rewind Spring

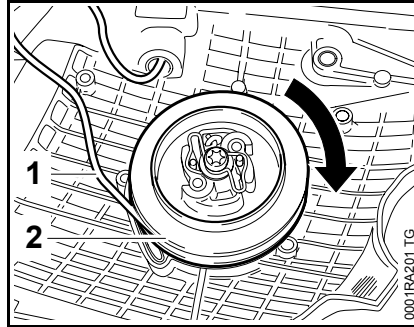


- Remove the fan housing, 8.2
- Pull out a short length of starter rope (1).
- Use the starter rope (1) to rotate the rope rotor (2) six turns clockwise,

The rewind spring is now tensioned.


Hold the rope rotor steady since it will otherwise spin back and may damage the rewind spring.

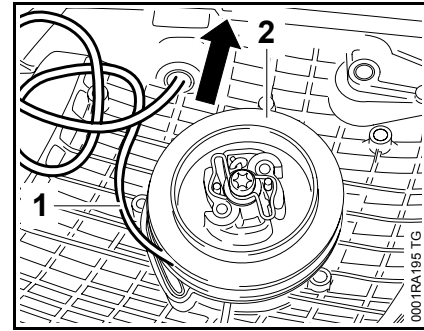

- Hold the rope rotor (2) steady.
- Pull out the twisted rope (1) with the starter grip and straighten it out.

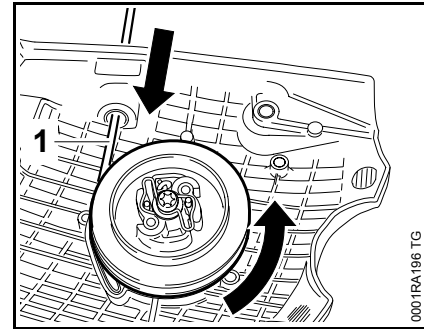

- Hold the starter grip (1) firmly to keep the rope tensioned.
- Let go of the rope rotor and slowly release the starter rope so that it can rewind properly.

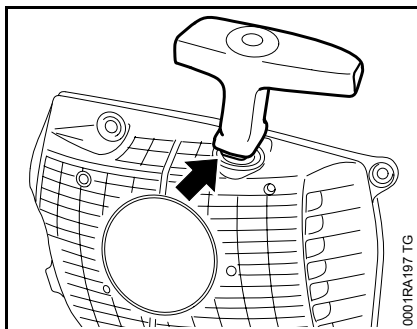

The rewind spring is correctly tensioned when the starter grip sits firmly in the rope guide bushing (arrow) without drooping to one side. If this is not the case, tension the spring by one additional turn.

When the starter rope is fully extended, it must still be possible to rotate the rope rotor another full turn before maximum spring tension is reached. If this is not the case, reduce spring tension since there is otherwise a risk of breakage.

#### **To reduce spring tension:**

Pull the rope out, hold the rope rotor steady and take off one turn of the rope.

- Install the fan housing, 8.2
- Tightening torques, 2.5

## **8.7 Replacing the Rewind Spring**

- Troubleshooting, 3.4


The replacement spring, in a spring housing, comes ready for installation.

- Wear a face shield and work gloves to protect your eyes and hands from injury.
- Remove the fan housing and the segment, 8.2
- Relieve tension of rewind spring if necessary and remove the rope rotor, 8.4
- Remove any remaining pieces of old spring.

If the rewind spring can no longer be properly tensioned, install a new spring.

Even a worn rewind spring is still pre-loaded in the installed condition.


- Place a blanket over the work area and pull the rewind spring out of the fan housing.

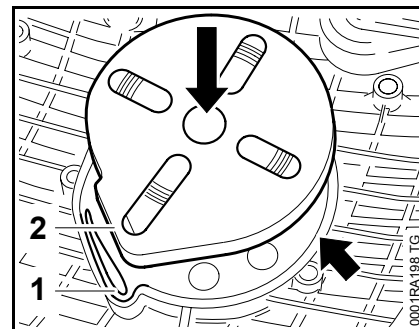

- Lubricate the replacement spring with frame with a few drops of STIHL special lubricant before installing, 15
- Position the replacement spring with frame in the fan housing – the anchor loop (2) must be above the lug (1).
- Push the rewind spring with frame into its seat (arrow) in the fan housing. The frame slips off during this process.


The rewind spring may pop out and unwind.

- Remove the frame.

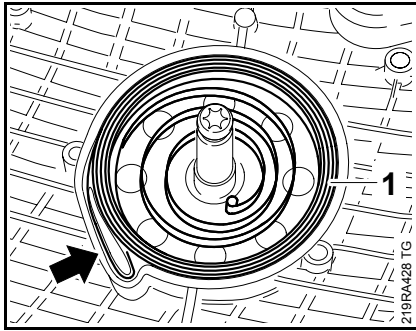


Make sure that the rewind spring (1) is properly seated and the outer anchor loop is engaged on the lug (arrow). If necessary, use suitable tools to push the rewind spring fully into its seat in the fan housing.

If the rewind spring has popped out, refit it in the fan housing as follows:

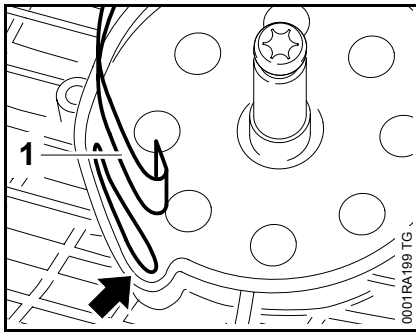


- Arrange the spring (1) in its original position.
- Fit the anchor loop in its seat (arrow) in the fan housing.

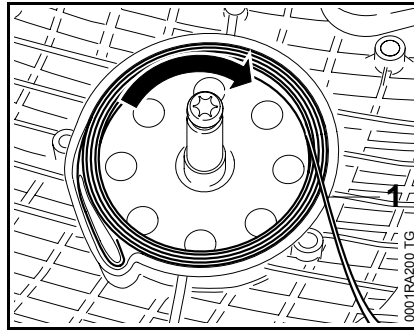

- Fit the rewind spring (1) clockwise in the housing.
- Hold the spring windings so that they cannot pop out.

Make sure that the rewind spring (1) is properly seated. If necessary, use suitable tools to push the rewind spring fully into its seat in the fan housing



- Secure the spring so that it cannot pop out.
- Install the rope rotor,  8.4
- Reassemble all other parts in the reverse sequence.


## 9. Servicing the AV System

Vibration-damping springs and buffers are used for the connection between the handlebar, tank housing and engine housing.

Damaged springs and buffers must always be replaced.


### 9.1 Buffer on Oil Tank


- Remove the handlebar,  9.6  
Machines with handle heating,  9.7

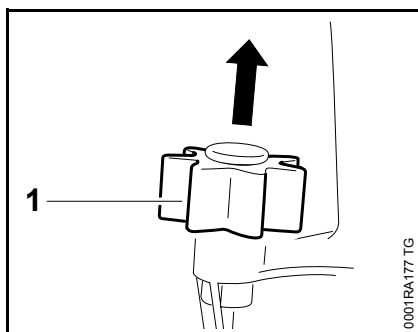

- Pull off and replace the buffer (1).

### Installing

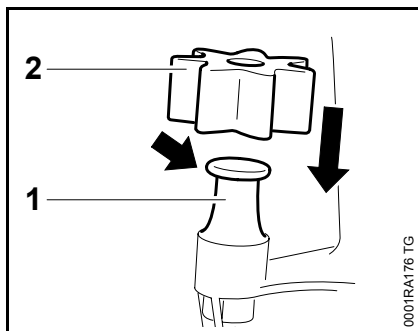


- Use STIHL press fluid to simplify assembly,  15
- Push the buffer (2) onto the peg (1) on the handlebar as far as stop.


The peg's head (arrow) must locate properly on the buffer.

- Reassemble all other parts in the reverse sequence.


### 9.2 AV Spring on Oil Tank

The antivibration spring is at the forward end of the oil tank and is secured to the underside of the machine.

- Remove the handlebar,  9.6

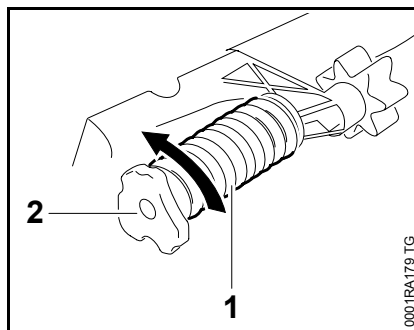


- Unscrew the AV spring (1).
- Unscrew the bearing plug (2).
- Check the AV spring and plug, replace if necessary.

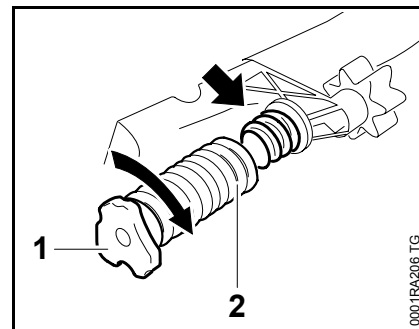


- Screw home the bearing plug (1).
- Screw the AV spring (2) into the handlebar (arrow) as far as stop.
- Reassemble all other parts in the reverse sequence.


#### 9.2.1 AV Spring on Oil Tank - Machines with Heating

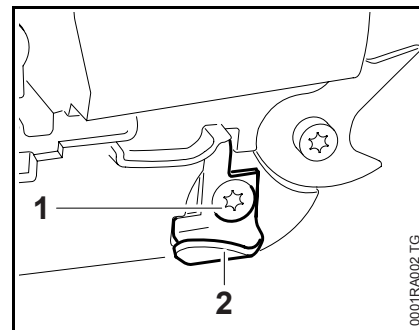


- Take out the screw (1) and remove the chain catcher (2).

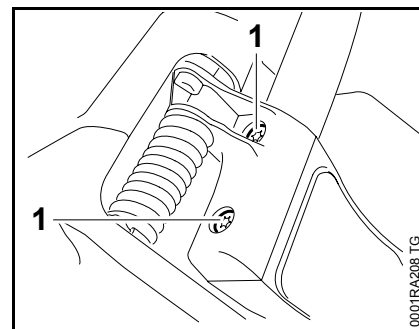


- Take out the screws (1).

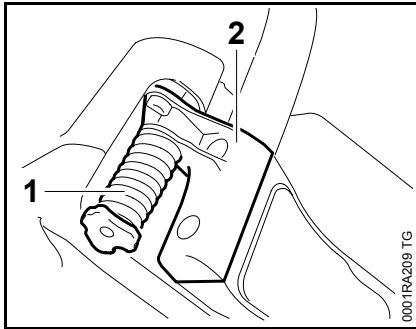

- Pry out the AV spring (1).
- Remove the complete bracket (2).

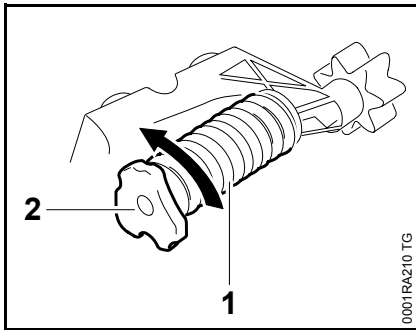


- Unscrew the AV spring (1).
- Unscrew the bearing plug (2).
- Check the AV spring and plug, replace if necessary.

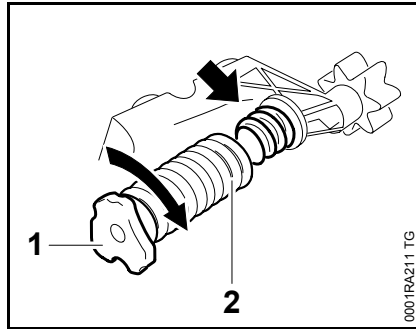


- Screw home the bearing plug (1) as far as stop.
- Screw the AV spring (2) into the bracket (arrow) as far as stop.
- Reassemble in the reverse sequence.
- Tightening torques, 2.5

### 9.3 AV Spring on Fuel Tank


- Remove AV spring from handlebar, 9.4
- Remove the stop buffer, 9.5

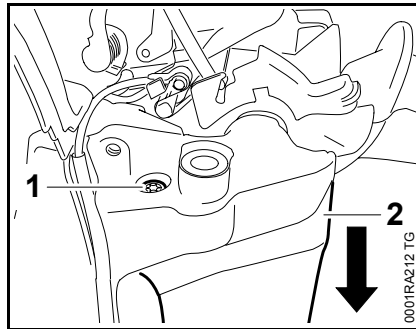

- Take out the screw (1).
- Lower the tank housing (2).

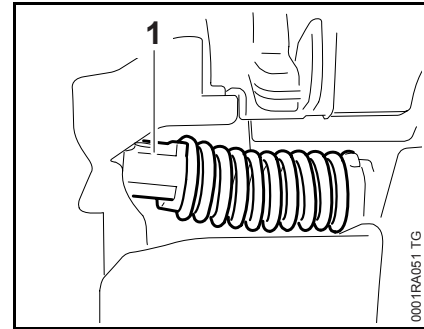


- Pry out the AV spring (1).

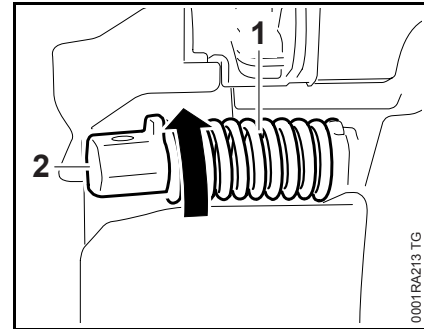


- Unscrew the AV spring (1).
- Unscrew the bearing plug (2).
- Check the AV spring and plug, replace if necessary.

### Installing

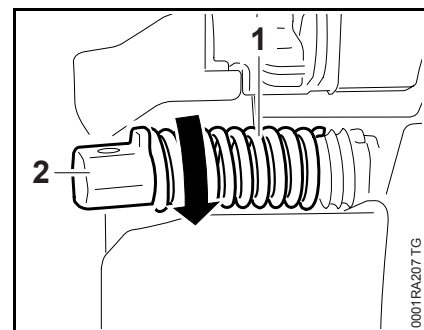

- Screw home the bearing plug (2) as far as stop.
- Screw the AV spring (1) into the plug (arrow) on the tank housing as far as stop.

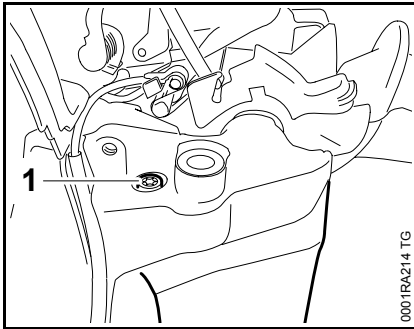


- Tighten down the screw (1) firmly.
- Reassemble all other parts in the reverse sequence.
- Tightening torques, 2.5


#### 9.4 AV Spring on Handlebar

The AV spring is located between the handle frame and cylinder.


- Remove the shroud, 6.4

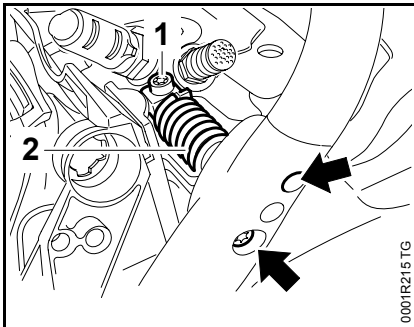

- Take out the screws (1) and (arrows).
- Remove the complete AV spring (2).

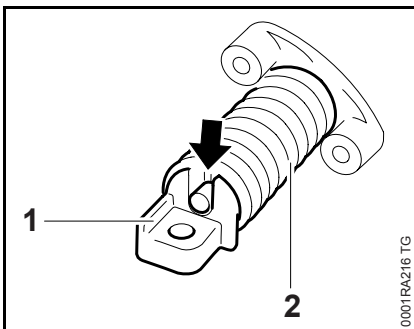


- Unscrew the bearing plug (1) and disconnect the retainer (arrow).
- Unscrew the spring (2) and pull out the retainer (arrow).

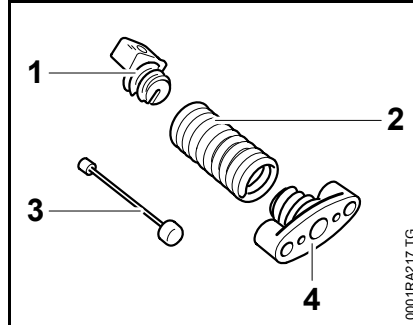


- Inspect the bearing plug (1), spring (2) and bracket (4) and replace if necessary.

#### Installing

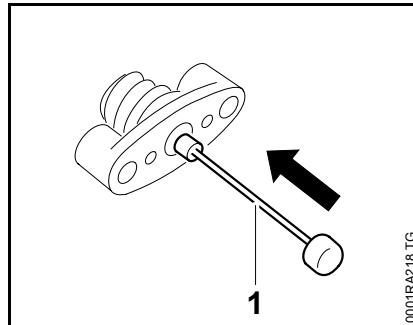


- Push the retainer (1), small nipple first, into the bracket.

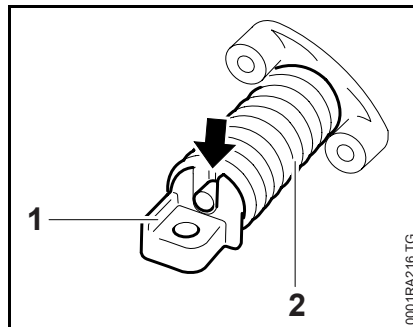


- Screw the spring onto the bracket.
- Push the retainer (arrow) into the bearing plug (1) and attach it.

- Screw the bearing plug (1) into the spring as far as stop.

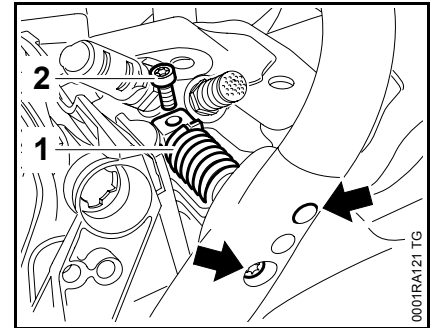


- Push the complete AV spring (1) into the handlebar.
- Insert the screws (arrows) and tighten them down firmly.
- Coat the screw (2) with Loctite, fit it and tighten it down firmly, 15
- Reassemble all other parts in the reverse sequence.
- Tightening torques, 2.5


### 9.4.1 Machines with Heating

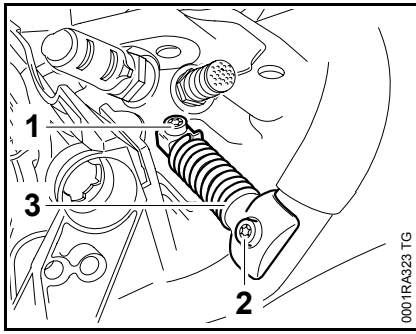

- Take out the screws (1) and (2).
- Remove the complete AV spring (3).

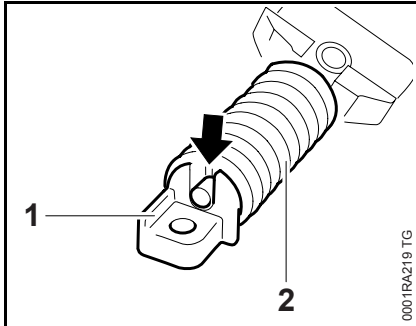


- Unscrew the bearing plug (1) and disconnect the retainer (arrow).
- Unscrew the spring (2) and pull out the retainer (arrow).

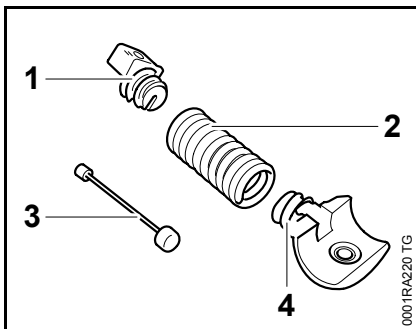


- Inspect the bearing plug (1), spring (2) and bracket (4) and replace if necessary.


### Installing

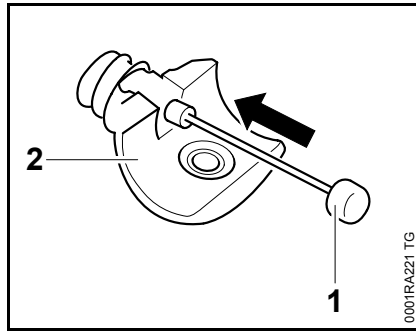

- Push the retainer (1), small nipple first, into the bracket (2).

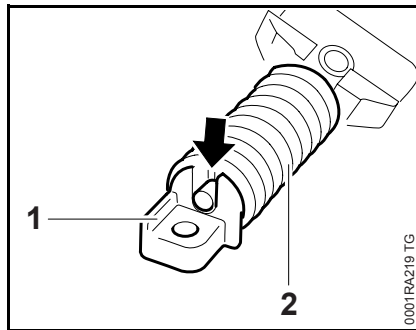

- Screw the spring (2) onto the bracket.
- Push the retainer (arrow) into the bearing plug (1) and attach it.
- Screw the bearing plug (1) into the spring (2) as far as stop.

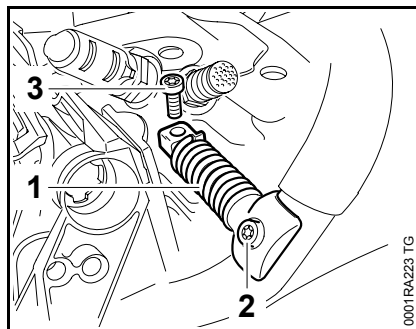


- Position the complete AV spring (1) on the handlebar.

- Tighten down the screw (2) firmly.
- Coat the screw (3) with Loctite, fit it and tighten it down firmly, 15
- Reassemble all other parts in the reverse sequence.
- Tightening torques, 2.5

### 9.5 Annular and Stop Buffers


The stop buffers are located between the tank housing and crankcase. They are fitted at the ignition and clutch sides.

#### Stop Buffer at Clutch Side

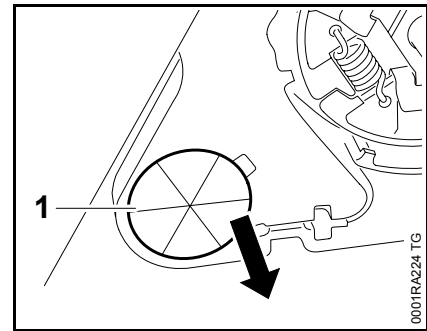

- Pry out the stop buffer (1).
- Check the stop buffer and replace if necessary.


## Installing

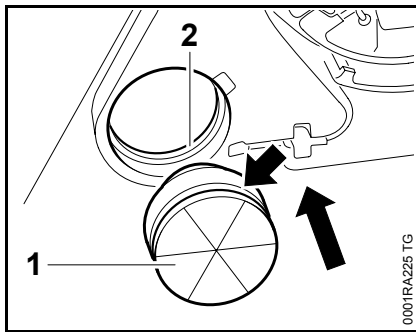

- Position the stop buffer (1) with its tapered end facing the crankcase.
- Use STIHL press fluid to simplify assembly, [15](#)
- Push home the stop buffer (1) until its groove (arrow) engages the housing rib (2).


### Annular Buffer at Ignition Side

- Remove the ignition module, [7.3](#)

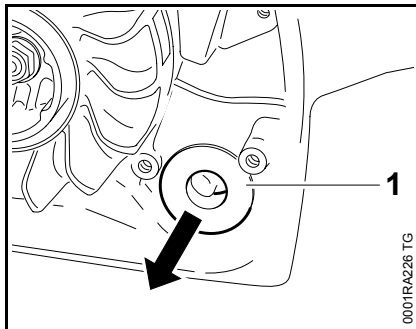

- Pry out the annular buffer (1).
- Check the annular buffer and replace if necessary


## Installing

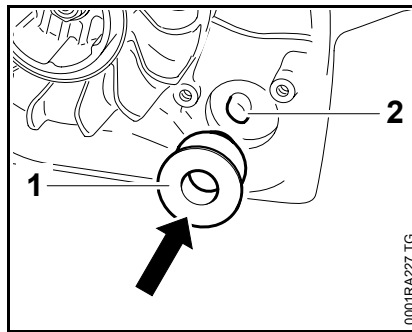


- Line up the annular buffer (1) with its tapered end facing the crankcase.
- Push home the annular buffer (1) so that its bore engages the peg (2) in the tank housing.
- Reassemble all other parts in the reverse sequence.
- Tightening torques, [2.5](#)

## 9.6 Handlebar


- Remove the shroud, [6.4](#)
- Remove AV spring from handlebar, [9.4](#)

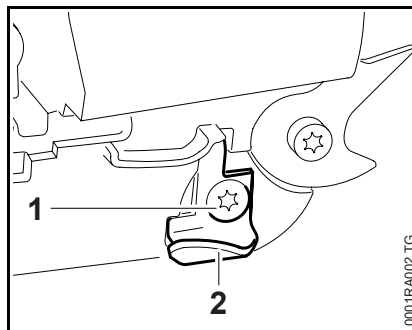


- Take out the screw (1) and remove the chain catcher (2).

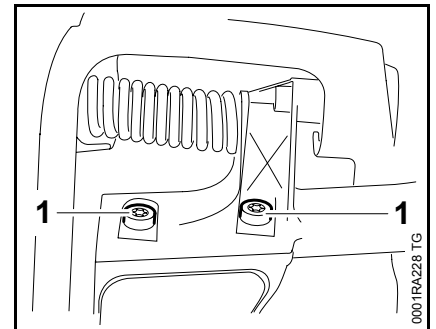

- Remove the screws (1) from the underside of the machine.

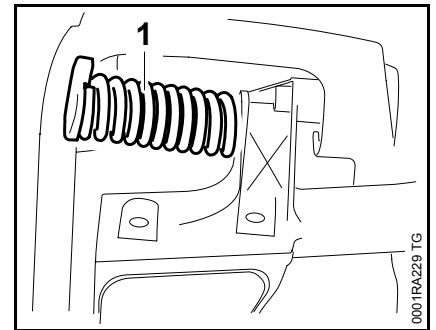


- Ease the tank housing to one side and pry out the AV spring (1).

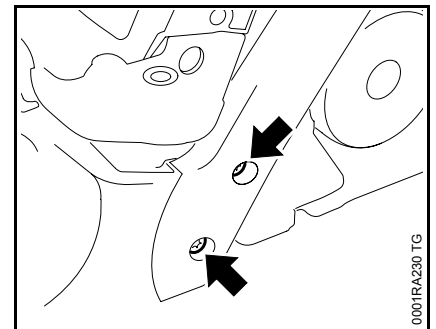


- Take out the screws (arrows).



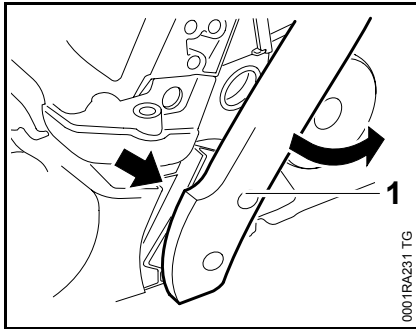


- Ease the handlebar (1) sideways and take it out of the guide (arrow).

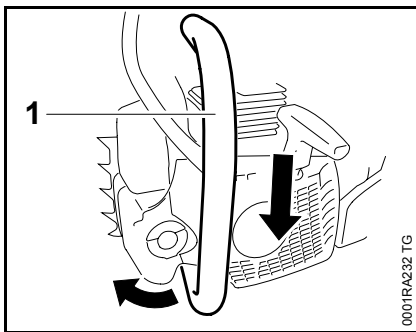


- Push the handlebar (1) out of the lower guide.
- Remove the handlebar (1), check it and replace if necessary.
- Check the annular buffer and replace it if necessary, [13.7.1](#)


## Installing

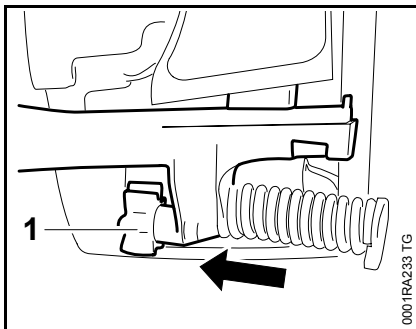


- Push the handlebar, buffer (1) first, into the crankcase.

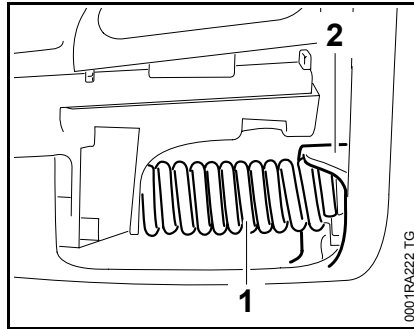

- Push the AV spring (1) into its seat (2).

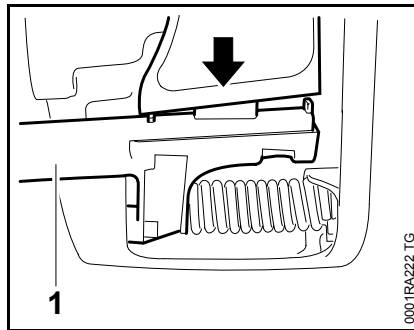

- Position the handlebar (1) against the guide (arrow).

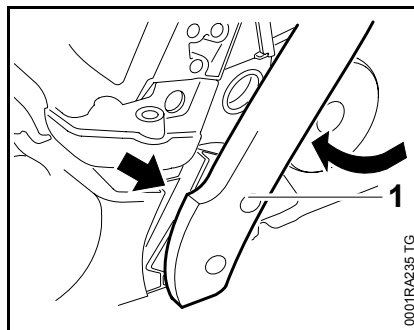


- Ease the handlebar (1) sideways and place it in the guide (arrow).
- Insert the screws and tighten them down firmly.
- Reassemble all other parts in the reverse sequence.
- Tightening torques, [2.5](#)

## 9.7 Handlebar with Heating


### Removing

The handlebar on this version is equipped with a heating system – the electrical wires have to be disconnected.


- Troubleshooting, [13.7.1](#)
- Remove the shroud, [6.4](#)
- Remove the fan housing, [8.2](#)
- Remove AV spring from the oil tank, [9.2.1](#)
- Remove AV spring from handlebar, [9.4.1](#)
- Remove the carburetor carrier, [12.8](#)
- Remove the ignition module, [7.3](#)
- Remove the interlock lever, [10.2](#)
- Remove the throttle rod, [10.3.4](#)

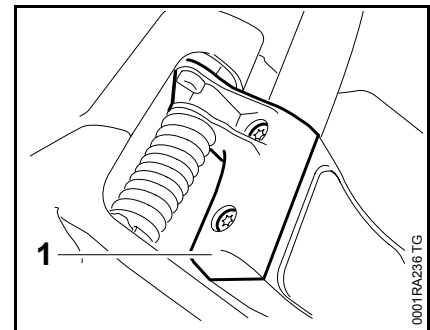


- Remove the bracket (1), [9.2.1](#)

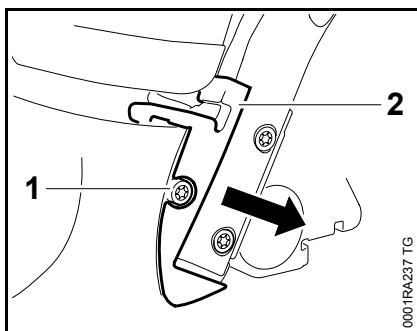


- Take out the screw (1) and remove the bracket (2).

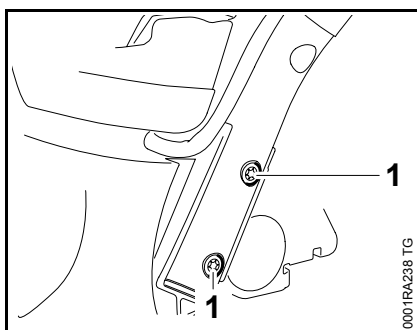


- Take out the screws (1).

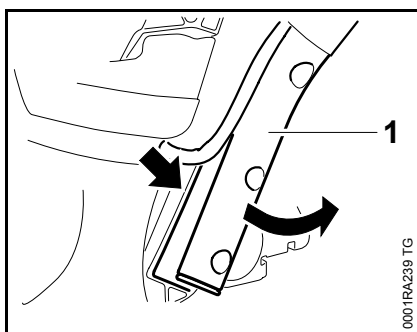

- Ease the handlebar (1) sideways and take it out of the guide (arrow).

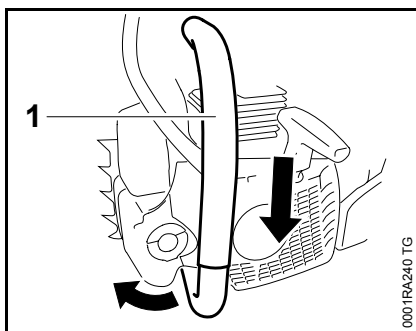


- Push the handlebar (1) out of the lower guide.

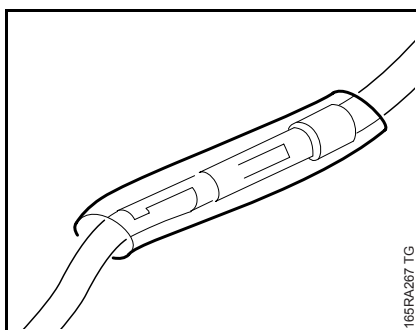


During all the following procedures:

- To reduce the risk of a short circuit, make sure the insulating tubes completely cover the connections.

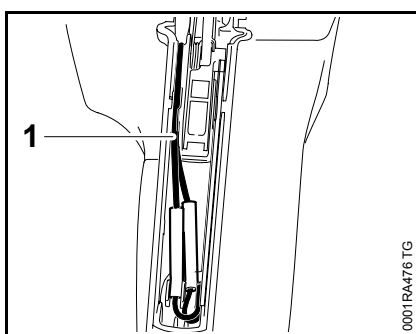


– Pull the wires out of the guides.

- Tug the wiring harness (1) a little to find the right connector.

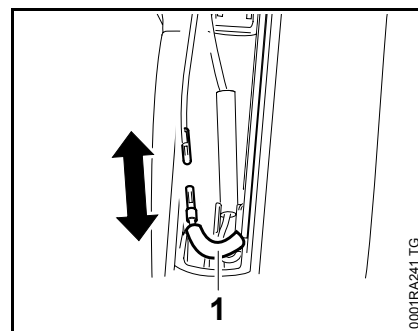


- Push the insulating tube (1) in the direction of the heating element.

- Separate the pin and socket connector.

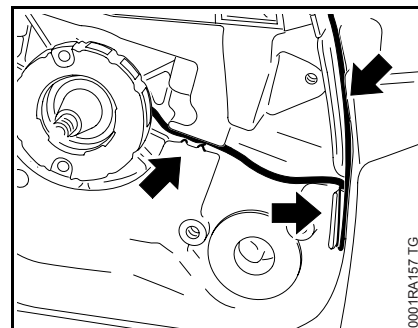


- Pull the generator wire out of the guides (arrows).


It is not necessary to disconnect the connector.

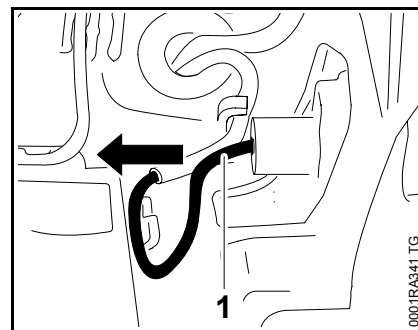


- Pull the connector sleeve with wire (1) out of the heater switch.

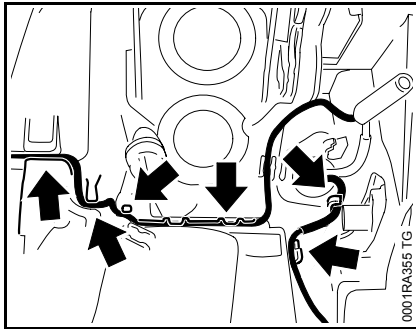


- Pull the wires out of the guides (arrows).

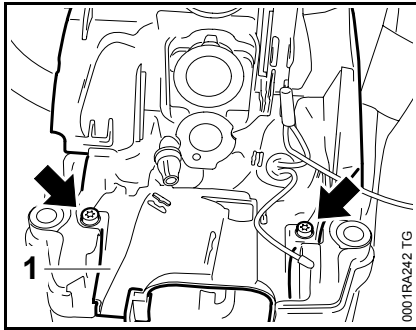


- Take out the screws (arrows).
- Remove the air guide shroud (1) and turn it to one side.

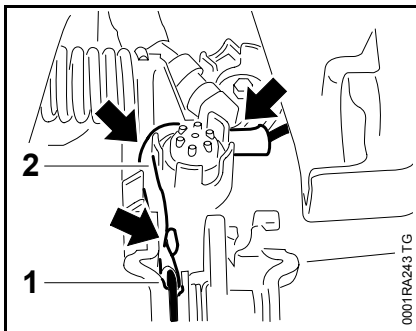


- Take the wire (1) with insulating tube (2) out of the guides (arrows).

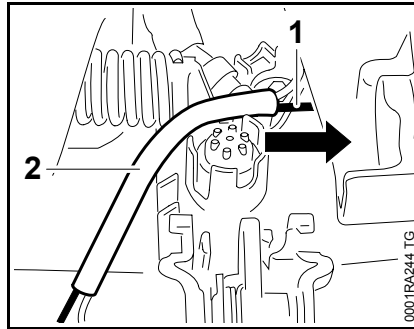


- Pull the handle heating wire (1) out of the insulating tube (2).

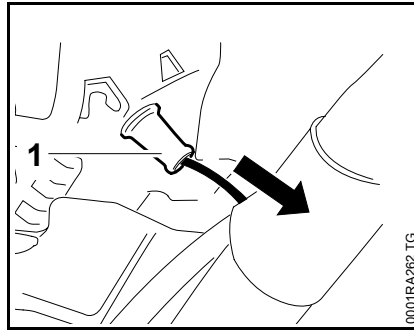


- Pull the wiring harness through the rubber grommet (1) and out of the air guide shroud.

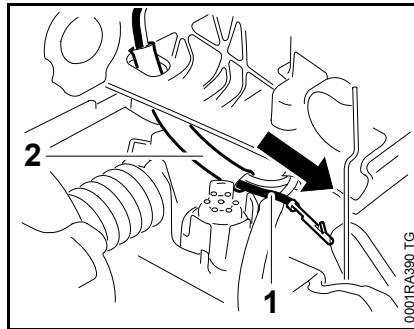

- Pull the wire (1) out of the insulating tube (2).
- Remove the handlebar.

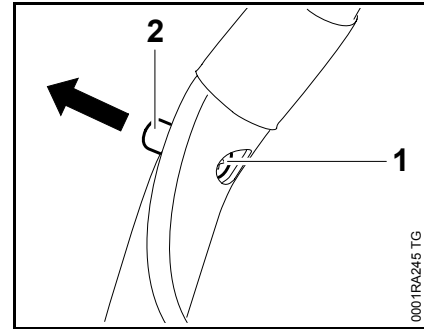


- Pull off the plastic sleeve (2).
- Take out the screw (1).

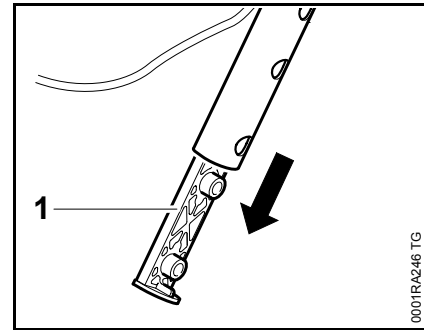


- Pull out the handlebar stiffener (1).
- Check the stiffener and handlebar and replace if necessary.
- Test the handle heating system, [13.7.1](#)
- Push on the plastic sleeve.
- Reassemble in the reverse sequence.


## Installing

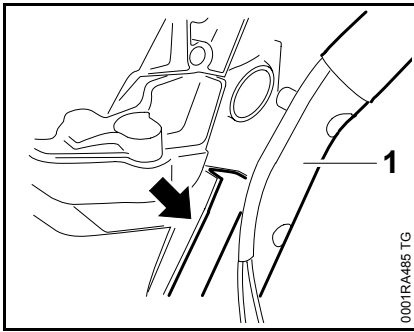


- Fit the handlebar (1) over the machine as far as the guide (arrow).

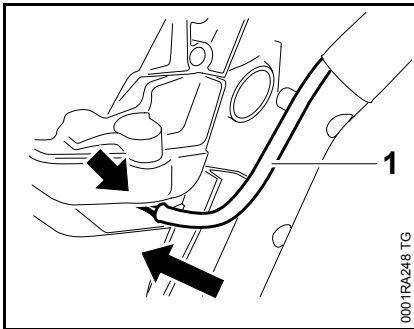


- Fit the wiring harness (1) between the crankcase and tank housings (arrow).

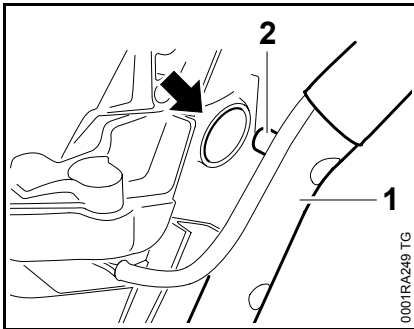


- Place the handlebar (1) in position, making sure the guide pin (2) engages the opening (arrow).

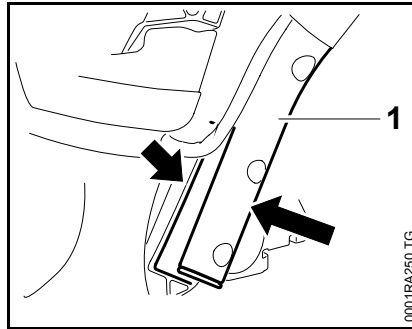


- Ease the handlebar (1) sideways and place it in the guide (arrow).

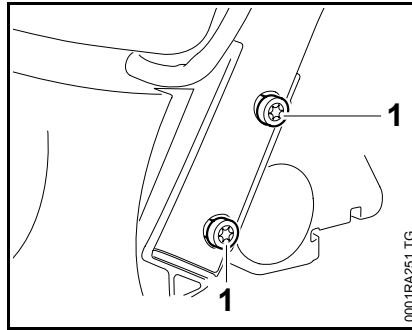


- Fit and tighten down the screws (1) firmly.

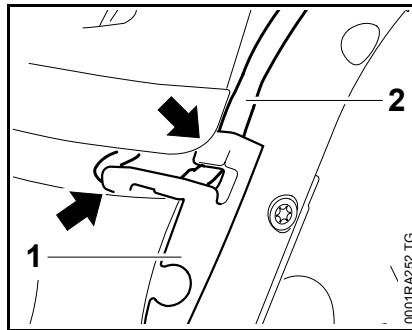


- Fit the bracket (1) and place the insulating tube (2) in the guides (arrows).
  - Check that the insulating tube is not pinched between the housing and bracket.

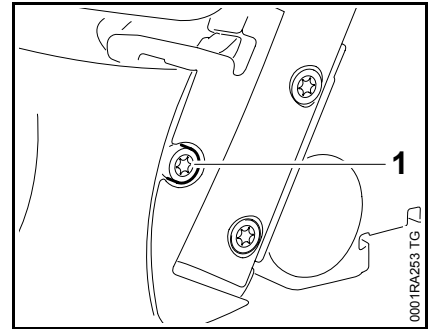


- Tighten down the screw (1) firmly.

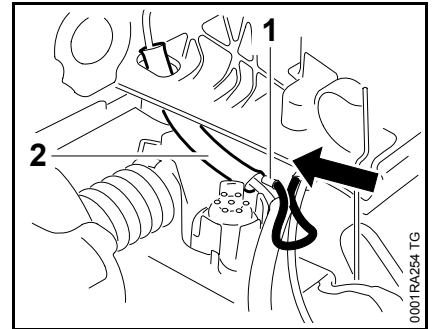


- Push the wire, connector sleeve (1) first, through the insulating tube (2).

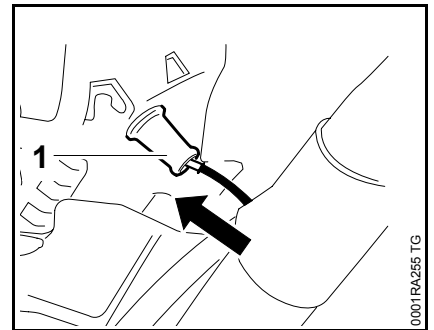


- Push the wire through the rubber grommet (1) in the air guide shroud.

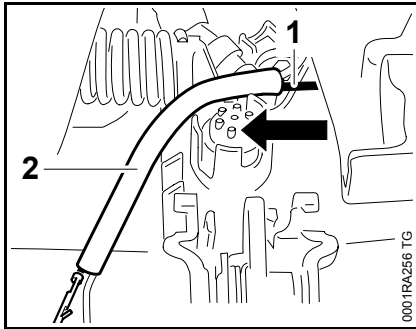


- Push the wires (1) through the insulating tube (2).

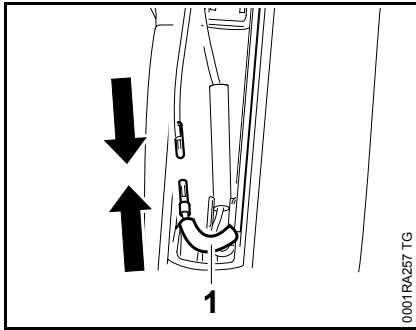


- Before placing the wires in position, make sure they are the same length.
- Push the pins and sockets together until they lock.
- Push the insulating tube (1) over the connector.

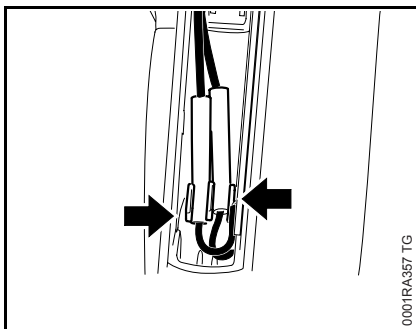


- Insulating tubes must be located in the guides (arrows).

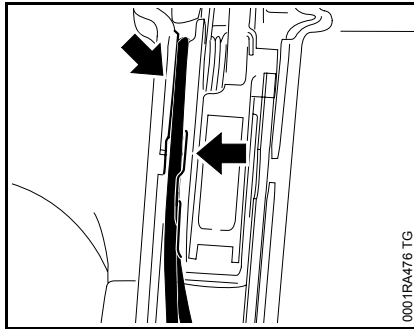

- Push the wires into the guides (arrows).

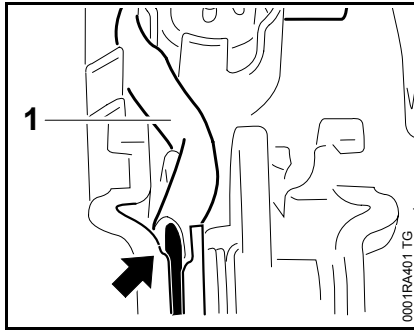


- Position the insulating tube (1) so that it is against the edge (arrow).

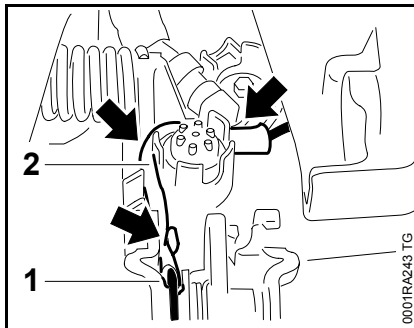


- Starting from the edge (1), push the insulating tube (2) into the guides (arrows).

Make sure the wires are laid neatly and straight (no loops).

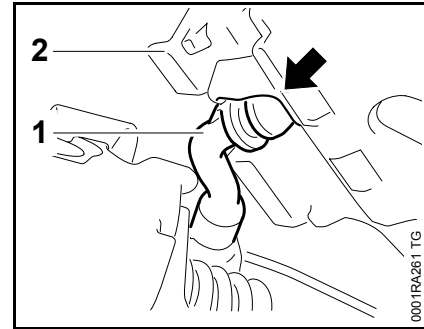


- Pass the fuel hose (1) through the opening (arrow).

- Place the air guide shroud (2) in position.

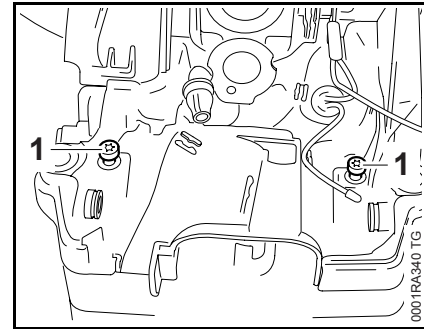


- Fit and tighten down the screws (1) firmly.


Make sure that the wires are not pinched.

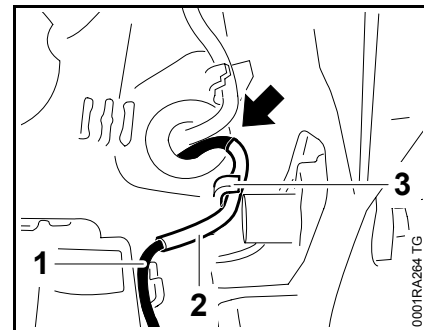


- Position the wire (1) so that the insulating tube (2) is against the edge of the grommet (arrow).
- Fit the wire in the guide (3).

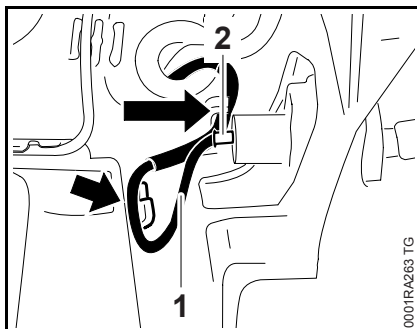

- Push the connector sleeve into the heater switch (2).
- Push the wire (1) into the guide (arrow).

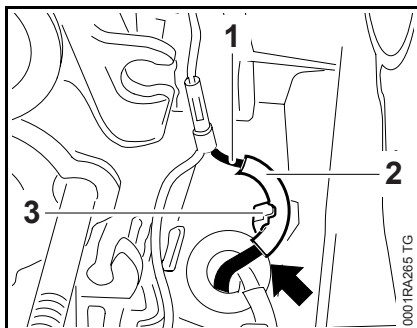


- Position the wire (1) so that the insulating tube (2) is against the edge of the grommet (arrow).
- Fit the wire in the guide (3).

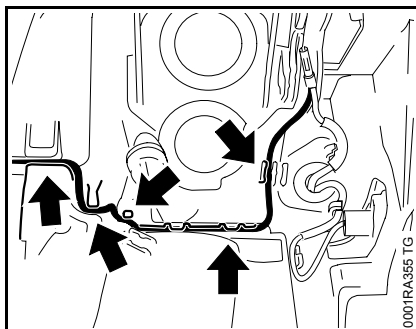

- Push the wire into the guides (arrows).
- Fit the generator wire, [13.7](#)
- Reassemble all other parts in the reverse sequence.
- Tightening torques, [2.5](#)


## 10. Control Levers

### 10.1 Master Control Lever

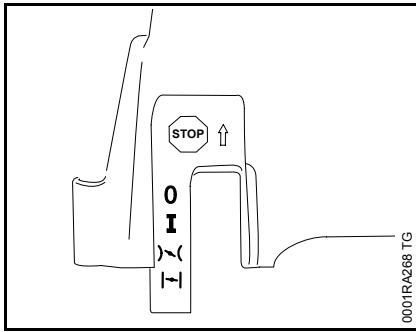


The positions of the Master Control lever are described in the instruction manual.

#### 10.1.1 Removing and Installing

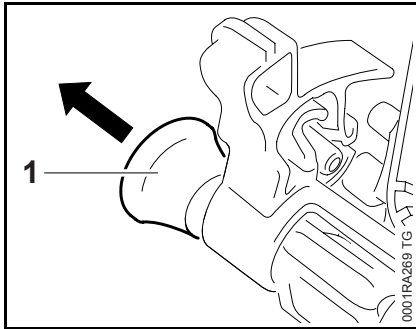


– Remove the filter base,  12.3

- Pull off the rubber buffer (1).

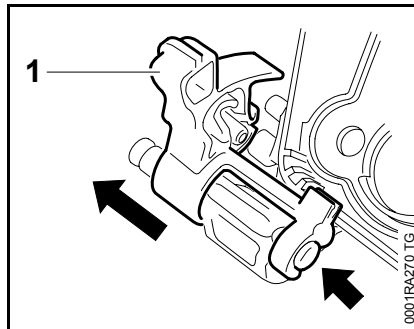


- Pry the switch shaft (1) out of its mount (arrow).
- Lift the switch shaft (1) a little and pull it away.
- Check the switch shaft (1) and replace it if necessary


#### Installing

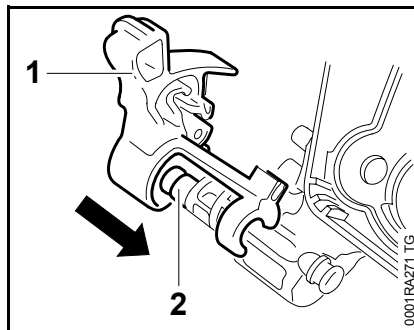


- Push the switch shaft (1) onto the pin (2).

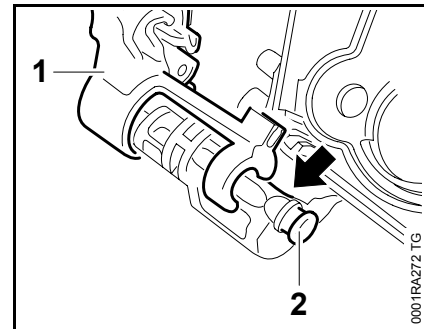


- Carefully push the switch shaft (1) over the taper (arrow).
- Push the switch shaft (1) onto the pin (2) until it snaps into position.

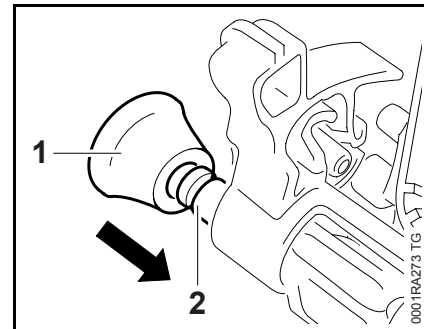


- Push the rubber grommet (1) onto the pin (2).
- Install the filter base,  12.3
- Reassemble all other parts in the reverse sequence.
- Check operation.

## 10.2 Throttle Trigger/ Interlock Lever

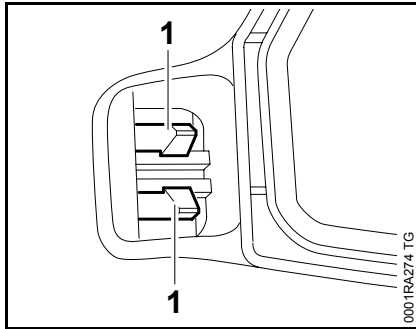


- Push the tabs (1) apart and through the tank housing.

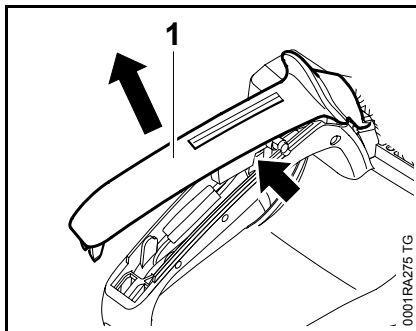


- Remove the handle molding (1).


The interlock lever (arrow) may pop out.

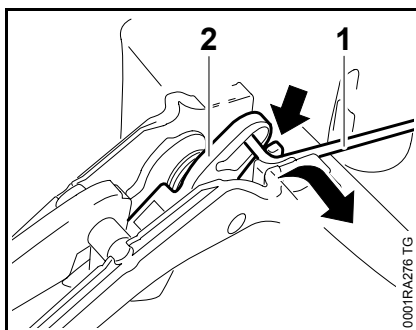


- Take the throttle rod (1) out of the guide (arrow) and disconnect it from the throttle trigger (2).

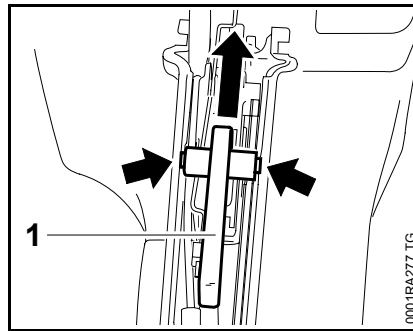


- Ease the interlock lever (1) out of its mounts (arrows).
- Disconnect the torsion spring and remove the interlock lever.

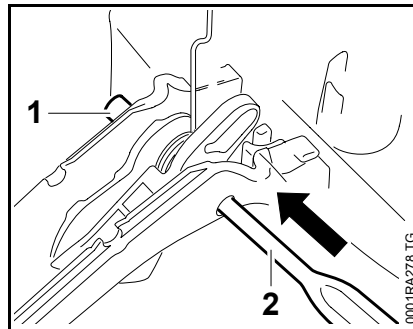

- Use a drift (2) to drive out the pin (1).

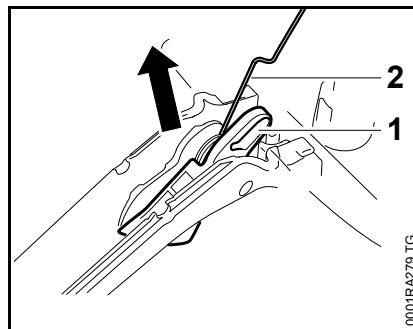


- Remove the throttle trigger (1) with torsion spring (2).

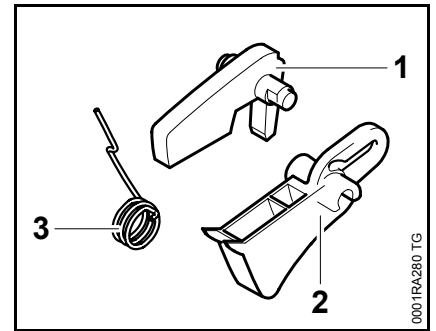


- Check the interlock lever (1), throttle trigger (2) and torsion spring (3) and replace if necessary

### Installing

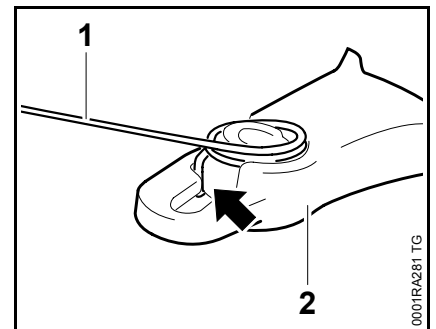


- Attach the torsion spring (1) to the trigger (2) – note the installed position (arrow).

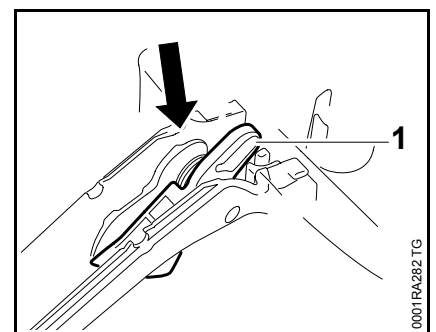


- Place the throttle trigger (1) in the handle and line up the holes in the trigger and handle.




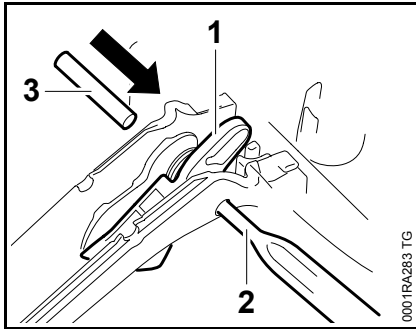

- Use a drift (2) to center the throttle trigger (1).
- Drive home the pin (3) until it is recessed by same amount at both sides.

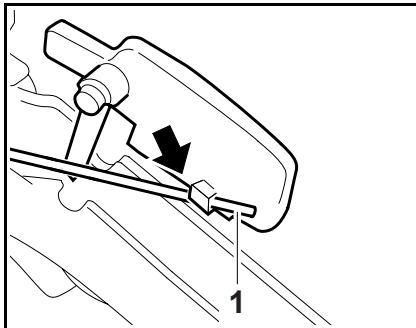


- Attach the torsion spring (2) to the interlock lever (arrow).

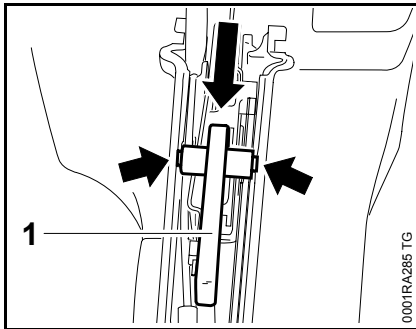


- Push the interlock lever (1) into its pivot mounts (arrows) until it snaps into position – check that torsion spring is in position.


The interlock lever (1) may pop out.

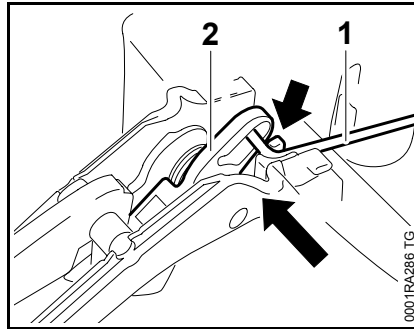

- Attach the throttle rod (1) to the throttle trigger (2) and fit it in the guide (arrow).

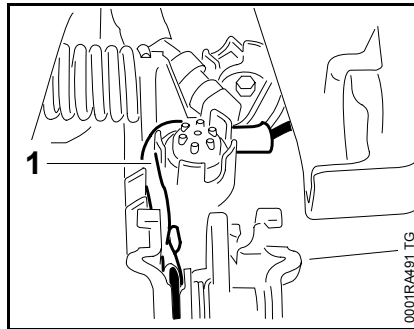


Before installing the handle molding, check that the insulating tube (1) is properly positioned.

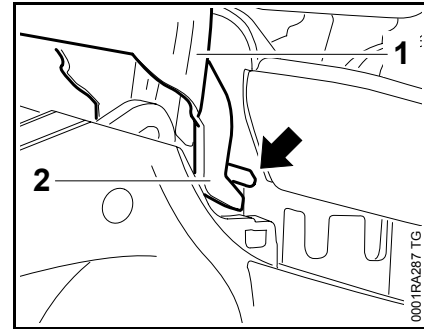


- Engage lugs (2) at front end of handle molding (1) in the recesses (arrow).
- Push down the handle molding (1) until it snaps into position.
- Check operation.
- Reassemble all other parts in the reverse sequence.
- Tightening torques, 2.5


### 10.3 Throttle Trigger/Interlock Lever – QuickStop Super

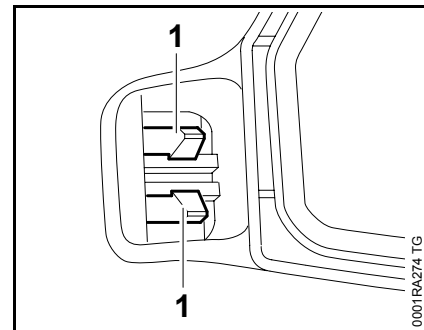


- Push the tabs (1) apart and through the tank housing.

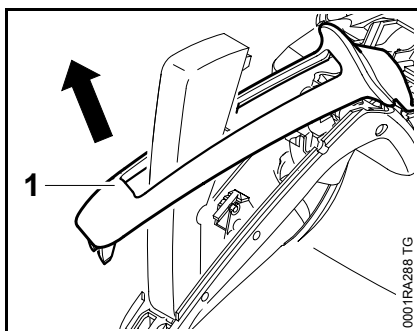


- Remove the handle molding (1).

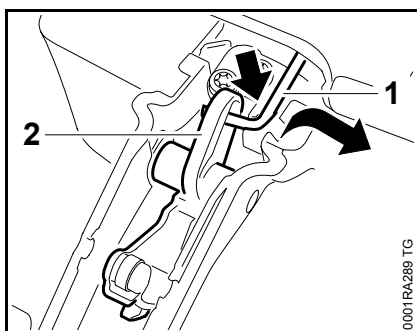


- Take the throttle rod (1) out of the guide (arrow) and disconnect it from the throttle trigger (2).

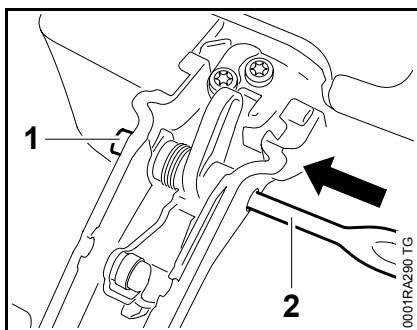

- Use a drift (2) to drive out the pin (1).

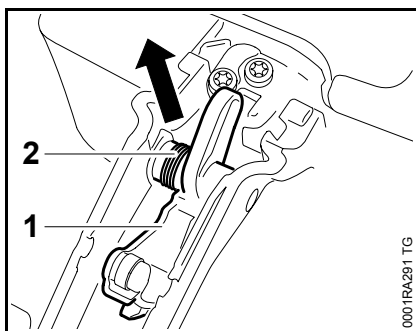


- Remove the throttle trigger (1) with torsion spring (2).

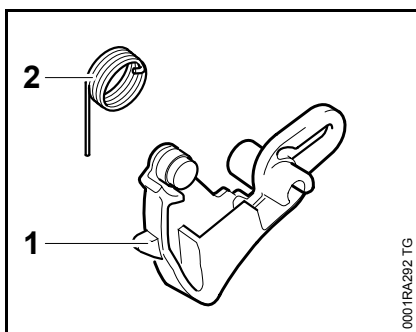


- Check the throttle trigger (1) and torsion spring (2) and replace if necessary


### Installing

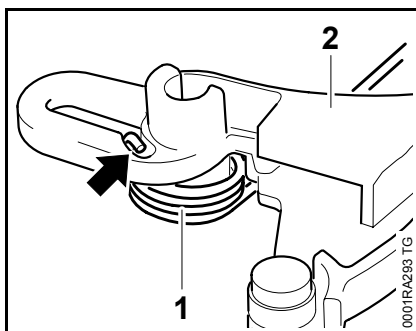


- Attach the torsion spring (1) to the trigger (2) – note the installed position (arrow).

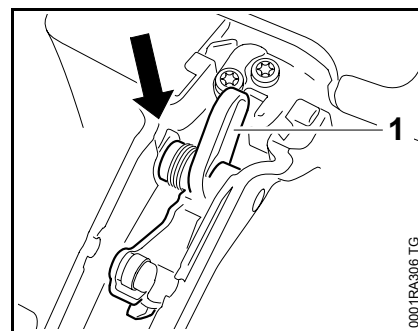


- Place the throttle trigger (1) in the handle and line up the holes in the trigger and handle.

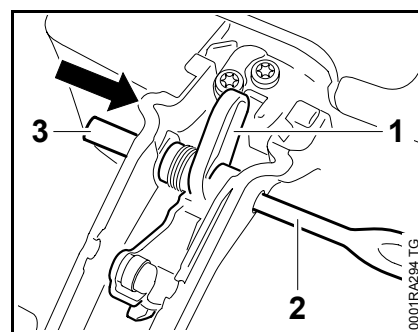

- Use a drift (2) to center the throttle trigger (1).
- Drive home the pin (3) until it is recessed by same amount at both sides.

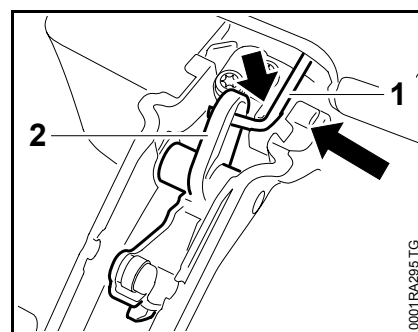


- Attach the throttle rod (1) to the throttle trigger (2) and fit it in the guide (arrow).

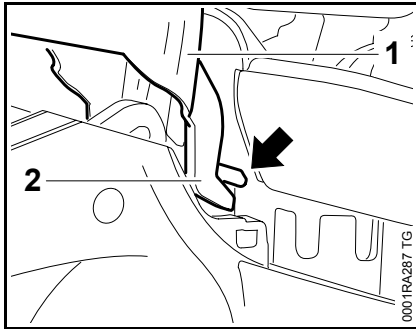


- Engage lugs (2) at front end of handle molding (1) in the recesses (arrow).
- Press the interlock lever down.
- Push down the handle molding (1) until it snaps into position.
- Check operation.
- Reassemble all other parts in the reverse sequence.
- Tightening torques, 2.5

### 10.3.1 Switch Lever – QuickStop Super

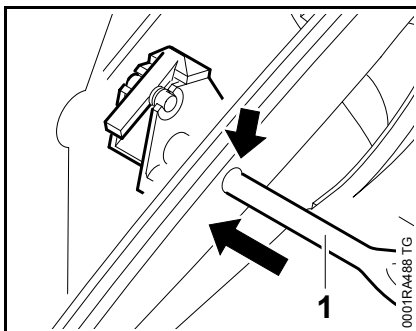


- Remove the handle molding, 10.3
- Use a drift (1) to drive out the pin (arrow).

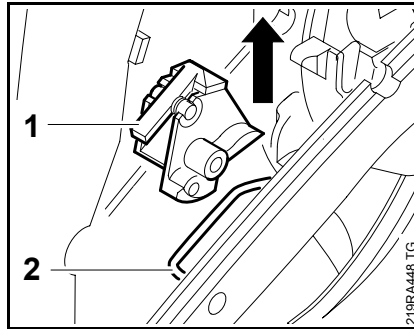


- Lift the switch lever (1) slightly.
- Turn the switch lever (1) about 90° and pull it off the brake cable (2).
- Check the switch lever (1) and replace it if necessary

### Installing

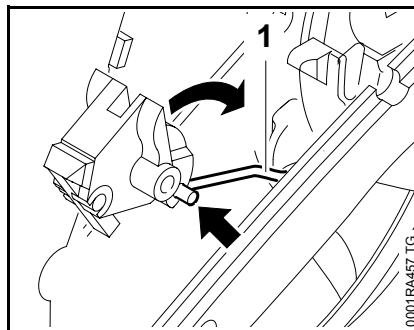


- Connect the brake cable (1) to the bore (arrow) in the switch lever.
- Turn the switch lever so that it faces up.

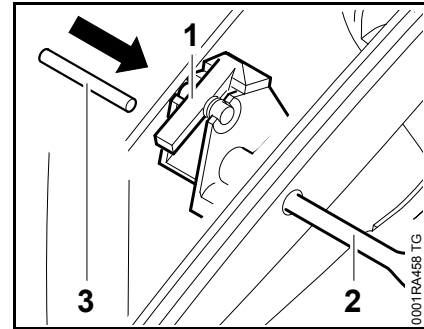


- Use a drift (2) to center the switch lever (1).
- Drive home the pin (3) until it is recessed by same amount at both sides.
- Reassemble in the reverse sequence.
- Tightening torques, 2.5
- Check operation of switch lever by operating the interlock lever.


### 10.3.2 Interlock Lever – QuickStop Super

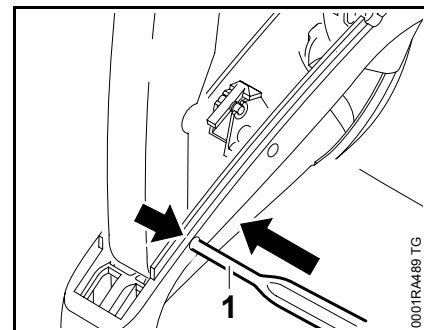

- Remove the handle molding, 10.3
- Use a drift (1) to drive out the pin (arrow).
- Take out the interlock lever.

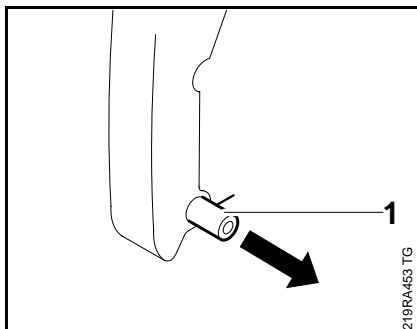


- Push out the bushing (1).
- Remove the torsion spring.

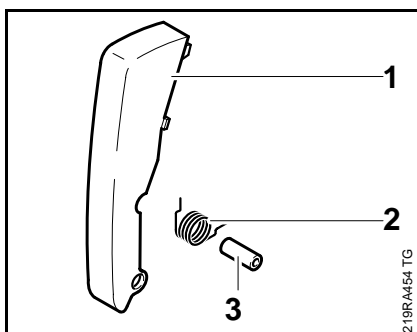


- Check the interlock lever (1), torsion spring (2) and bushing (1) and replace if necessary

### Installing

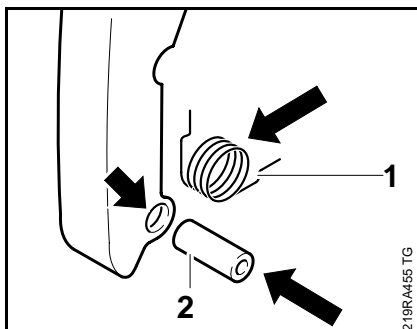


- Position the torsion spring (1) and fit it in the interlock lever.
- Push the bushing (2) into the bore (arrow) – the torsion spring is held in position.

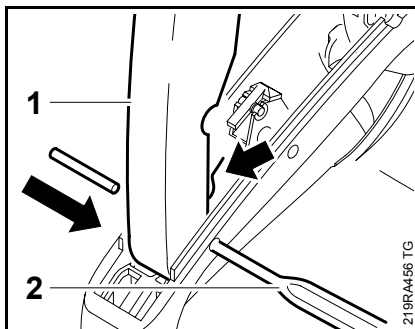


- The torsion spring (arrow) must locate against the tank housing.
- Use a drift (2) to center the interlock lever (1).
- Drive home the pin until it is recessed by same amount at both sides.
- Reassemble in the reverse sequence.
- Tightening torques, 2.5
- Check operation.

### 10.3.3 Choke Rod


- Remove the air filter, 12.1

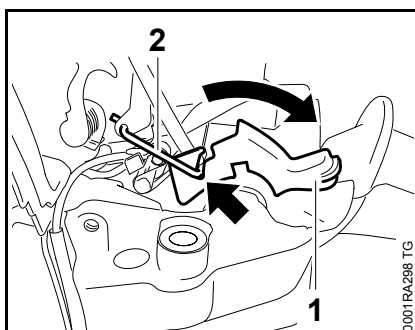

- Carefully pry the choke rod (2) out of its seat in the guide (arrow) and move the switch shaft (1) in the direction of cold start at the same time.

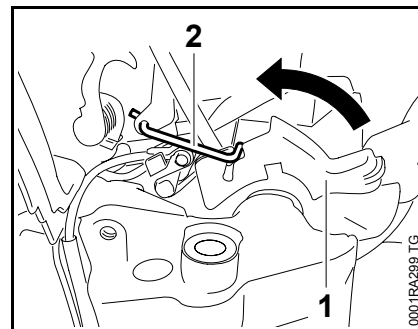


- Move the switch shaft (1) in the direction of the carburetor and disconnect the choke rod (2).
- Take the choke rod (1) out of the guide.

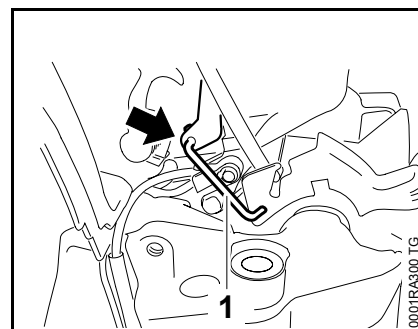


- Disconnect the choke rod (1) from the choke shaft (arrow).
- Check the choke rod and replace it if necessary

### Installing

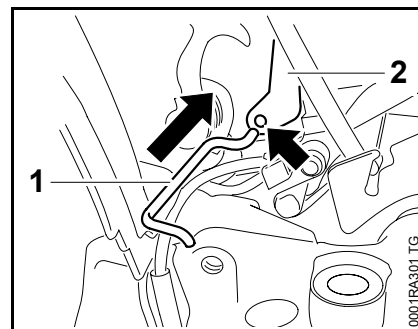


- Engage the choke rod (1) in the bore (arrow) in the choke shaft (2).

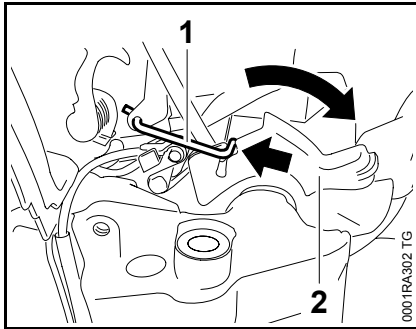


- Position the choke rod (1) in the guide (arrow).
- Rotate the switch shaft (2) until the choke rod (1) snaps into position.
- Check operation.
  - Rotate the switch shaft. If necessary, push home the choke rod until it is properly seated.

#### 10.3.4 Throttle Rod


- Disconnect the throttle rod from the trigger, 10.2
- Remove the filter base, 12.3

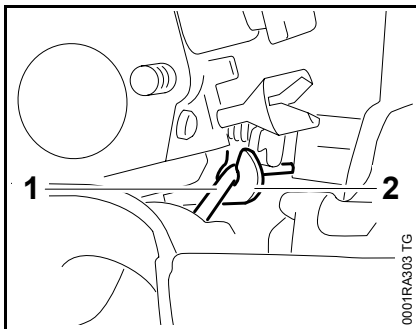

- Pry the throttle rod (1) out of the carburetor carrier (2).

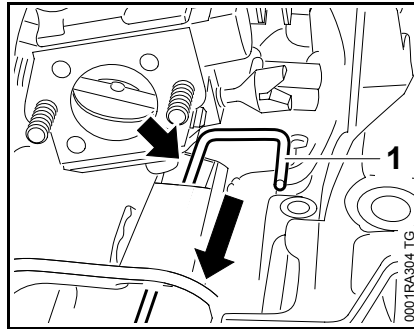


- Pull the throttle rod in the direction of the handle until its bent end (1) is in front of the opening (arrow).

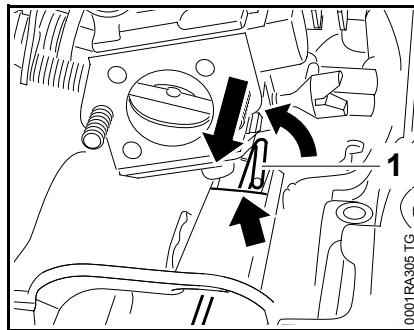


- Rotate the throttle rod (1) about 90° counterclockwise. Pass the throttle rod (1) through the opening (arrow) in the direction of the tank housing and remove it.
- Check the throttle rod and replace if necessary

#### Installing

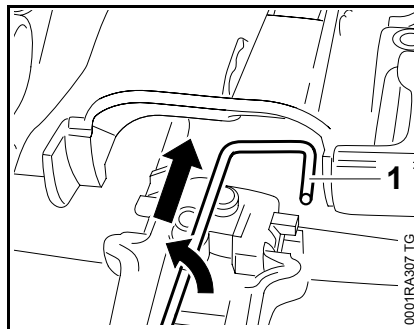


- Line up the throttle rod (1) (see illustration).

- Push the throttle rod (1) between the tank housing and air guide shroud and rotate it about 90° at the same time.

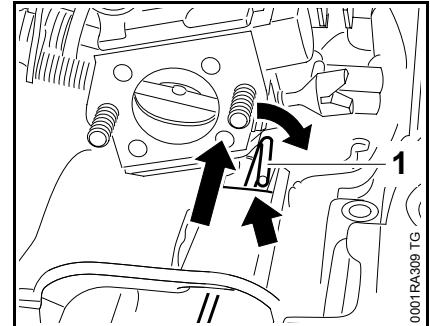


- Pass the throttle rod (1) through the opening (arrow).
- Rotate the bent end (1) clockwise and push it under the throttle trigger.

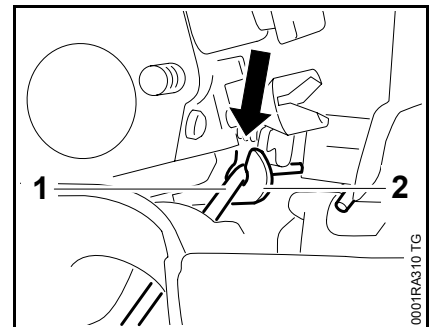




- Push the throttle rod (1) into the guide (2) in the carburetor carrier until it snaps into position.
- Check operation.
  - The throttle lever on the carburetor must move upwards when the throttle trigger is pulled.
- Reassemble in the reverse sequence.

## 11. Chain Lubrication

### 11.1 Pickup Body

Impurities gradually clog the fine pores of the filter with minute particles of dirt. This prevents the oil pump from supplying sufficient oil. In the event of problems with the oil supply system, first check the oil tank and the pickup body. Clean the oil tank if necessary,  1

- Troubleshooting,  3.3
- Open the oil tank cap and drain the oil tank.
- Collect chain oil in a clean container,  1

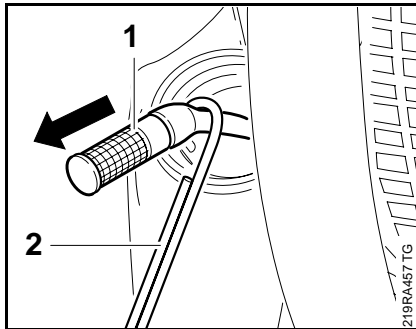






- Use hook (2) 5910 893 8800 to remove the pickup body (1) from the oil tank.


Do not overstretch the suction hose.

- Pull off the pickup body (1), check it and replace if necessary.
- Reassemble in the reverse sequence.


### 11.2 Oil Suction Hose

- Remove the clutch,  4
- Remove the brake band,  5.2
- Open the oil tank cap and drain the oil tank  1.
- Remove the oil pump,  11.3

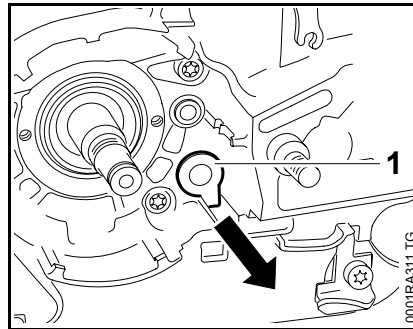




- Remove the oil suction hose (1).
- Check the oil suction hose and pickup body and replace if necessary.
- Fit the pickup body,  11.1
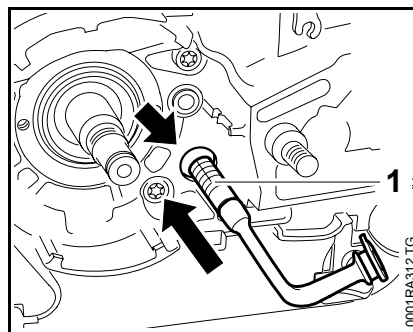
#### Installing



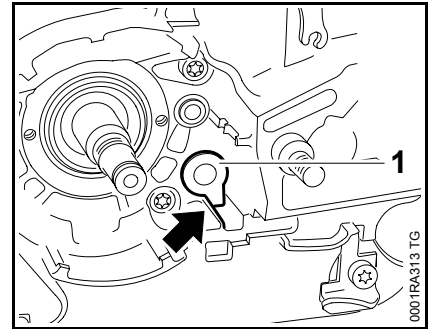


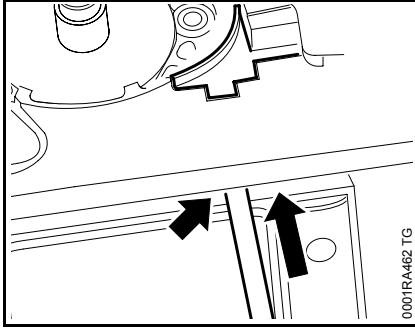
- Push the oil suction hose (1), pickup body first, through the housing bore (arrow).




- Line up the oil suction hose (1)
  - the tab (arrow) must be in the guide.
- Push home the oil suction hose (1) until its groove is properly seated in the crankcase.
- Check position of the pickup body and, if necessary, use the hook 5910 893 8800 to re-position it.
- Install the oil pump,  11.3
- Reassemble all other parts in the reverse sequence.
- Tightening torques,  2.5

### 11.3 Oil Pump


- Troubleshooting,  3.3
- Remove the clutch,  4
- Remove the brake band,  5.2




- Ease out the lug between the crankcase and tank housing (arrow).

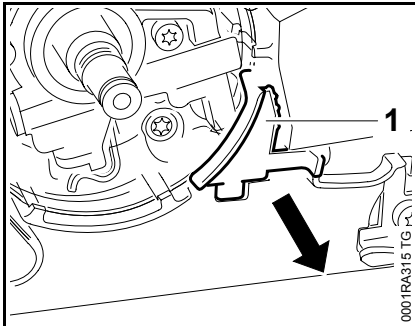


- Remove the cover (1).

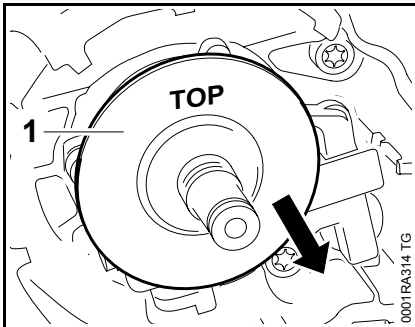


- Remove the cover washer (1).

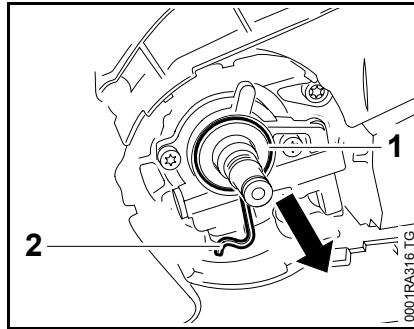


- Pull the worm (1) with drive spring (2) out of the oil pump.

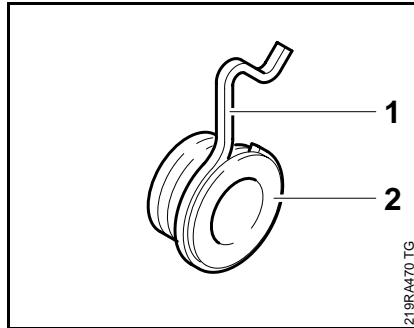

- Check the spring (1) and worm (2) and replace if necessary.

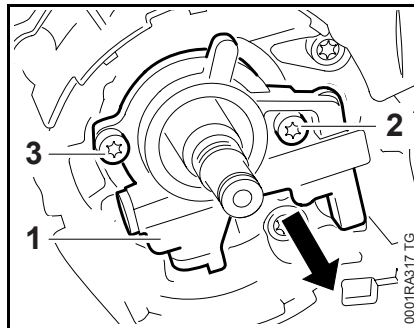


- Take out the screws (2) and (3).
- Pull off the oil pump (1), check and replace if necessary.

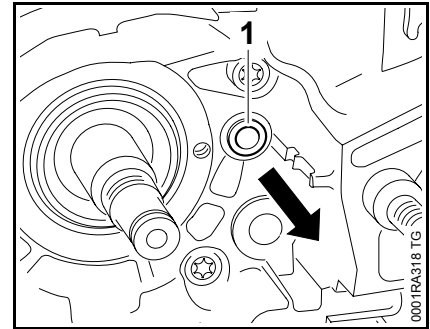


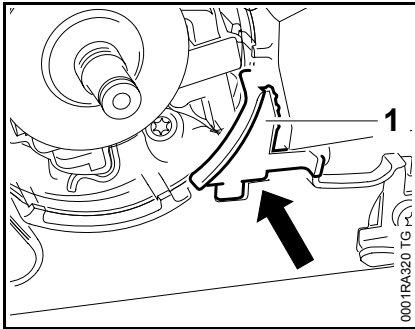
- Fit a new sealing ring (1).

Always use a new sealing ring.

#### Installing

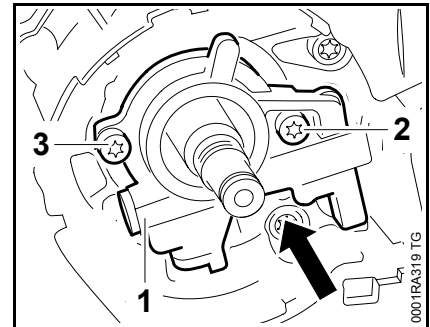

- Place the oil pump (1) in position.
- Coat the screw (2) with threadlocking adhesive,  15
- Fit the screws (2 and 3) and tighten them down firmly.
- Push the worm fully home.
- Fit the cover washer.




- Press the cover (1) into the recess until it snaps into place.
- Check adjustment of oil pump and readjust if necessary – see instruction manual.
- Reassemble all other parts in the reverse sequence.
- Tightening torques, 2.5


#### 11.4 Valve

A valve is installed in the tank wall to keep internal tank pressure equal to atmospheric pressure. The valve must be replaced if it is faulty.

- Open the oil tank cap and drain the oil tank 1.

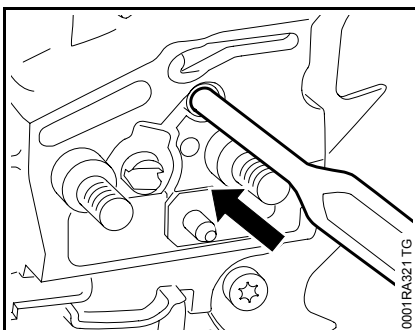


- Use a 6 mm drift to carefully drive the valve out of its seat in the housing and into the oil tank.

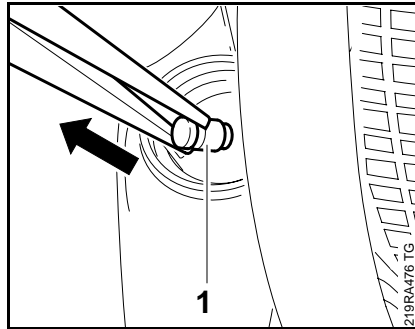


- Remove the old valve (1) from the oil tank.

#### Installing

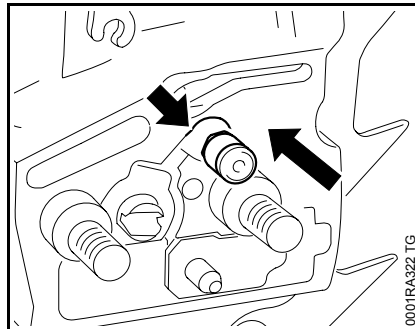

Check correct installed position.

- Insert the valve in the housing bore (arrow).
- Use a 6 mm drift to carefully drive in the new valve from outside – note installed depth.

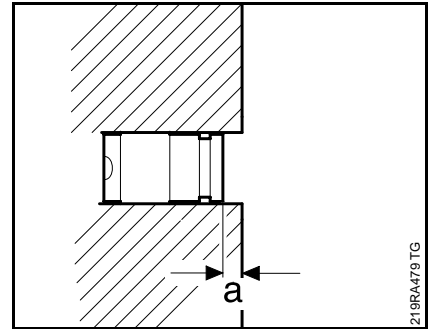

- Drive the new valve into the bore to a depth of 1 +/- 0.1 mm (a).
- Reassemble all other parts in the reverse sequence.




## 12. Fuel System


### 12.1 Air Filter

Dirty air filters reduce engine power, increase fuel consumption and make starting more difficult. The air filter should be checked when there is a noticeable loss of engine power.

- See also Troubleshooting, 3.6, 3.7
- Remove the shroud, 6.4

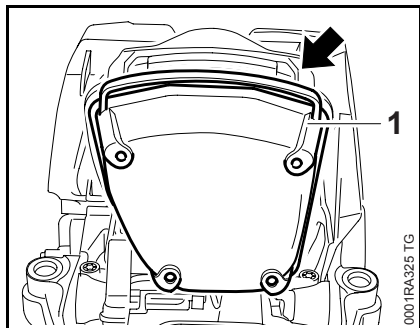


- Pull off the prefilter (1) with the handle (arrow).

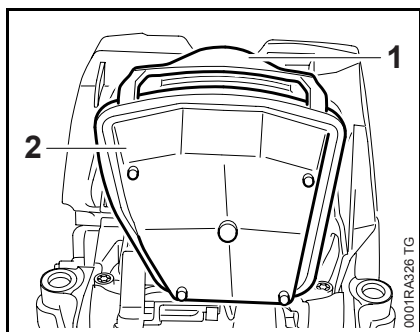

- Lift the retaining tab (1) a little and remove the air filter (2).
- Check the air filter and prefilter and clean or replace if necessary
  - see instruction manual.
- Reassemble in the reverse sequence.


### 12.2 Baffle

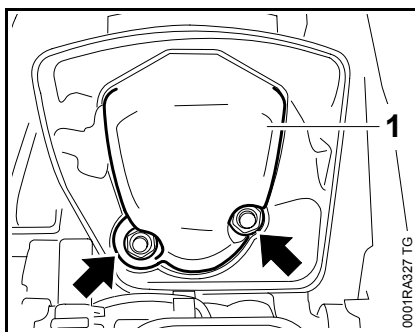


- Remove the air filter, 12.1
- Unscrew the nuts (arrows).
- Remove the baffle (1).
- Check the baffle and replace it if necessary
- Reassemble in the reverse sequence.
- Tightening torques, 2.5

### 12.3 Filter Base


- Remove the air filter, 12.1
- Remove the baffle, 12.2
- Remove the choke rod, 10.3.3
- Disconnect the ground wire from the contact spring, 7.7.4.

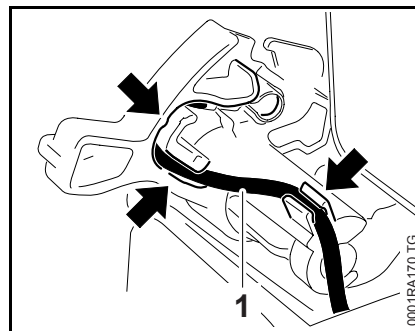

- Pull the short circuit wire (1) out of the guides (arrows).
- Pull the ring terminal off the pivot pin (2).

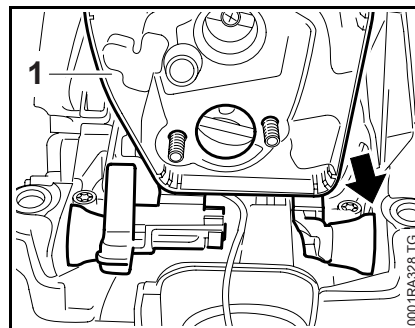


- Pull the filter base (1) off the pivot pin (arrow) first.

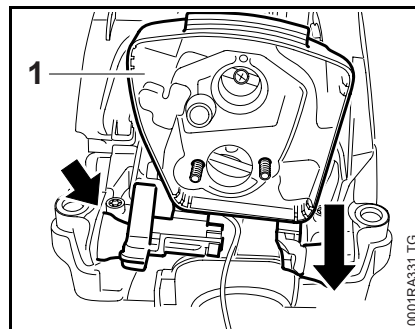


- Then pull the filter base (1) off the pivot pin (arrow) at the other side.
- Remove the filter base (1).
- Check the individual parts and replace if necessary.


## Installing

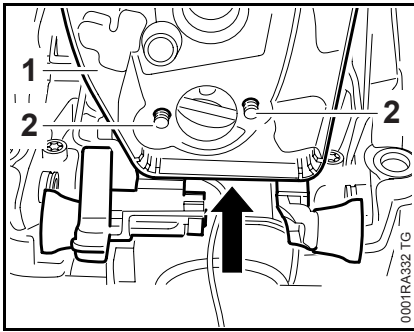


- To simplify assembly, coat the rubber buffers with STIHL press fluid.
- Slide the filter base (1) over the studs.

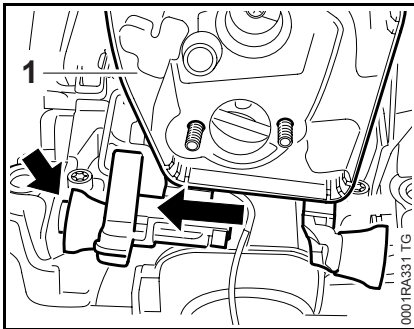


- Push the filter base (1) fully into the guides (arrow).

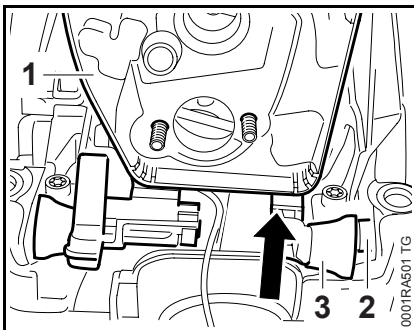

- Push the filter base (1) fully onto the pin (2).
- Push the filter base (1) onto the pivot pin (2) until it engages the rubber buffer.

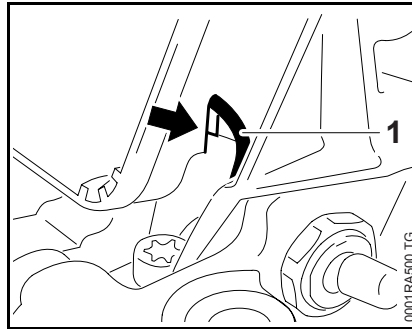


- Push the wire (1) fully into the guide (arrow)
  - machines with handle and carburetor heating.

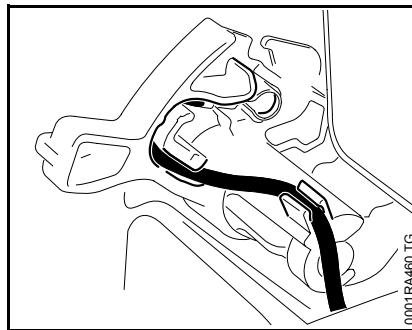


- Install the short circuit wire, [7.7](#)
- Reassemble all other parts in the reverse sequence.
- Tightening torques, [2.5](#)

## 12.4 Air Guide Shroud


- Remove the filter base, [12.3](#)
- Remove the throttle rod, [10.3.4](#)
- Remove the carburetor, [12.5](#)
- Remove the carburetor carrier, [12.8](#)

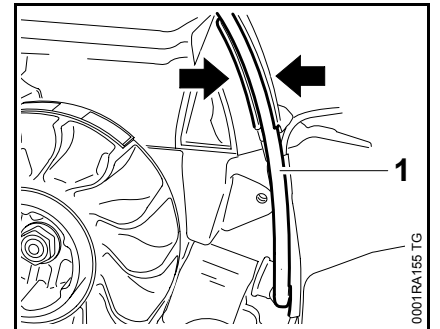


- Pull the ignition lead (1) out of the guide (arrows).

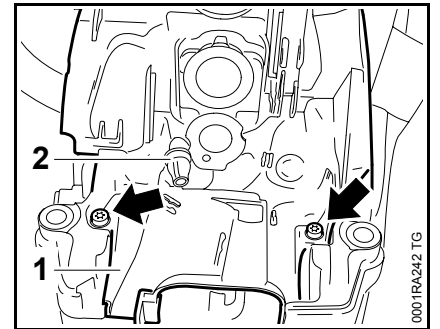


- Take out the screws (arrows).
- Remove the air guide shroud (1) and push the fuel hose (2) through the opening at the same time.

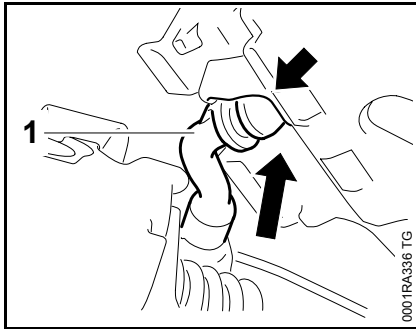


- Push the fuel hose (1) through the opening (arrow) on the underside of the air guide shroud.

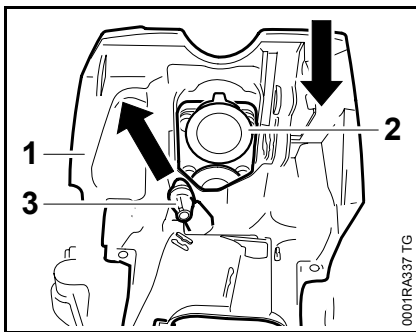


- Fit the air guide shroud (1) over the intake manifold (2), repositioning the fuel hose (3) at the same time.

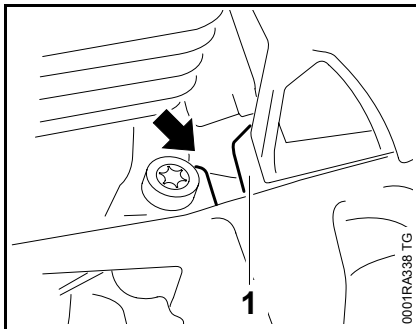

- Push the air guide shroud's lugs (1) between the ribs (arrow) on the crankcase.
- Push the air guide shroud fully home.

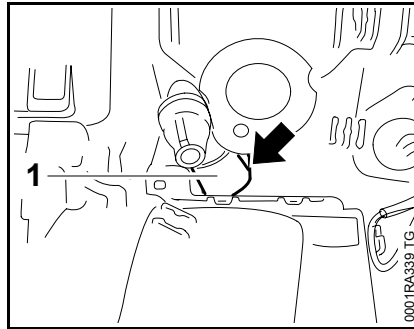


- Make sure the protective tube (1) covers the opening (arrow).

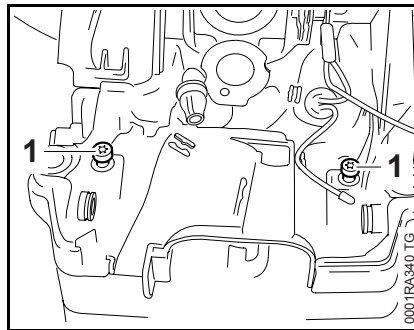


- Fit and tighten down the screws (1) firmly.

#### Versions with Handle and Carburetor Heating


- Remove the filter base, 12.3
- Remove the throttle rod, 10.3.4
- Remove the carburetor heating system, 13.1.2
- Remove the carburetor, 12.5
- Remove the carburetor carrier, 12.8
- Remove the heater switch, 13.4

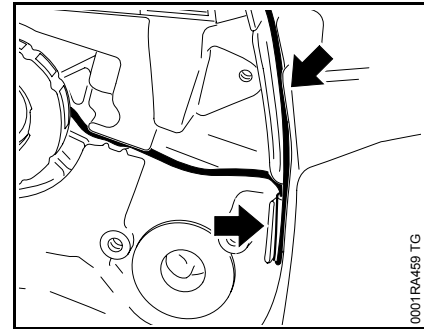


- Pull the generator wire out of the guides (arrows).

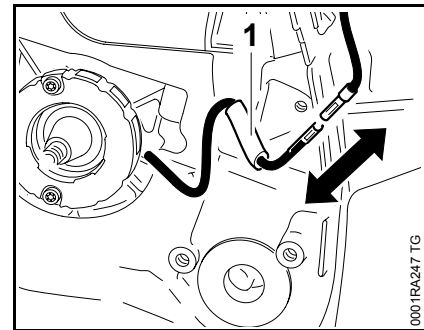


- Push back the insulating tube (1) in the direction of the generator and separate the pin and socket connector.

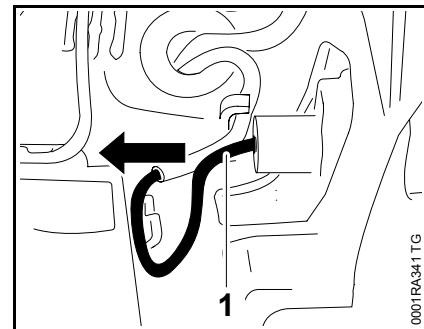


- Pull the wire (1) with connector sleeve out of the heater switch.

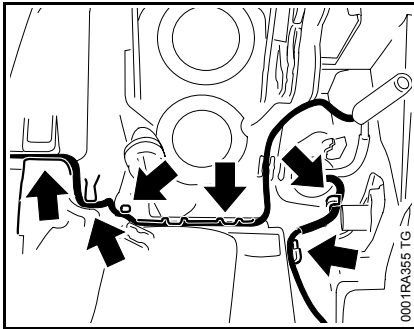


- Pull the wires out of the guides (arrows).

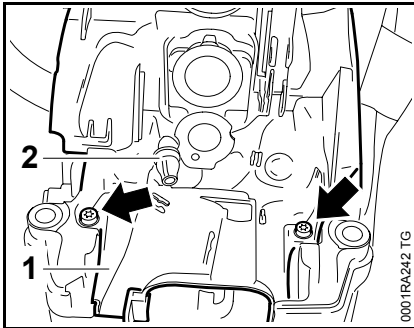

- Take out the screws (arrows).
- Remove the air guide shroud (1) and push the fuel hose (2) through the opening at the same time.

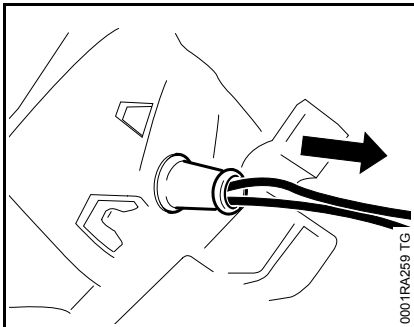


- Pull the wires out of the rubber grommet.

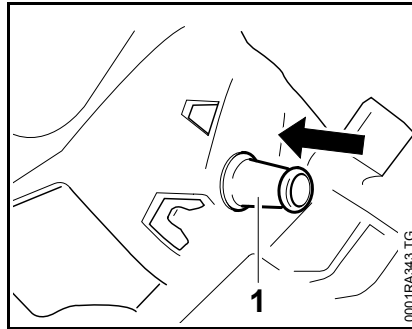


- Remove the rubber grommet (1) by pushing it into the air guide shroud.


### Installing

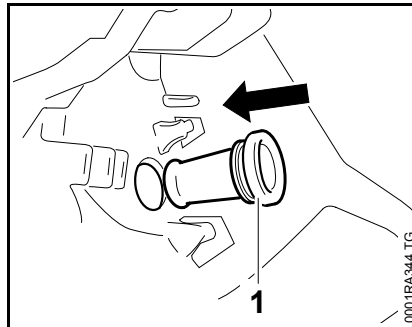


- Push the rubber grommet (1), tapered end first, into the housing.

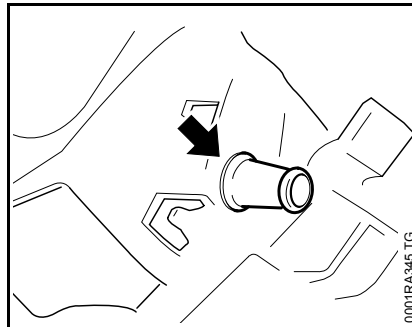


- The flange (arrow) must locate properly in the hole.

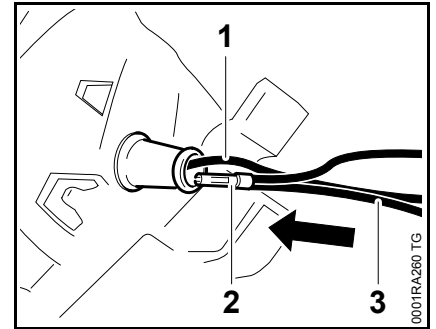


- Push wire (1) and then wire (2), connector first, through the grommet.
- Pull the full length of generator wire (3) into the air guide shroud.

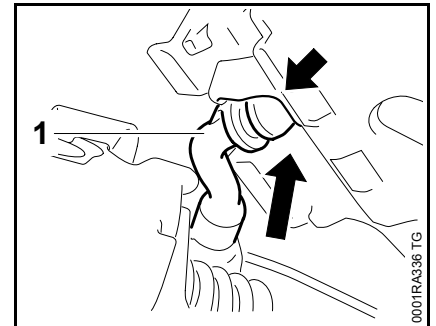

- Push the fuel hose (1) through the opening (arrow).

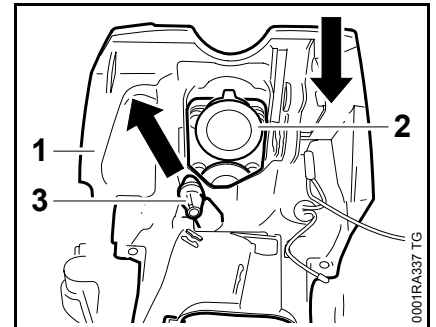


- Fit the air guide shroud (1) over the intake manifold (2), re-positioning the fuel hose (3) at the same time.

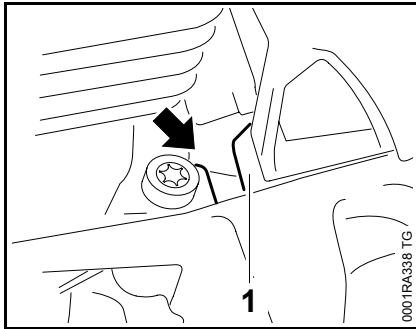


- Push the air guide shroud's lugs (1) between the ribs (arrow) on the crankcase.


- Push the air guide shroud fully home.

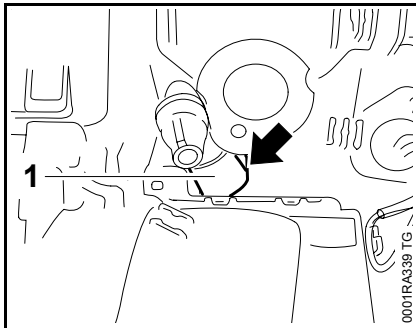

- Make sure the protective tube (1) covers the opening (arrow).

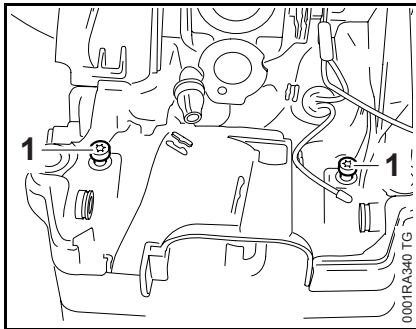


- Fit and tighten down the screws (1) firmly.

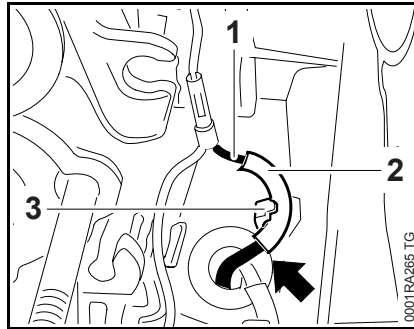


- Position the generator wire (1) so that the insulating tube (2) is against the guide (3).

- Fit the generator wire in the guide (3).

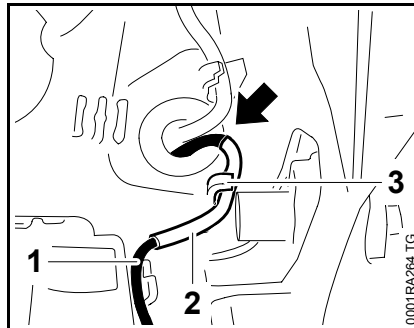

- Position the wire (1) so that the insulating tube (2) is against the guide (3).

- Fit the wire in the guide (3).

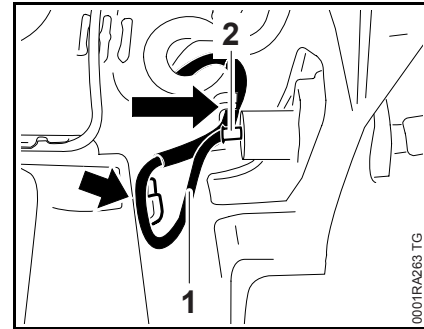

- Push the wire (1) into the guide (arrow).

- Push the connector sleeve (2) into the heater switch.

- Install all other parts as in the standard version.


- Tightening torques, 2.5

## 12.5 Carburetor


- Remove the filter base, 12.3
- Open the fuel tank cap and drain the fuel tank.
- Collect the fuel in a clean container, 1

Disconnect the fuel hose only when the tank cap is open.


## Machines with Handle Heating

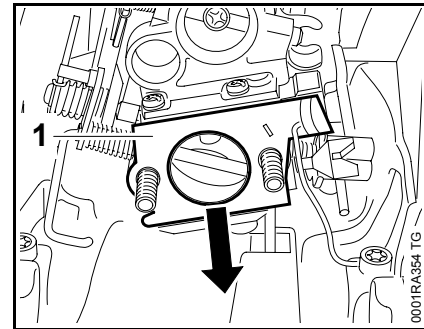

- Remove the heating element (1).

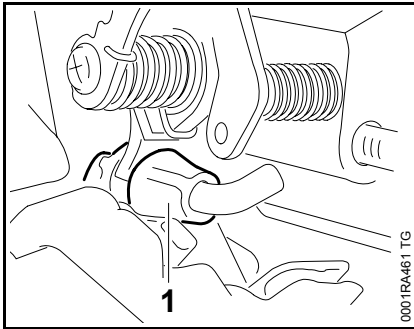


- Push the fuel hose (1) back a little – the fuel hose is disconnected.

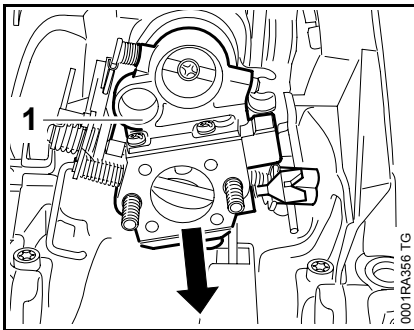


- Remove the carburetor (1).
  - Check the carburetor and service or replace if necessary.
  - Install a new fuel hose, [11.2](#)


## Installing

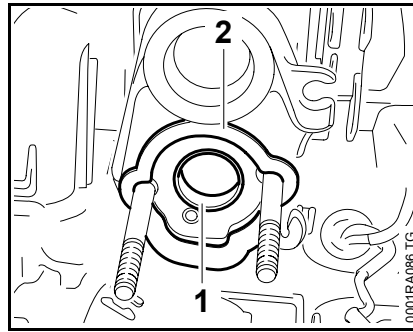


- Check that the sleeve (1) and washer (2) are in place.

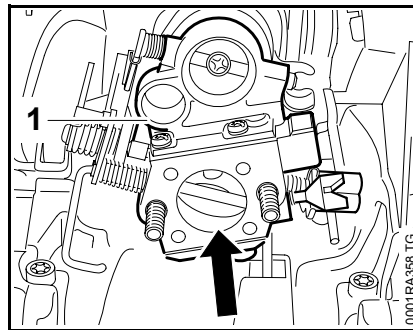

- Push the carburetor (1) into position.

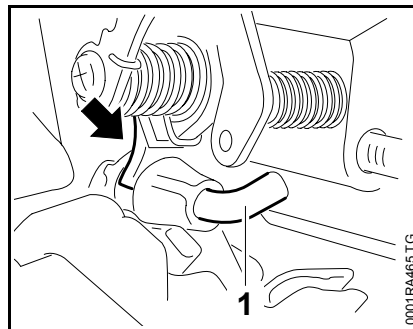


- The fuel hose must be located in its seat (arrow).
- When positioning the carburetor, make sure the stub (1) is pushed into the fuel hose.

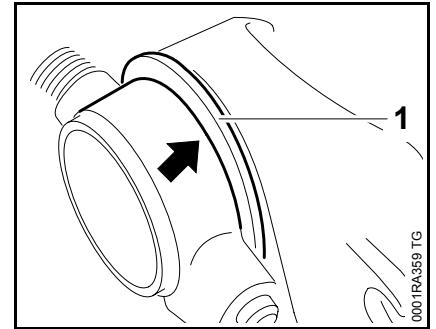


- Shoulder (arrow) must fully engage the intake manifold (1).

## Machines with Handle Heating

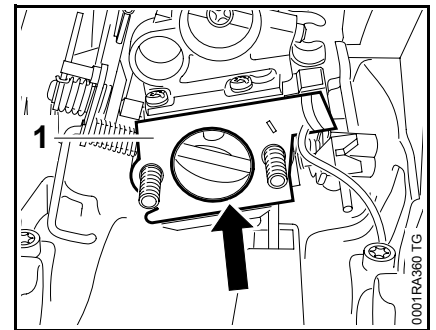


- Fit the heating element (1).
  - Install the filter base, [12.3](#)
  - Install the air filter, [12.1](#)
  - Check operation.
  - Reassemble all other parts in the reverse sequence.
  - Tightening torques, [2.5](#)

## 12.5.1 Leakage Test


In the case of problems with the carburetor or fuel supply system, also check and clean or replace the tank vent,  12.10

The carburetor can be tested for leaks with the pump 0000 850 1300.


- Remove the filter base,  12.3

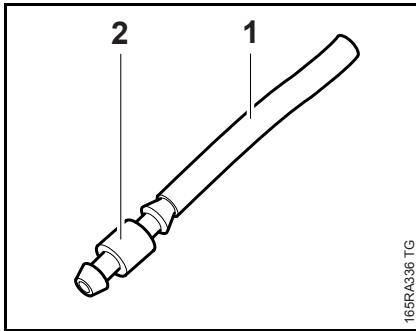

- Push the fuel hose (1) 1110 141 8600 on to the nipple (2) 0000 855 9200.

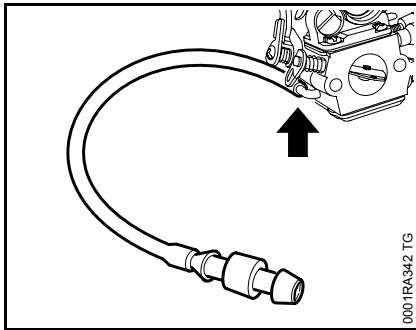



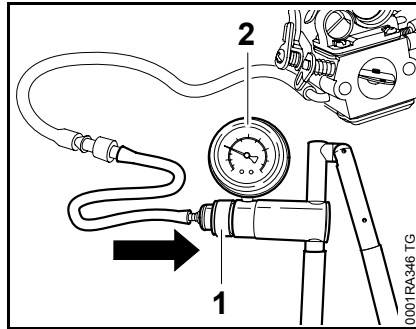



- Push the fuel hose with nipple onto the carburetor's fuel stub (arrow).



- Push the pressure hose of pump 0000 850 1300 onto the nipple.


- Push the ring (1) to the right and pump air into the carburetor until the pressure gauge (2) indicates a pressure of about 0.8 bar (80 kPa).

If this pressure remains constant, the carburetor is airtight. However, if it drops, there are three possible causes:

1. The inlet needle is not sealing (foreign matter in valve seat, sealing cone of inlet needle is damaged or inlet control lever is sticking), remove to clean,  12.6.2 or  12.6.2
2. Metering diaphragm or gasket damaged, replace if necessary,  12.6.1 or  12.10.1
3. Pump diaphragm or gasket damaged, replace if necessary,  12.6.3 or  12.10.1

- After completing the test, push the ring (1) to the left to vent the system and then pull the fuel hose off the carburetor.


- Install the filter base,  12.3



- Tightening torques,  2.5

- Reassemble all other parts in the reverse sequence.

## 12.6 Servicing the Carburetor
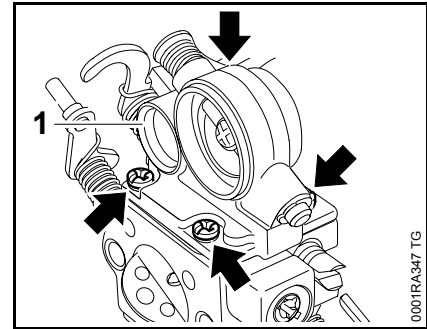
### 12.6.1 Metering Diaphragm




- Troubleshooting,  3.6
- Remove the carburetor,  12.5

- Take out the screws (arrows).

- Remove the end cover (1).

If the gasket and diaphragm are stuck to the carburetor, remove them very carefully.

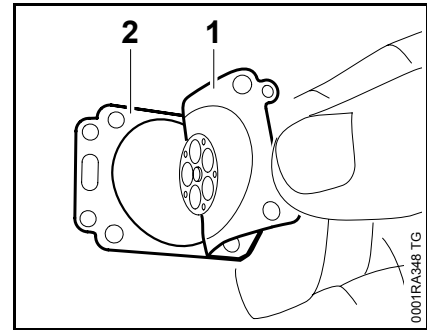


- Carefully separate the metering diaphragm (1) and gasket (2).

The diaphragm material is subjected to continuous alternating stresses and eventually shows signs of fatigue, i.e. the diaphragm distorts and swells and has to be replaced.


- Check the metering diaphragm for signs of damage and wear. Install a new gasket.




## Installing

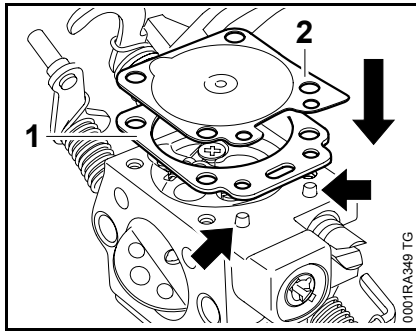

- Note installed positions of metering diaphragm (2) and gasket (1).
- Fit the gasket (1) and metering diaphragm (1) on the pegs (arrows).

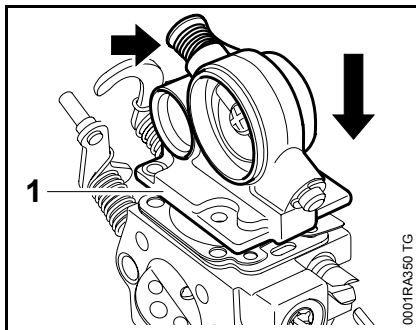


- Position the end cover (1) so that the lever (arrow) points in the direction of the choke shutter.
- Move the end cover (1) a little until the pegs engage the holes in the end cover.

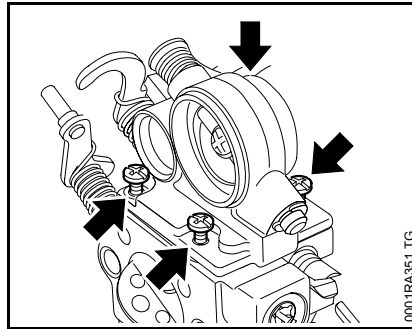


- Fit the screws (arrows).
- Check position of metering diaphragm and gasket, then tighten down the screws firmly in a crosswise pattern.

The end cover must be in line with the edge of the carburetor body.

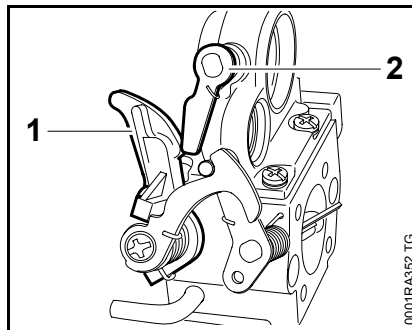


- Check operation.
  - Throttle shaft lever (1) must engage the air valve lever (2).
- Reassemble all other parts in the reverse sequence.
- Tightening torques, 2.5

## 12.6.2 Inlet Needle

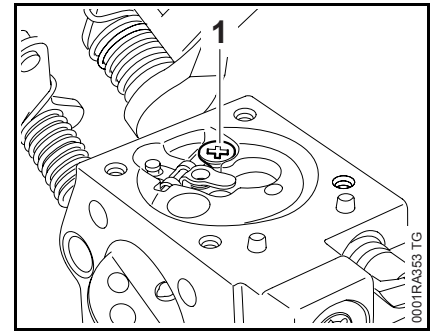


- Remove the metering diaphragm, 12.6.1
- Take out the screw (1).

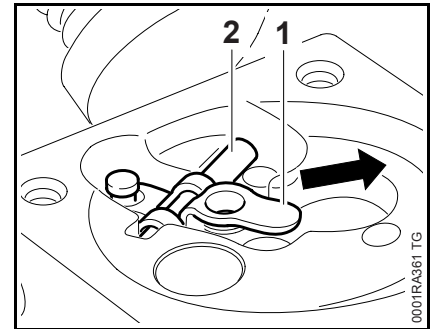


- Remove the inlet control lever (1) with spindle (2) out of the inlet needle's groove.

The small spring under the inlet control lever may pop out.



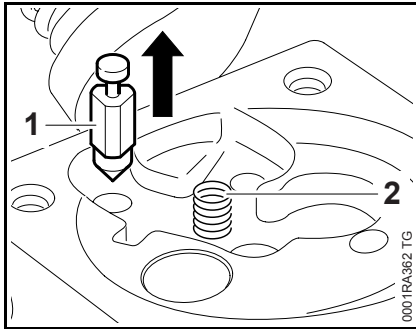


- Remove the inlet needle (1).
- Remove the spring (2). Inspect and replace if necessary.

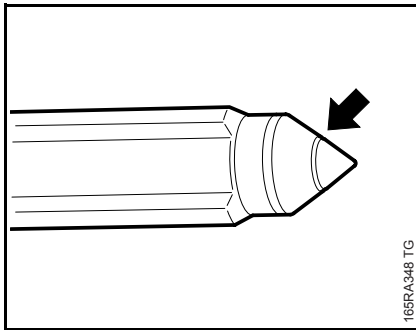


- If there is an annular indentation (arrow) on the sealing cone of the inlet needle, fit a new inlet needle.

## Installing

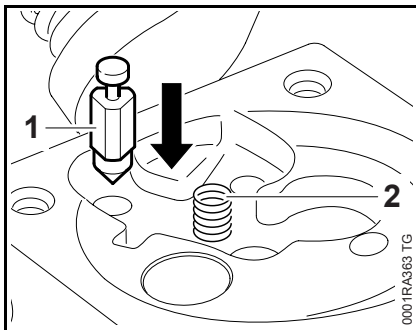

- Fit the inlet needle (1).
- Fit the spring (2) in the bore.

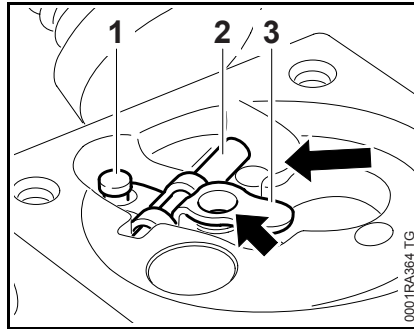


- Position the inlet control lever (3) with spindle (2) on the spring (arrow) first, then slide the inlet control lever's clevis into the groove in the inlet needle (1).

Make sure the spring locates on the control lever's nipple.


- Press the inlet control lever down and secure it with the screw.
- Check that the inlet control lever moves freely.
- Install the metering diaphragm, 12.6.1

## 12.6.3 Pump Diaphragm

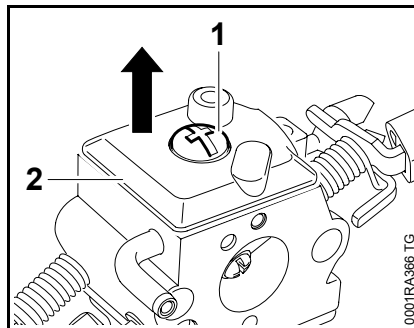


- Troubleshooting, 3.6
- Remove the carburetor, 12.5
- Take out the screw (1).
- Remove the end cover (2).

If the gasket and pump diaphragm are stuck to the carburetor, remove them very carefully.

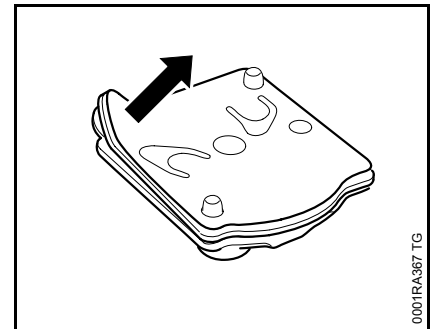


- Carefully remove the pump diaphragm with gasket.

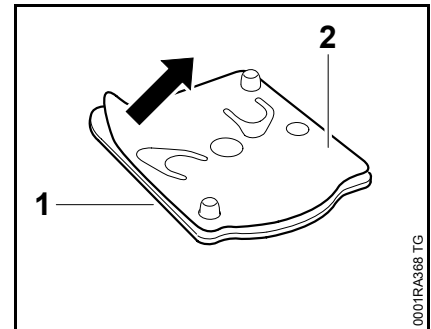

- Carefully separate the pump diaphragm (2) and gasket (1).

The diaphragm material is subjected to continuous alternating stresses and eventually shows signs of fatigue, i.e. the diaphragm distorts and swells and has to be replaced.


- Check the pump diaphragm for signs of damage and wear. Install a new gasket.
- Check fuel strainer for contamination and damage. Clean or replace if necessary.

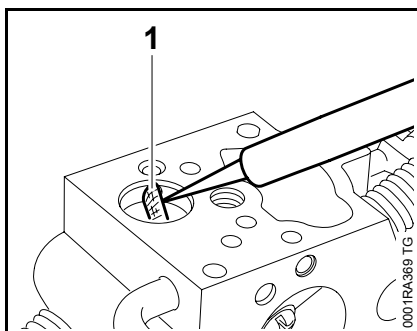


- Use a needle to remove the fuel strainer (1) from the carburetor body. Clean or replace the fuel strainer.

- Reassemble in the reverse sequence.


### Installing

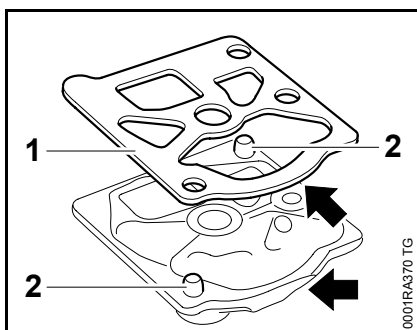

- Fit the new gasket (1) so that the contours (arrows) match and it is held in position by the pegs (2).

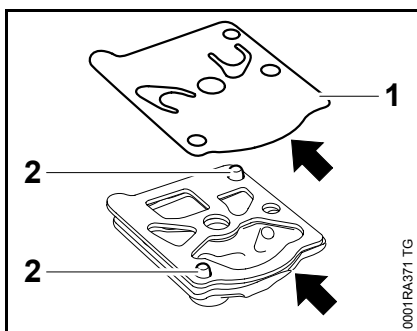


- Fit the pump diaphragm on the gasket (1) so that the contours (arrows) match and it is held in position by the pegs (2).

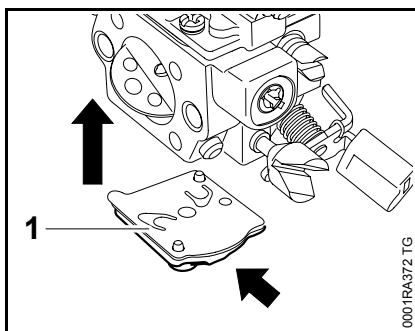

- Fit the end cover (1) from below so that the pump diaphragm and gasket are still held in position.

- Align the end cover (1) so that the contour (arrow) points in the direction of the adjusting screws.

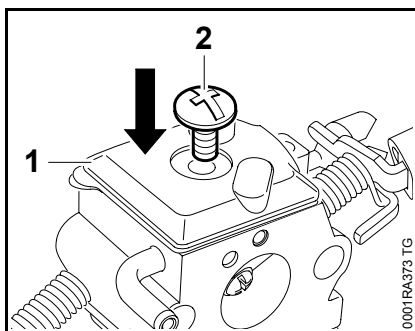

- Move the end cover (1) a little until its pegs engage the holes in the carburetor body.

- Check that the pump diaphragm and gasket are properly seated.


- Tighten down the screw (2) firmly.

- Reassemble all other parts in the reverse sequence.

### 12.6.4 Air Valve



Air valve shaft stiff or air valve cannot be closed or opened properly:

The air valve matches the end cover. If it is damaged, the complete end cover must be replaced.

- Carburetor troubleshooting,  3.6


#### Position of throttle shutter/air valve

The correct position of the air valve can be checked visually as follows.

- Throttle shutter in idle position  
– air valve fully closed.
- Throttle shutter in idle position / full throttle position – air valve closed / wide open.
- Throttle shutter in full throttle position – air valve wide open.
- Throttle shutter in cold start position  – air valve fully closed.
- Throttle shutter in warm start position  – air valve open about 5°.

The air valve must move freely in both directions (open and closed) and always return to the idle position.


The air valve is fully closed in the idle position.

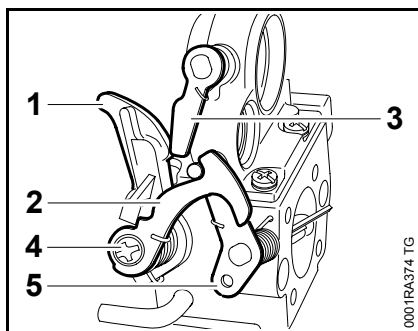

Lever (1) must butt against lever (2) and engage lever (3).

Lever (5) must engage lever (2) for cold and warm starts  
– the choke lever (5) returns to the idle position when the throttle is opened.


– Screw (4) must be tightened down firmly.

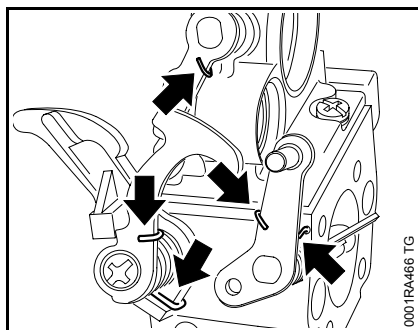

The torsion springs (arrows) must be preloaded and attached to the levers.


### 12.6.5 Levers on Throttle Shaft

- Remove the carburetor, [12.5](#)
- Carburetor troubleshooting, [3.6](#)

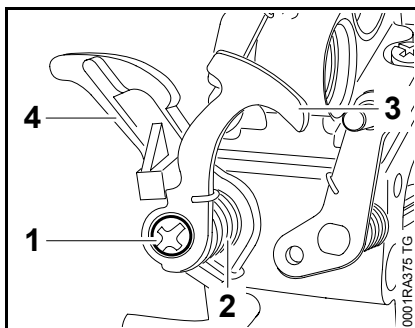


- Take out the screw (1).
- Relieve tension of the torsion spring (2) and remove the lever (3).
- Pull off the torsion spring (2) and lever (4).
- Check the individual parts and replace if necessary.


### Installing

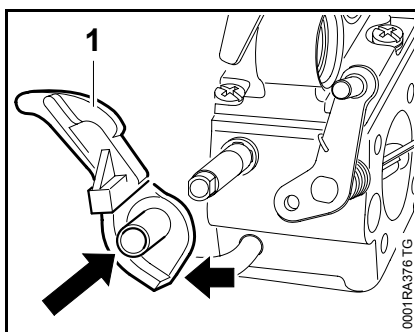


- Push the lever (1) onto the throttle shaft as shown (arrow).

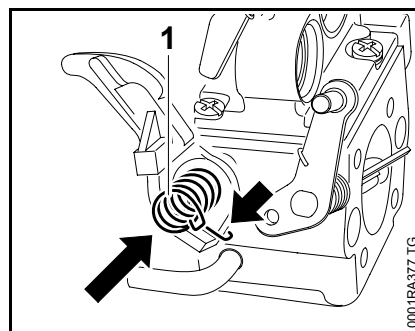


- Fit the torsion spring (1) so that its leg locates against the lever (arrow).

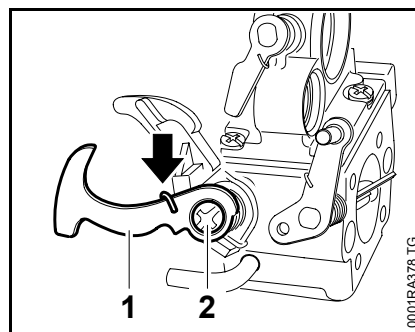


- Attach the torsion spring to the lever (arrow).
- Place the lever (1) in position and tighten the screw (2) moderately – it must still be possible to turn the lever.

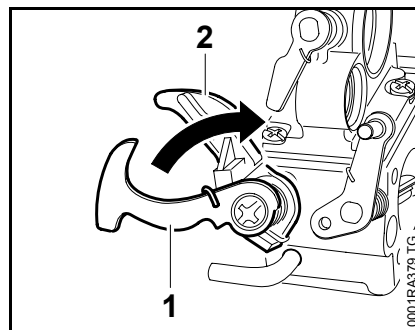

- Hold the lever (2) steady.
- Rotate the lever (1) clockwise until it butts against the stop on lever (2) and engages the end of the throttle shaft.

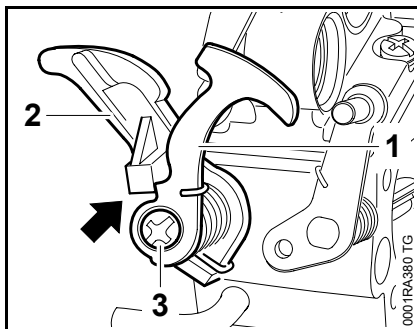


- Hold lever (1) and lever (2) together against the stop (arrow).
- Tighten down the screw (3) firmly.

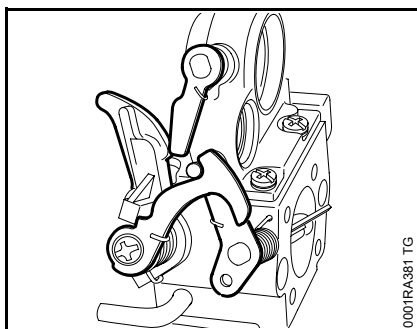

- Check operation.
- Reassemble all other parts in the reverse sequence.

## 12.6.6 Adjusting Screws

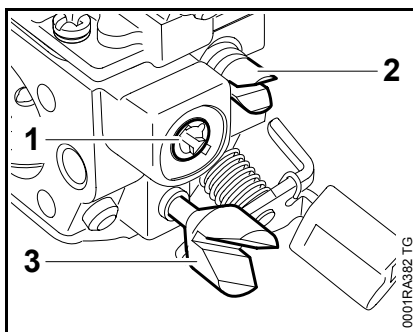

Grommet has been removed for the sake of clarity.

There are three adjusting screws on the carburetor:


- H** = high speed screw (1)
- L** = low speed screw (2)
- LA** = idle speed screw (3)

If the carburetor cannot be adjusted properly, the problem may be the adjusting screws.

The high speed screw **H** has a limiter cap, which has to be removed before the screw is removed.


Always install a new limiter cap.

- Remove the carburetor, [12.5](#)
- See also carburetor troubleshooting, [3.6](#)

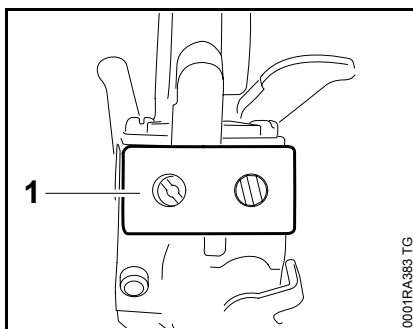


- Pull off the grommet (1).

## Low speed screw

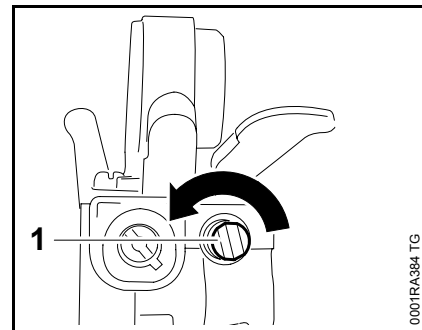


- Take out the low speed screw (1).

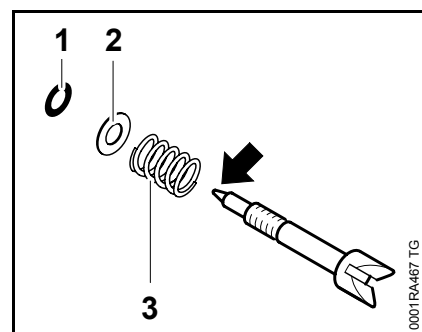


- Inspect the sealing ring (1), washer (2) and spring and replace if necessary.
- Inspect the tip (arrow) for damage or wear and replace the low speed screw (**L**) if necessary.
- Screw down the low speed screw (**L**) as far as stop.
- Continue with the high speed screw.

## High speed screw


The high speed screw **H** has a limiter cap, which has to be removed before the screw is removed.

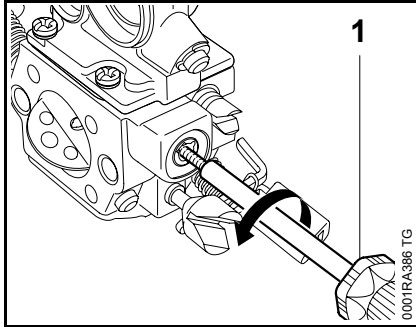

- Screw the puller (1) 5910 890 4500 counterclockwise into the limiter cap – left-hand thread.

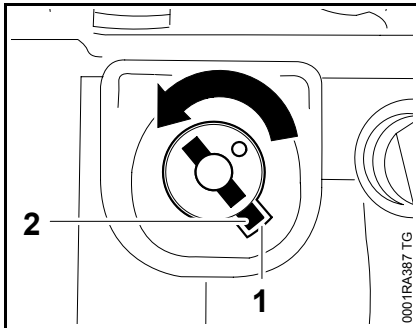


- Rotate the limiter cap until the lug (2) is in line with the slot (1).

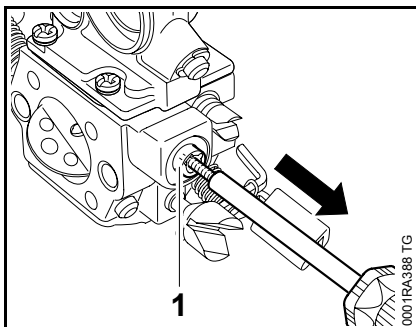

- Pull out the limiter cap (1).


- Take out the high speed screw (**H**).

Always install a new limiter cap.

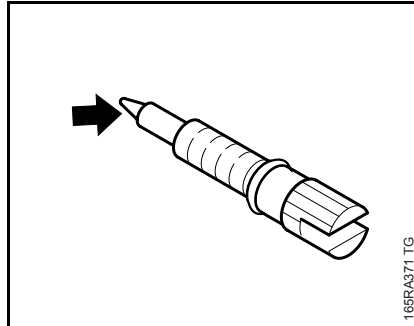

- Inspect the tip (arrow) for damage or wear and replace the high speed screw (**H**) if necessary.
- Screw down the high speed screw (**H**) as far as stop.
- Continue with pre-installing limiter cap.

### Pre-installing limiter cap

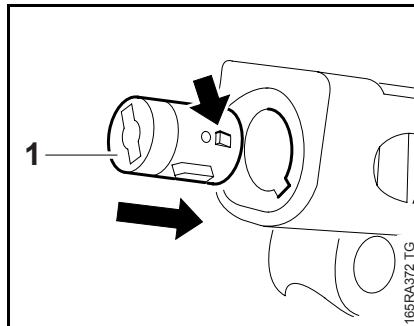

- Push the new limiter cap (1) on to the high speed screw (**H**) as far as the detent (arrow) – do not push fully home.

The basic setting is performed through the pre-installed limiter cap with screwdriver 5910 890 2304.

- Reassemble in the reverse sequence.

- Carry out the basic setting, [12.7.1](#)

## 12.7 Adjusting the Carburetor


### 12.7.1 Basic Setting

The basic setting is necessary only if the high speed screw (**H**) or low speed screw (**L**) has to be replaced or after cleaning and adjusting the carburetor from scratch.

It is necessary to carry out the basic setting after removing the limiter cap.

The carburetor, air filter and grommet are installed, the adjusting screws fitted and the new limiter cap pre-installed.


- Check chain tension and adjust if necessary.
- Inspect the spark arresting screen (if fitted) and clean or replace if necessary, [3.7](#) or [6.1](#)
- Check the air filter and clean or replace if necessary, [12.1](#)

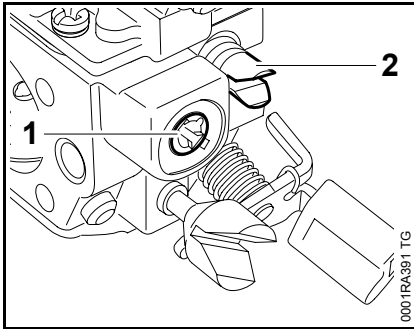

For the sake of clarity the adjusting screw is shown on the exposed carburetor.

- Starting with the high speed screw **H** (1) against its seat, open it **1 full turn** counterclockwise – this is the basic setting.
- Starting with the low speed screw **L** (2) against its seat, open it **1 full turn** counterclockwise – this is the basic setting.
- Warm up the engine.

The setting disc 5910 893 6600 may be fitted on the screwdriver 5910 890 2300 to aid adjustment.

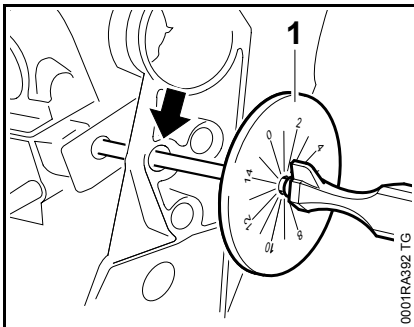


- To adjust the high speed screw (H), push the screwdriver (1) 5910 890 2304 through the opening (arrow) and the pre-installed limiter cap on the high speed screw (H).

Adjust idle speed with a tachometer. Adjust specified engine speeds within a tolerance of  $\pm 200$  rpm.

1. Adjust engine speed with idle speed screw (**LA**), to 3,300 rpm.
2. Turn the low speed screw (**L**) counterclockwise or clockwise to obtain maximum engine speed.

If this speed is higher than 3,700 rpm, abort the procedure and start again with step 1.


3. Use the idle speed screw (**LA**), to set the engine speed again to 3,300 rpm.
4. Use the low speed screw (**L**) to set engine speed to 2,800 rpm.
5. Use the high speed screw (**H**) to set the maximum engine speed to 14,000 rpm.

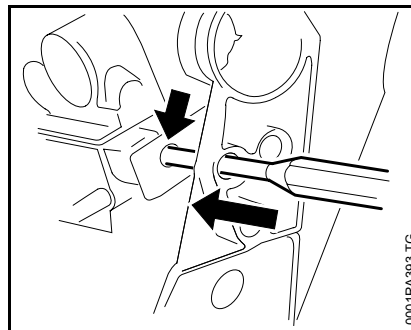

- Push a suitable drift through the opening (arrow) and push home the limiter cap until it is flush with the carburetor body.

This completes the basic setting of the high speed screw **H** and the low speed screw **L**.  
The high speed screw is locked.

## 12.7.2 Standard setting

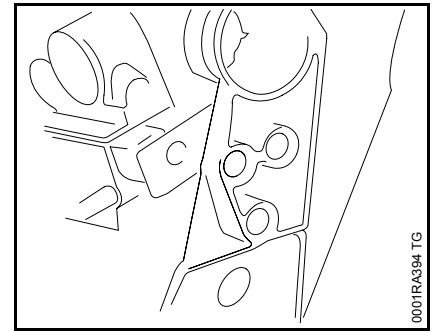

The limiter cap must not be removed for the standard setting.

Always perform the following steps before carrying out any adjustments:

- Troubleshooting, 3.6
- Check chain tension and adjust if necessary.
- Inspect the spark arresting screen (if fitted) and clean or replace if necessary, 3.7 or 6.1
- Check the air filter and clean or replace if necessary, 12.1

### Standard setting

- Shut down the engine.
- Turn the high speed screw (**H**) slowly counterclockwise as far as stop, but not more than a 3/4 turn.
- Turn the low speed screw (**L**) slowly clockwise as far as stop, then turn it back 1 full turn.

Check running behavior:  
The engine must idle and accelerate smoothly.

### Adjusting engine idle speed

- Carry out standard setting.
- Warm up the engine.

### Engine stops while idling

- Turn the idle speed screw (**LA**) clockwise until the chain starts running, then turn it back 1/2 turn.

### Saw chain runs while engine is idling

- Turn the idle speed screw (**LA**) counterclockwise until the chain stops running, then turn it back 1/2 turn.

### Erratic idling behavior, poor acceleration

(although standard setting is correct)

Idle setting too lean.

- Warm up the engine.
- Turn low speed screw (**L**) counterclockwise until the engine runs and accelerates smoothly.

It is usually necessary to change the setting of the idle speed screw (**LA**) after every correction to the low speed screw (**L**).

### Adjustment for operation at high altitude


A minor correction may be necessary if engine power is not satisfactory when operating at high altitude.


- Check standard setting.
- Warm up the engine.
- Turn the high speed screw (**H**) clockwise (leaner) – no further than stop.

Turn the adjusting screws only very slightly. Even minor adjustments can noticeably affect engine running behavior.


If the setting is made too lean there is a risk of engine damage as a result of lack of lubrication and overheating.


## 12.8 Carburetor Carrier

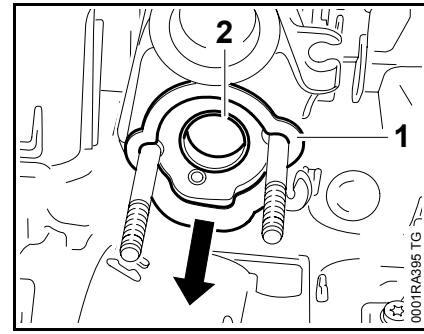

- Remove the carburetor,  12.5
- Take out the sleeve (2) and washer (1).


### Versions with Handle and Carburetor Heating

- Remove the thermostatic switch,  13.1.3

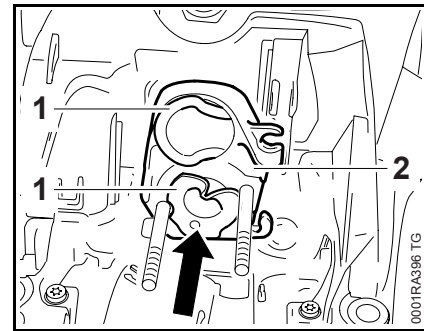


- Disconnect fuel suction hose from the carburetor carrier.
- Push the manifold flanges (1) out of the carrier (2) in the direction of the cylinder.
- Remove the carburetor carrier (2). Inspect and replace if necessary.


## Installing

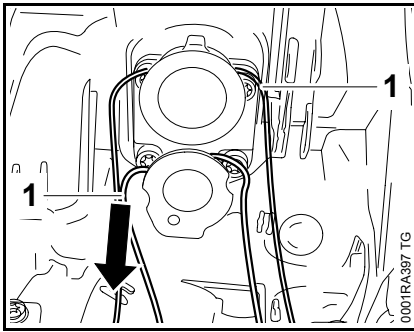


- To pull the manifold flanges through the openings in the carburetor carrier, wind pieces of string (1) (about 15 cm long) around the backs of the flanges and pass the ends of the strings through the openings.

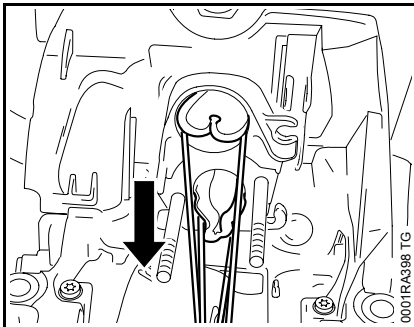

- Pull the ends of the strings with the manifold flanges through the intake opening.
- Pull the manifold flanges into the openings in the carburetor carrier with the string.
- Remove the string.

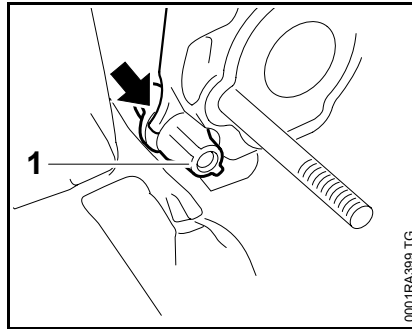

- Fit the fuel hose (1) in the guide (arrow).

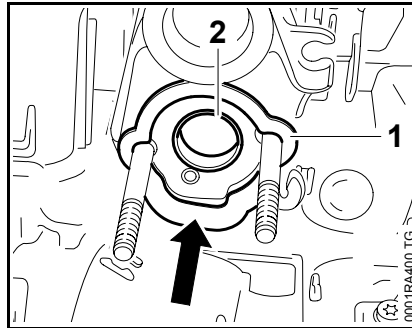

- Fit the washer (1) and ring (2).

When reassembling, check that all wires are properly seated in their guides.


### Versions with Handle and Carburetor Heating

- Install the thermostatic switch, [13.1.3](#)
- Reassemble all other parts in the reverse sequence.
- Tightening torques, [2.5](#)

## 12.9 Intake Manifold


A damaged intake manifold can result in engine running problems.

- Troubleshooting, [3.6](#) or [3.7](#)
- Remove the shroud, [6.4](#)
- Remove the carburetor, [12.5](#)
- Remove the carburetor carrier, [12.8](#)

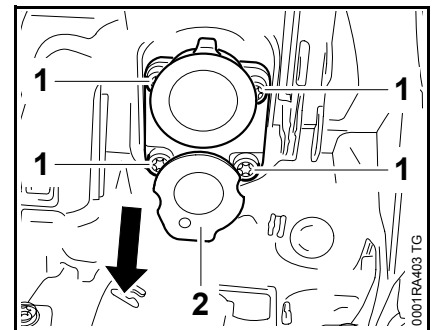

- Take out the screws (1).
- Remove the intake manifold (2).
- Inspect the intake manifold (2) and replace it if necessary – even very minor damage can result in engine running problems, [3.7](#)




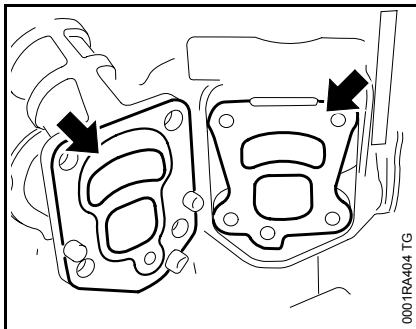

- Inspect and clean the sealing faces (arrows), [15](#)

The sealing faces must be in perfect condition. Always replace components with damaged sealing faces.

### Installing

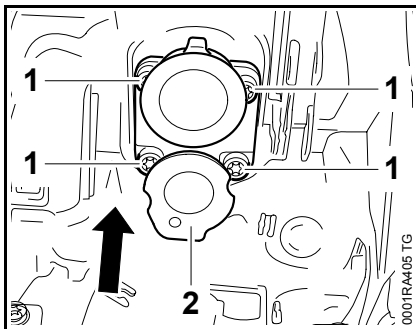


- Position the manifold (2) on the cylinder.
- Fit and tighten down the screws (1) firmly.
- Install the carburetor carrier, [12.8](#)
- Reassemble all other parts in the reverse sequence.
- Tightening torques, [2.5](#)

## 12.10 Tank Vent

### 12.10.1 Testing


If problems occur on the carburetor or the fuel supply system, also check and clean the tank vent and replace it if necessary. Check function by performing pressure and vacuum tests on the tank via the fuel hose.

- Open the fuel tank cap and drain the fuel tank, [1](#).
- Close the tank cap.
- Remove the carburetor, [12.5](#)

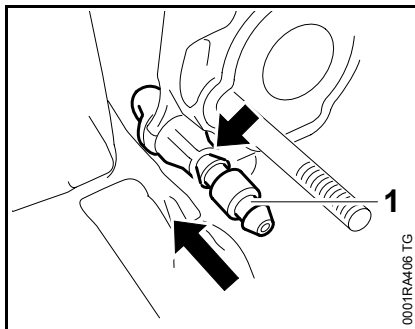

- Push the nipple (1) 0000 855 9200 into the fuel hose (arrow).

### Vacuum test

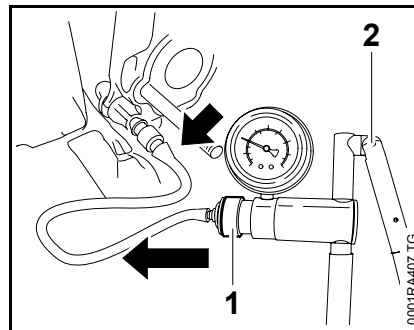


- Push the ring (1) to the left and connect the pump (2) 0000 850 1300 to the nipple (arrow)
  - subject the fuel tank to a vacuum.

Equalization of pressure takes place via the tank vent. There must be no buildup of vacuum in the tank.

- Clean the area around the tank vent.
- Always install a new fuel hose.
- If necessary, install a new tank vent or tank, [12.10](#) or [12.11.3](#).

## Pressure test

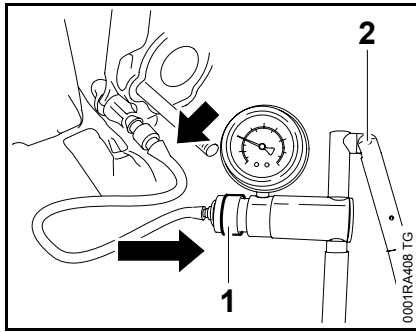


- Push the ring (1) to the right and connect the pump (2) 0000 850 1300 to the nipple (arrow)
  - pressurize the fuel tank.
- Operate the pump until the pressure gauge indicates a pressure of 0.5 bar. If this pressure remains constant for at least 20 seconds, the tank, including the tank vent, is airtight. If the pressure drops, the leak must be located and the faulty part replaced.
- Always install a new fuel hose.
- Reassemble in the reverse sequence.


## 12.10.2 Removing and Installing



- Take out the screw (1).

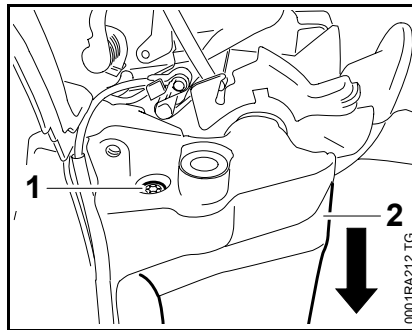


- Take out the screw (1).
- Lower the tank housing (2).

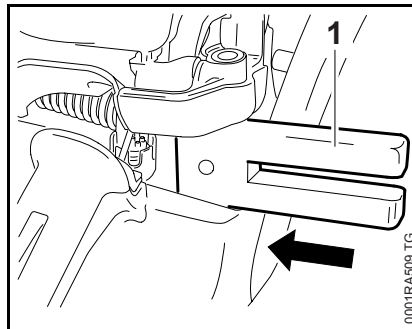


- Slide the wooden assembly block (1) between the crankcase and tank housing.

## Machines with Handle Heating

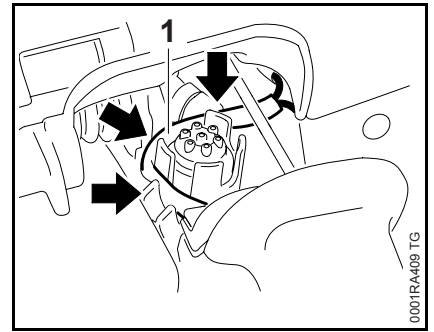


- Pull the wire with insulating tube (1) out of the guides (arrows).

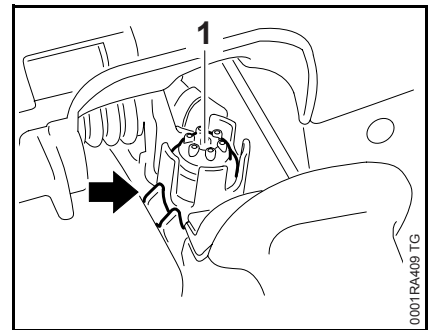

- Pry the tank vent (1) out of its seat using the rib (arrow) for leverage.

Always install a new tank vent.



- Coat sealing ring of new tank vent with STIHL press fluid,  15
- Push home the tank vent by hand until it snaps into position.
- Reassemble all other parts in the reverse sequence.

## 12.11 Fuel Intake


### 12.11.1 Pickup Body


Any impurities mixed with the fuel are retained by the pickup body (filter). The fine pores of the filter eventually become clogged with minute particles of dirt. This restricts the passage of fuel and results in fuel starvation.

In the event of problems with the fuel supply system, always check the fuel tank and the pickup body first.

- Troubleshooting,  3.6 or  3.7

Clean the fuel tank if necessary,

- Open the tank cap and drain the tank.
- Pour a small amount of clean gasoline into the tank. Close the tank and shake the saw vigorously.
- Open the tank again and drain it.
- Dispose of fuel properly in accordance with environmental requirements,  1

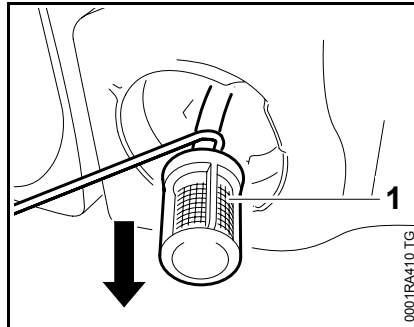




- Open the tank cap.
- Use hook 5910 893 8800 to remove the pickup body (1) from the fuel tank.


Do not overstretch the fuel hose.

- Pull off the pickup body (1), check it and replace if necessary.
- Reassemble in the reverse sequence.

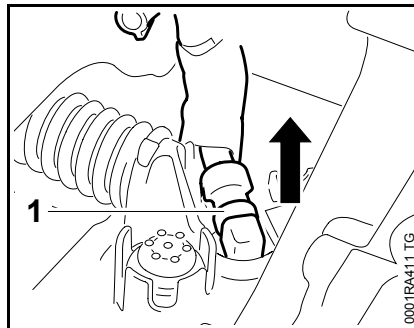
### 12.11.2 Fuel Hose




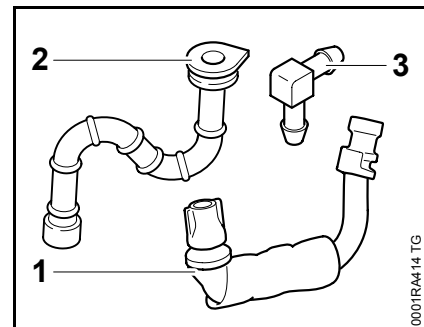
- Remove the shroud,  6.4
- Remove the air guide shroud,  12.4
- Pull out the fuel hose (1) with connector.

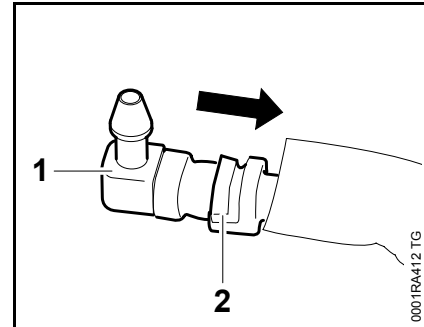


- Pull the fuel hose (2) off the connector (1).

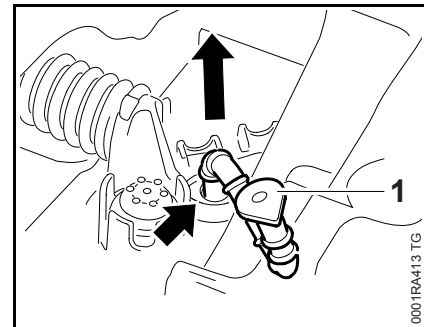


- Remove the pickup body,  12.11.1
- Pull the fuel suction hose (1) out of the fuel tank.



- Inspect the fuel hose (1), fuel suction hose (2) and connector (3) and replace as necessary.

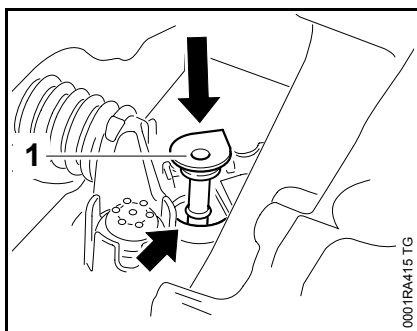


- Push the fuel hose (1) through the bore (arrow) in the fuel tank.

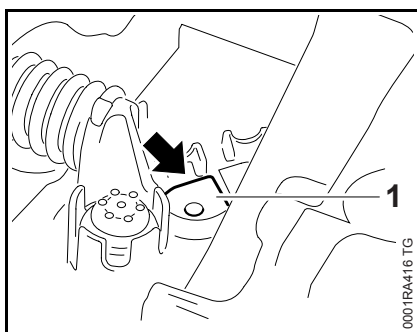


- Line up the fuel suction hose (1) and push it into the housing bore – the flange must engage the guide (arrow).
- Coat with STIHL press fluid, 15

## Installing

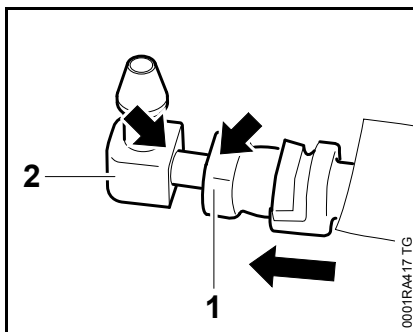


- Push the fuel hose (1) onto the connector (2) as far as stop.

Note position of the hose – the flats (arrows) must be in alignment.

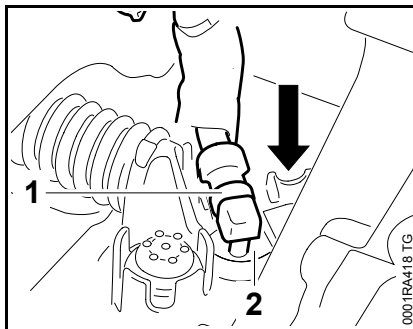

- Push the fuel hose (1) with connector into the fuel suction hose (2).

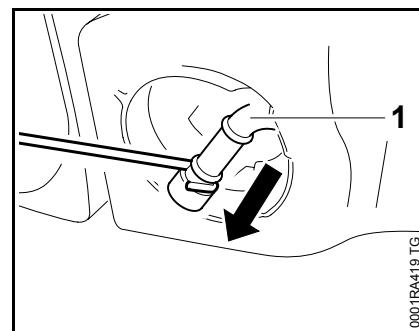

- Use hook 5910 893 8800 to pull the fuel suction hose (1) out of the fuel tank.

Do not overstretch the fuel suction hose.

- Fit the pickup body, 12.11.1
- Close the tank cap.


### 12.11.3 Tank Housing

If a mounting thread for plastic tapping screws is damaged, the tank housing can be repaired by fitting a thread insert.

- Drain the fuel tank, 1
- Remove the handlebar, 9.6  
Machines with handle and carburetor heating, 9.7
- Remove cable on machines with QuickStop Super, .
- Remove the stop buffer, 9.5
- Remove the control levers, 10.



- Take out the screw (1).

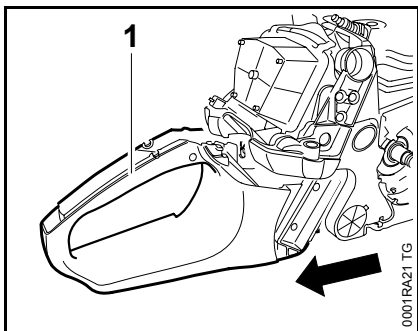


- Pull out the tank housing (1).


- Inspect the tank housing and replace if necessary

Only transfer those parts from the old tank housing that are not included with the replacement – see parts list.

## Installing

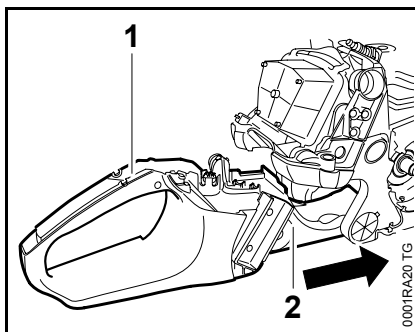

- Slide the tank housing (1), narrow part (2) first, between the two halves of the crankcase.

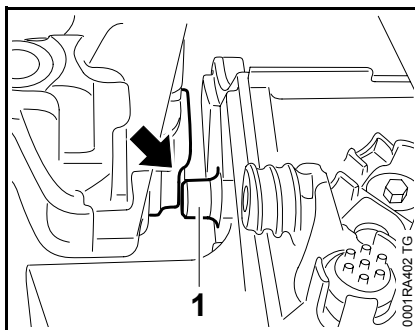

The filter base is not shown in the illustration.

- Push the peg (1) past the recess (arrow) and secure with the buffer.
- Reassemble all other parts in the reverse sequence.
- Tightening torques, 2.5

## 13. Heating System

### 13.1 Carburetor Heating

Current is supplied via wires to the heating element which is installed between the air filter and carburetor.

The heating element is controlled by the thermostatic switch on the carburetor.



The heating element and thermostatic switch should be checked if running problems occur when the cold engine is idling or running at part load, particularly at temperatures below freezing.


Idling problems with a hot engine are also an indication of a fault in the heating element or thermostatic switch.

#### 13.1.1 Testing the Complete System

The generator and heating element are checked in the following test which should be performed at an ambient temperature of at least + 20°C (68°F).

If the temperature is lower than + 13°C (55°F), the thermostatic switch may close and produce false readings.


- Test the heating system as specified in the carburetor heating troubleshooting chart,  13.2
- Remove the air filter,  12.1
- Set the ohmmeter to measuring range "Ω".

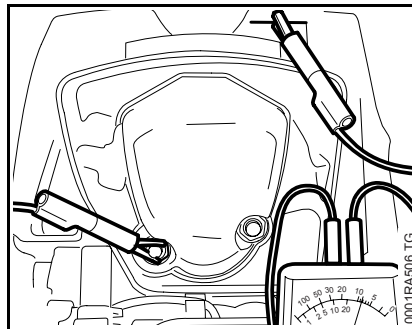


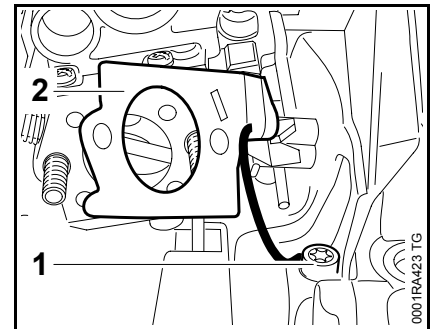
- Clip one of the two test leads to the nut on the baffle and the other to a cylinder fin.
- If the system is in good condition the ohmmeter will indicate a value of about 12 Ω in measuring range "Ω".

If the reading obtained is outside this tolerance, test each component separately.


#### 13.1.2 Testing the Heating Element

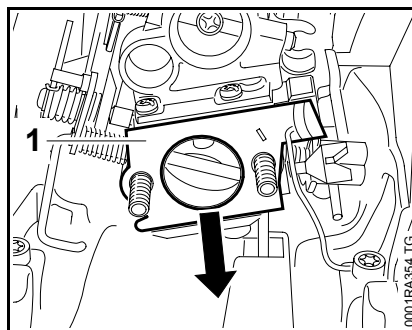

- Remove the filter base,  12.3
- Remove the heating element (1).




- Take out the screw (1).
- Remove the heating element (2).

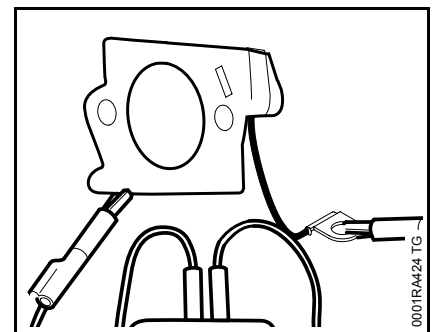


- Clip one test lead to the heating element and the other to the ring terminal.

If the heating element is in good condition the ohmmeter will indicate a value of about 12 Ω in measuring range "Ω".

#### Installing

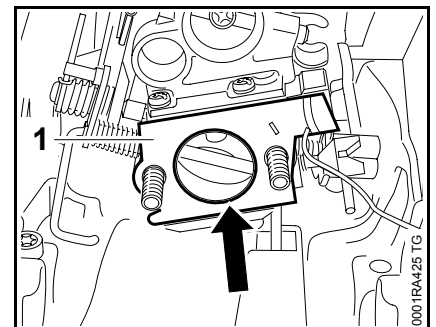


- Fit the heating element (1).

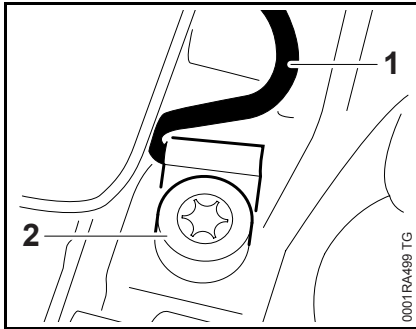


- Fit the wire (1) – the crimped side of the terminal must point down.
- Tighten down the screw (2) firmly.
- Reassemble all other parts in the reverse sequence.
- Tightening torques, 2.5


### 13.1.3 Thermostatic Switch

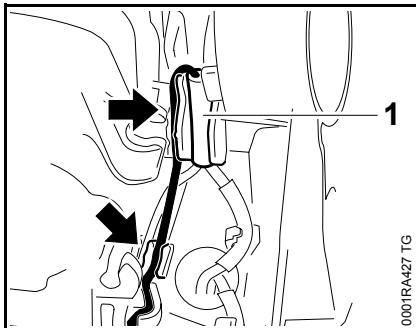

- Remove the carburetor, 12.5
- Pull the connector (1) and wire out of the guides (arrows).

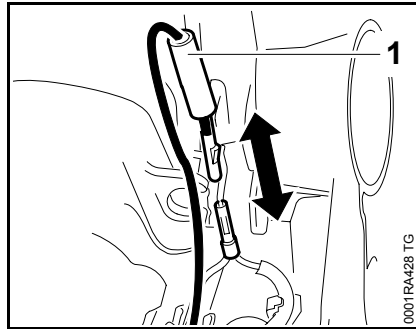


- Push the insulating tube (1) in the direction of the thermostatic switch and separate the pin and socket connector.

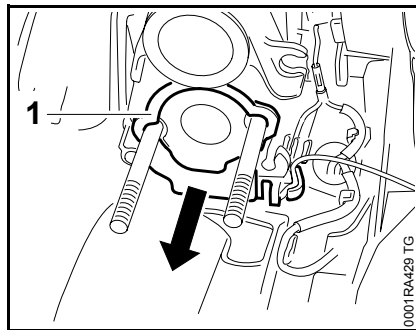


- Pull off the thermostatic switch (1).

#### Installing

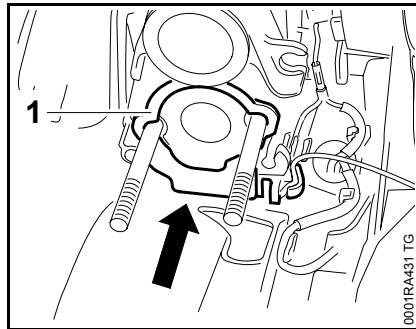


- Fit the new thermostatic switch (1).

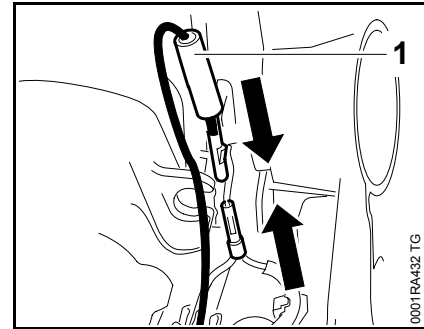


- Reconnect the pin and socket connector.
- Push the insulating tube (1) over the connector.

To reduce the risk of a short circuit, make sure the insulating tube completely covers the connector.

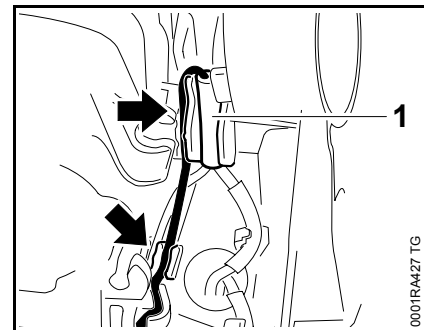


- Push the wire and connector (1) into the guides (arrows) as far as stop.
- Reassemble all other parts in the reverse sequence.
- Tightening torques, 2.5
- Check operation.

## 13.2 Carburetor Heating System Troubleshooting Chart

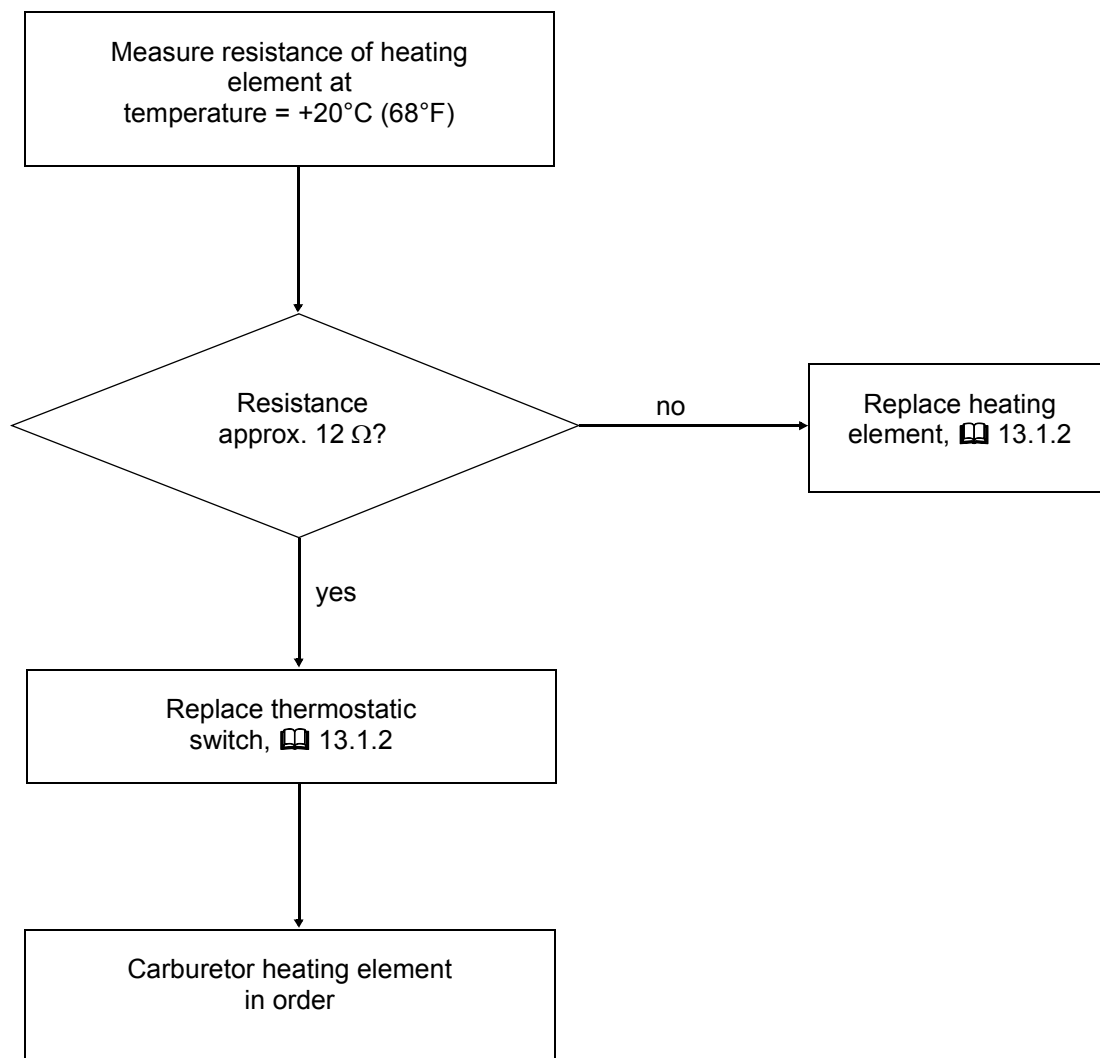

### Circuit Diagram

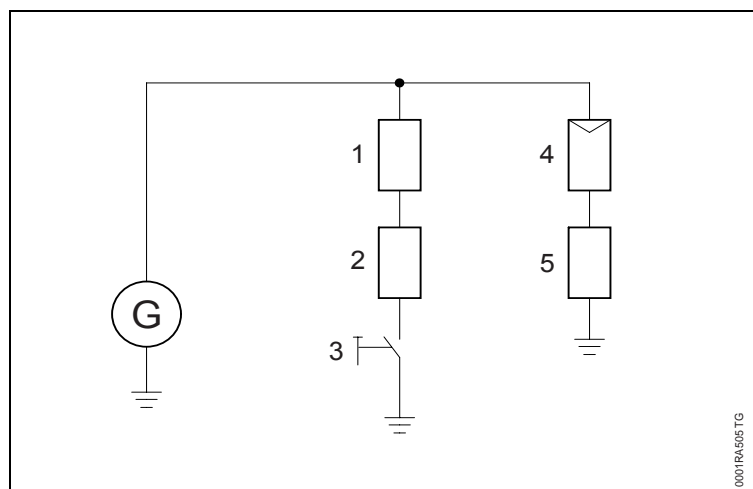

- G Generator
- 1 Rear handle
- 2 Handlebar
- 3 Heater switch
- 4 Thermostatic switch
- 5 Heating element (carburetor)




## 13.3 Handle Heating System

### 13.3.1 Troubleshooting

The entire handle heating system is maintenance-free and subject to practically no wear. Faults in the generator, heating elements and wiring are generally caused by mechanical damage.


There are two reasons for failures in the heating system:

1. A break in the circuit due to a faulty wire or component.
2. A short circuit resulting from damage to the insulation.

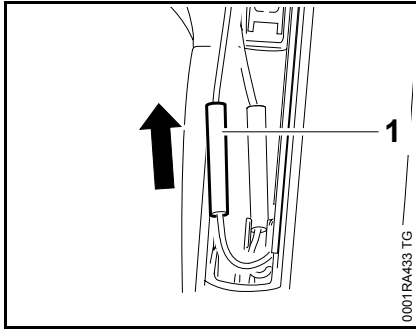


- Remove the handle molding, 10.2


- Pull one of the connectors out of the guide and push the insulating tube (1) in the direction of the wiring harness.

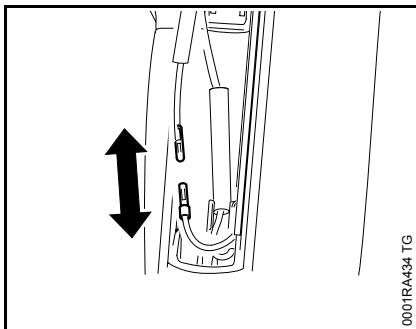

- Separate the pin and socket connector.

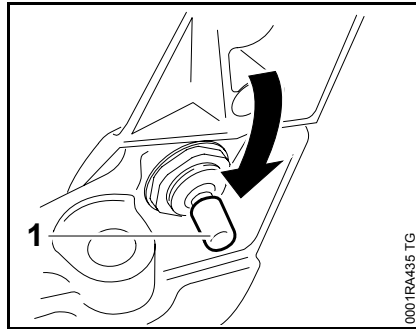

- Set the heater switch (1) to "I".
- Set the ohmmeter to " $\Omega$ ".

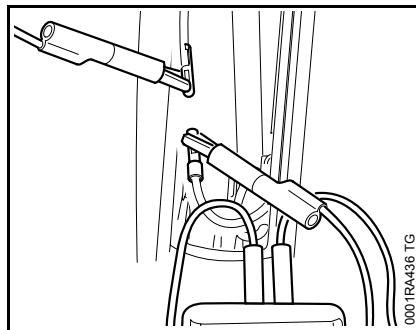

- Set the Master Control lever to "0".
- Clip the test leads to the wire from the wiring harness and the rear handle heating element wire.

#### Carburetor Heating

- Separate the pin and socket connector to the thermostatic switch, 13.1.3

All electrical components of the handle heating system are connected in series with the ohmmeter.

If the system is in order, the ohmmeter will indicate a value of about  $10\ \Omega$  in measuring range " $\Omega$ ".


If no reading is obtained, there is a break in the circuit.

If the ohmmeter shows a very low value, there is a short circuit in one of the components.


In either case it is necessary to check each component separately. The generator wire remains disconnected from the thermostatic switch during this check.

- Use handle heating and generator troubleshooting chart to check the system, 13.7.1
- Check resistance on handlebar, 13.6
- Check resistance on rear handle, 13.5
- After completing the test, reconnect the wires and push the insulating tube over the pin and socket connector.
- Reassemble in the reverse sequence.


### 13.4 Heater Switch

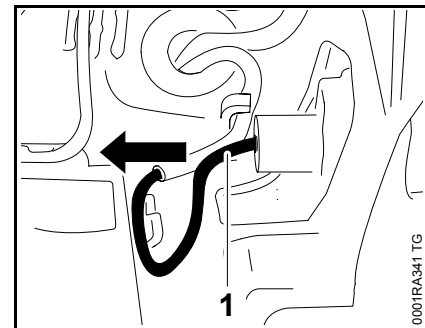

- Pull off the connector sleeve (1).

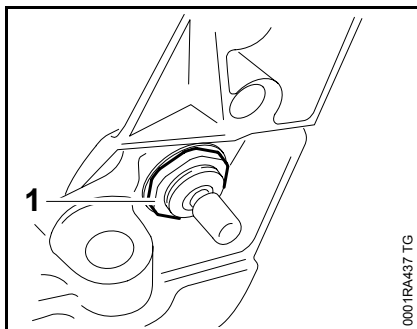


- Unscrew the nut (1).
- Remove the washer.

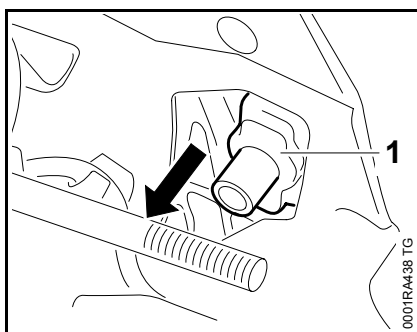

- Remove the heater switch (1) from inside, check and replace if necessary.

### Installing

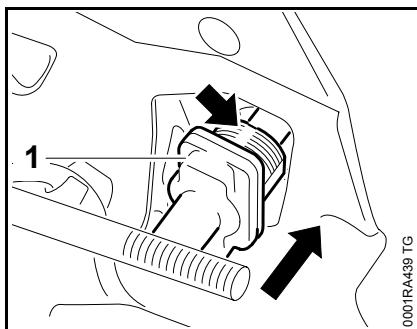


- Position the heater switch with the groove (arrow) facing up.
- Push the heater switch (1) through the hole in the carburetor box.


- Check operation.
- Reassemble all other parts in the reverse sequence.
- Tightening torques, 2.5

### 13.5 Heating Element in Rear Handle


The ambient temperature during removal and installation should not be less than + 15°C.

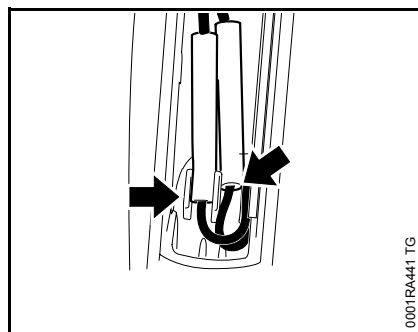

- Remove the handle molding, 10.2
- Remove the interlock lever, 10.2
- Pull the wires out of the guides (arrows).

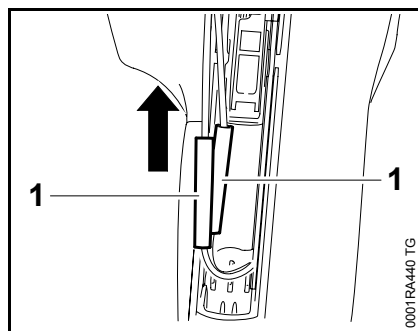

- Push back the insulating tubes (1) in the direction of the wiring harness and separate the pin and socket connectors.

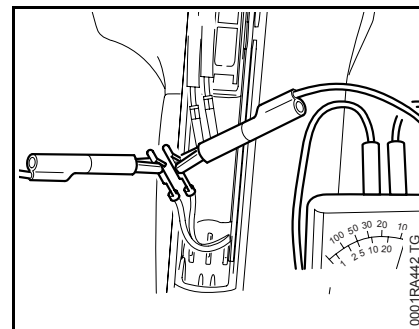

- Check the heating element and replace if necessary.


If the heating element is in good condition the ohmmeter will indicate a value of about 2  $\Omega$  in measuring range " $\Omega$ ".

If the reading is outside this range, install a new heating element.

Heating element does not operate even though resistance measurement is ok?


- Test the generator and heater switch, 13.3

## Installing

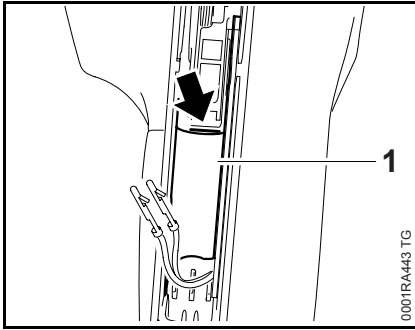


- Position the new heating element (1) so that it butts against the edge (arrow) of the rear handle – make sure it is completely flat.

If the heating element is not fitted perfectly flat, heat transfer to the handle will be interrupted and the element may fail as a result of overheating.

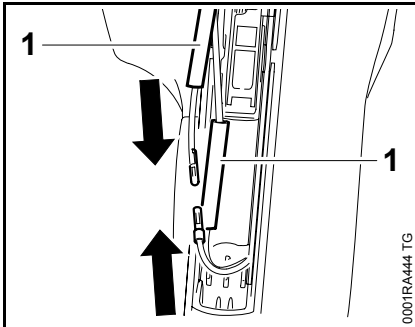

- Reconnect the pin and socket connectors.
- Push the insulating tubes (1) over the connectors.
- To reduce the risk of a short circuit, make sure the insulating tubes completely cover the connections.

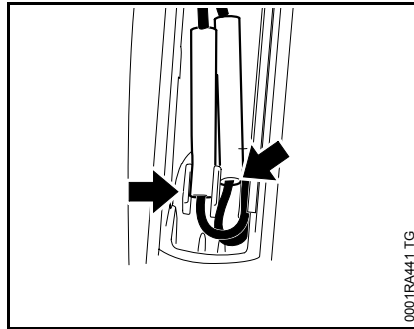

The wires and connectors must be seated in the guides (arrows).

- Reassemble all other parts in the reverse sequence.

### 13.6 Heating Element in Handlebar

The heating element in the handlebar (front handle) is not replaceable. A new handlebar must be fitted if the heating element is faulty.

#### Testing the Heating Element


- Swing the filter base to the rear, 12.3.

Carry out the following test to find the wire to the handlebar heating element.

- Separate the connectors of the heating element on the rear handle.

Carry out measurement between the two terminal sockets and the heater switch connector sleeve.

- Set the heater switch to I, 9.7.

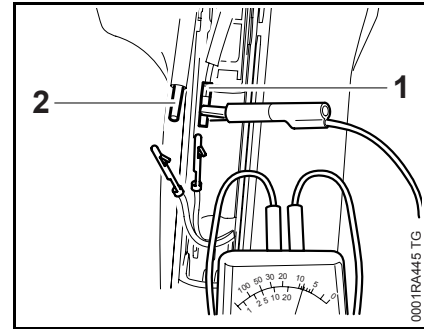

- Reading between terminal socket (1) and heater switch connector sleeve approx. 1  $\Omega$  = generator wire.
- Reading between terminal socket (2) and heater switch connector sleeve approx. 6.4  $\Omega$  = wire to handlebar heating element.


If the heating element is in good condition the ohmmeter will indicate a value of about 6.4  $\Omega$  in measuring range " $\Omega$ ".

If the reading is outside this range, install a new handlebar with heating element, 9.7.


Heating element does not operate even though resistance measurement is ok?

- Test the generator and heater switch, 13.3
- Reassemble in the reverse sequence.


### 13.7 Generator

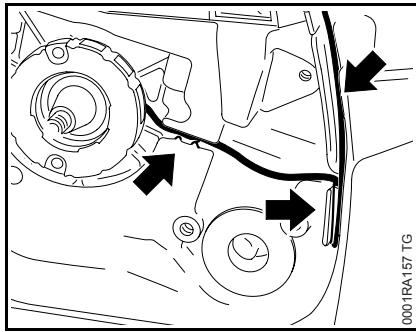


- Remove the ignition module, 7.3
- Remove the flywheel, 7.6
- Pull the connector and wire out of the guides (arrows).

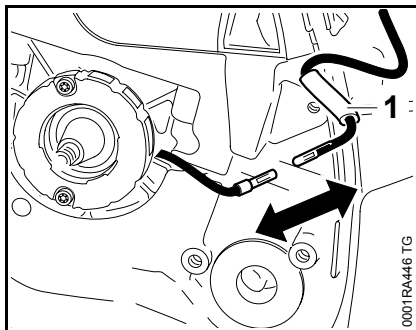


- Push back the insulating tube (1) in the direction of the wiring harness and separate the pin and socket connector.

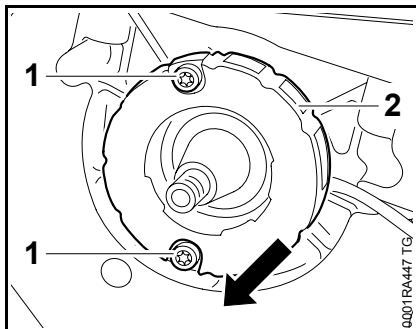

- Take out the screws (1).
- Remove the generator (2).

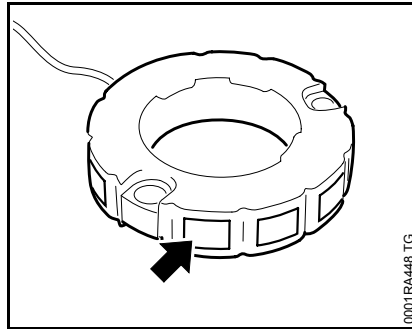


- Inspect the generator and poles (arrow) for cracks or other damage. If damage is found, replace the generator.

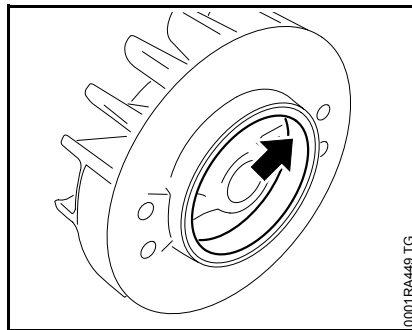


- Inspect the magnet ring (arrow) in the flywheel for cracks or other damage. If damage is found, replace the flywheel.

#### Installing

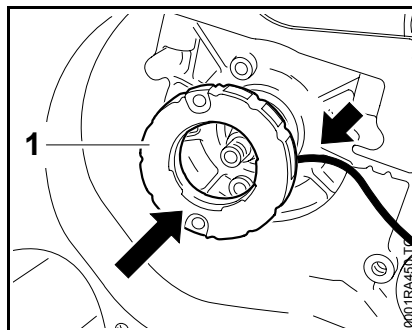


- Position the generator (1) with the wire (arrow) facing the crankcase.
- Use threadlocking adhesive, 15.

- Insert the screws and tighten them down firmly.
- Check that the generator is properly seated.
- Tightening torques, 2.5

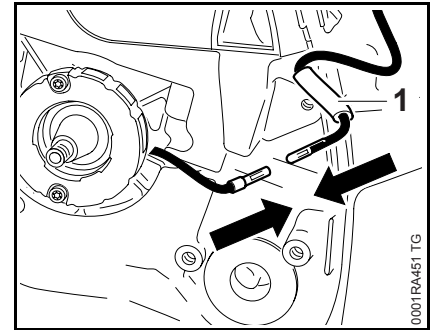


- Reconnect the pin and socket connector.
- Push the insulating tube (1) over the connector.

To reduce the risk of a short circuit, make sure the insulating tube completely covers the connector.

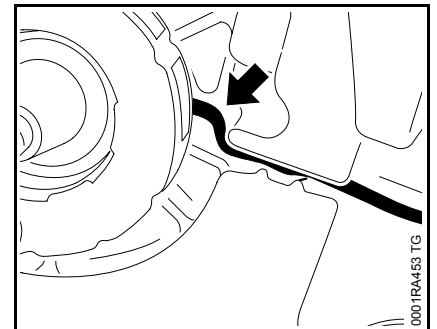


- Position the generator wire at the bottom of the recess (arrow).

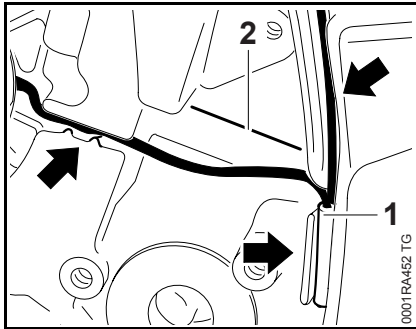


- Push the generator wire and connector (1) into the guides (arrows) as far as stop.

Make sure the wire is below the edge (2).

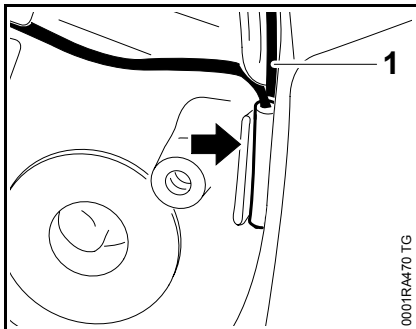

- Position the wire (1) below the connector (arrow).

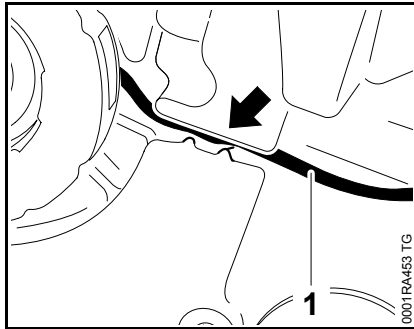



The wire (1) must be properly seated in the guide (arrow) and not project.

The flywheel must not touch the generator wire  
– this could cause a break in power supply.

- Reassemble all other parts in the reverse sequence.

### 13.7.1 Handle Heating and Generator Troubleshooting Chart

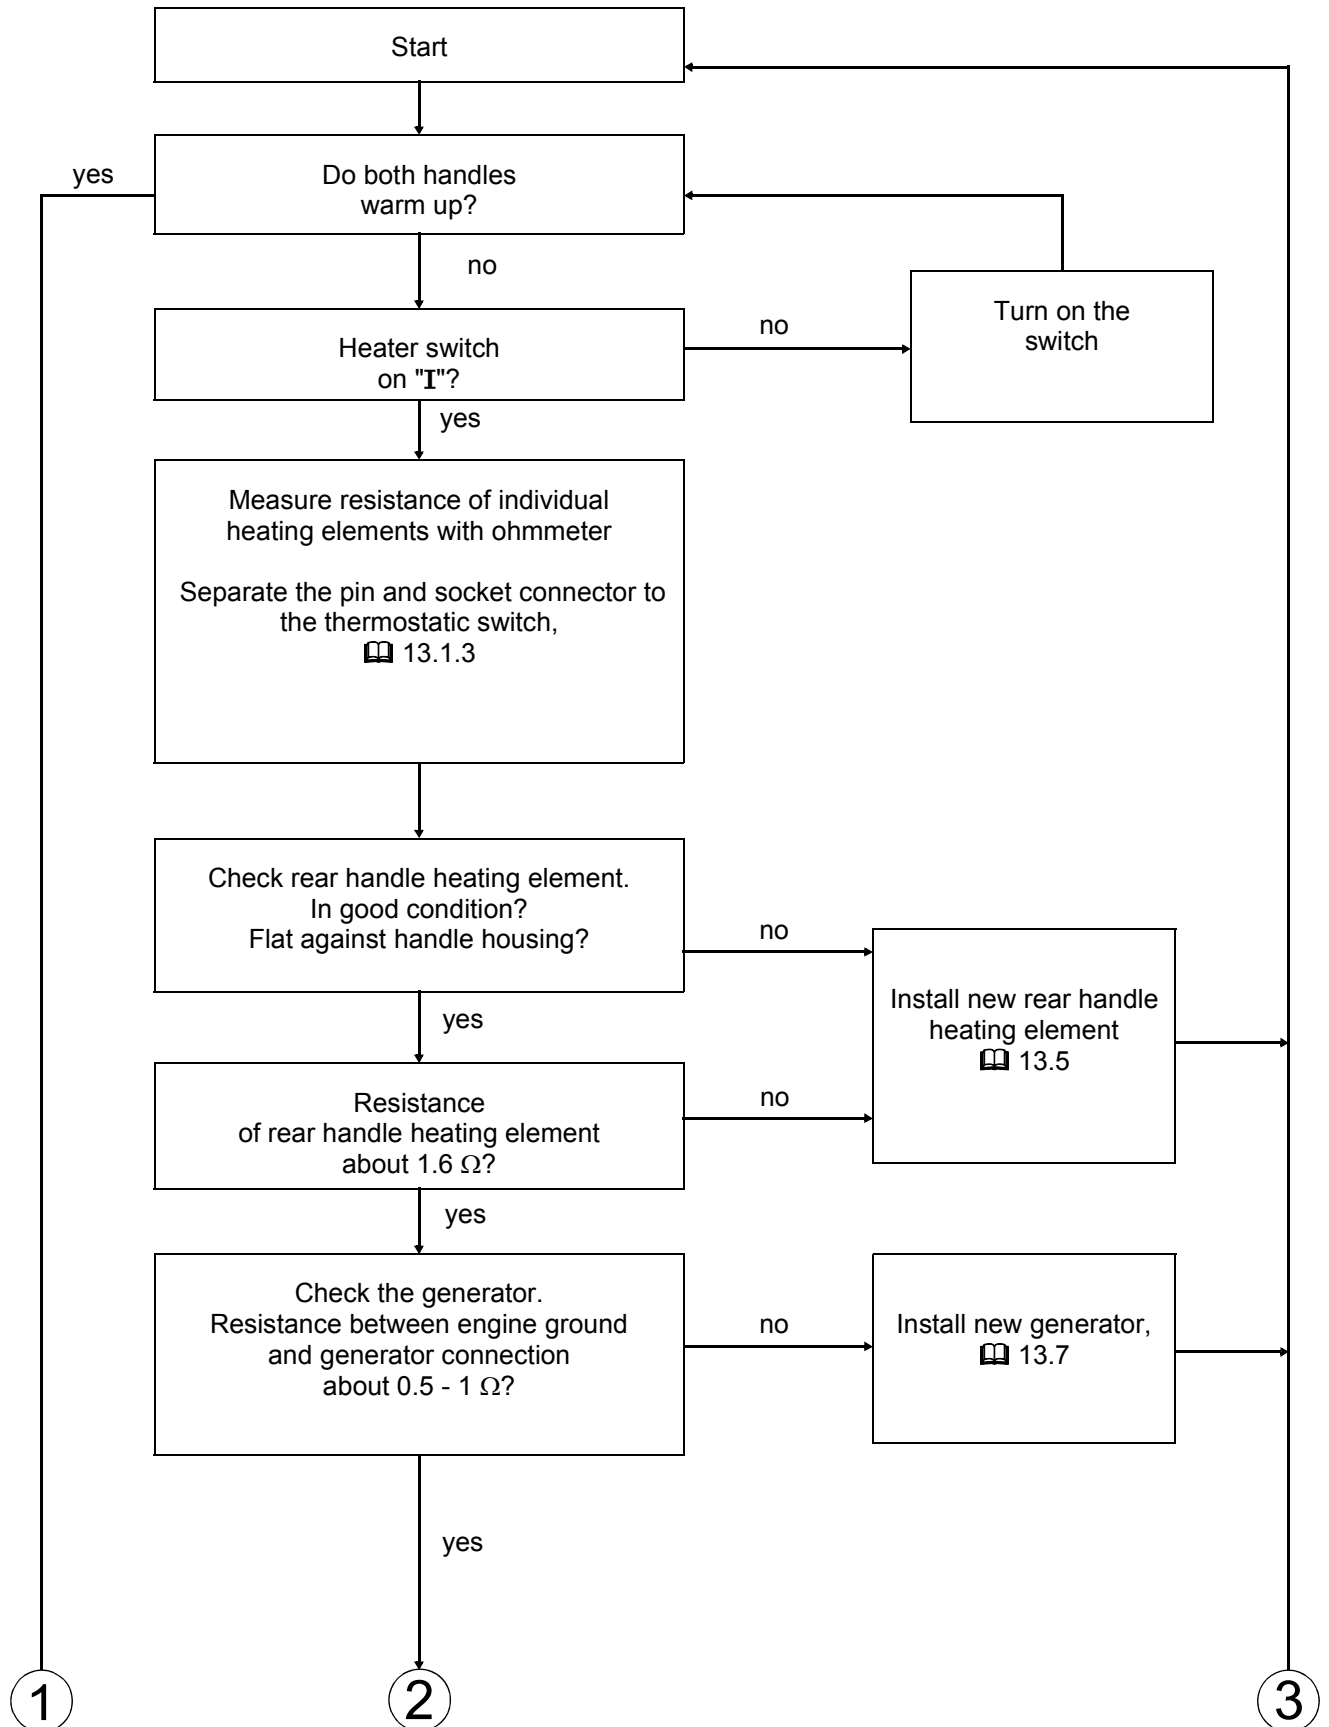

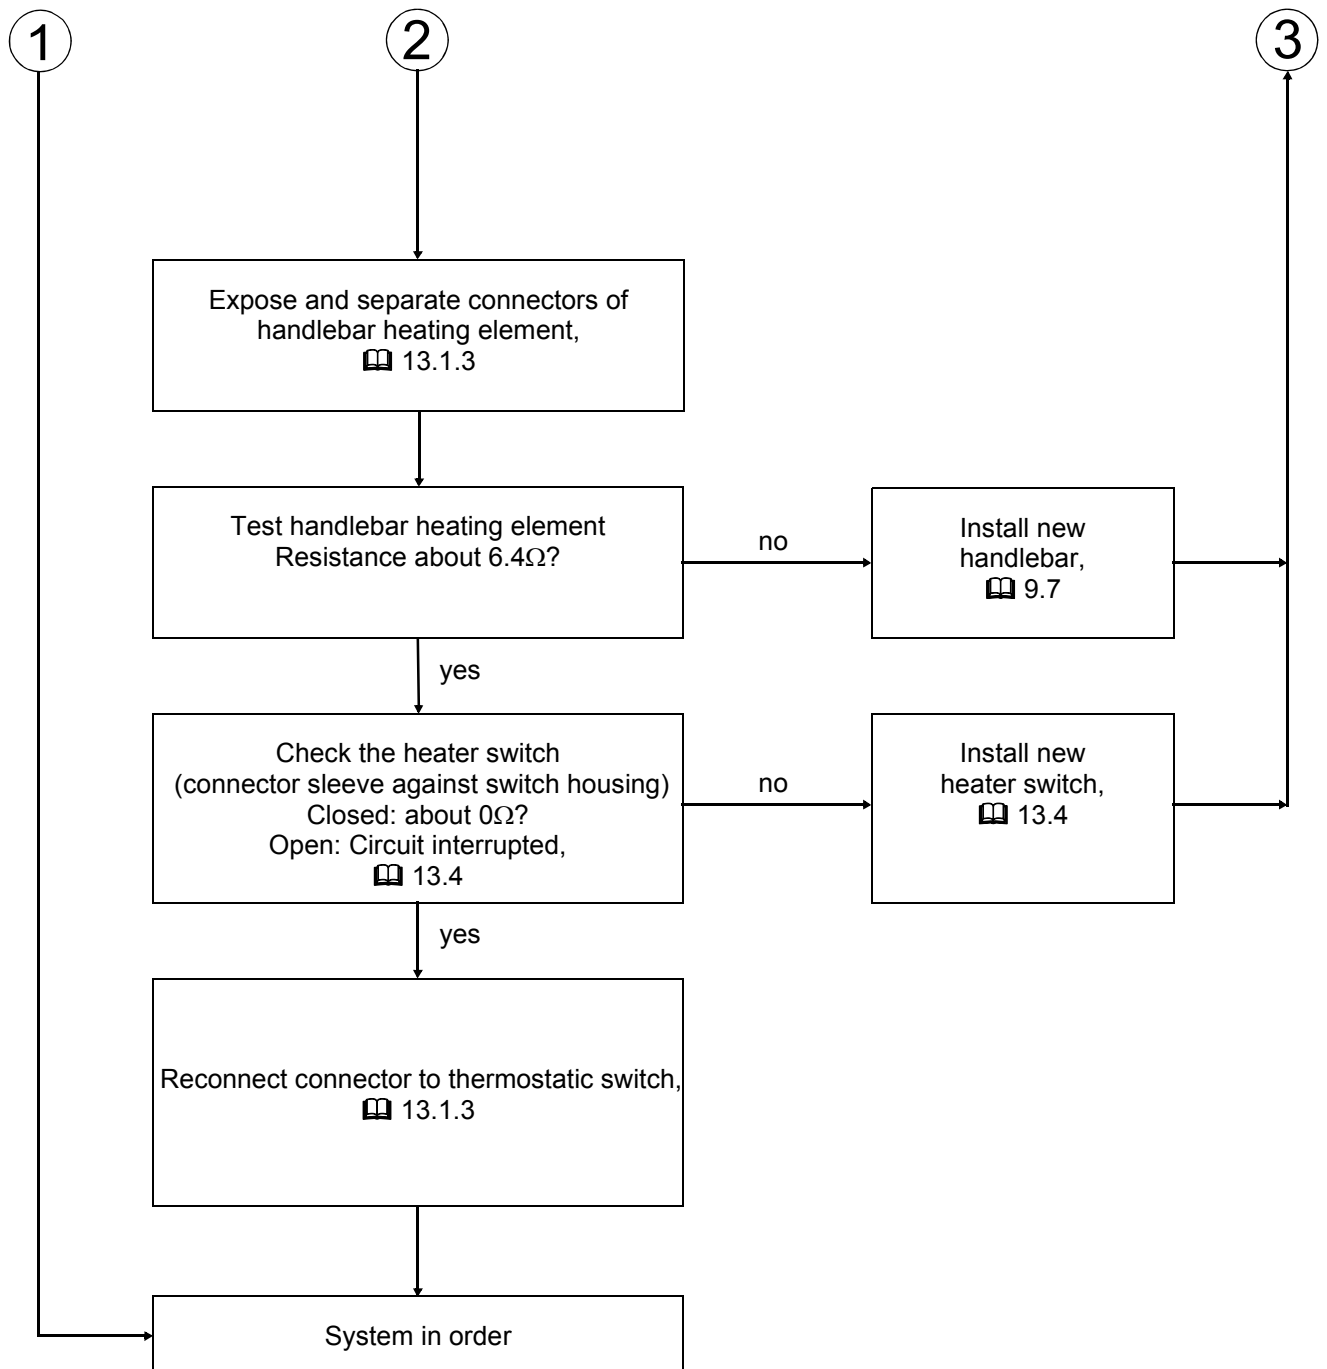

### 13.7.2 Test Connections and Test Values

- The pin and socket connections of the wires in the rear handle must be disconnected to test the individual components.


Component	Ohmmeter connection (use either test lead)		Resistance $\Omega$		If faulty	
	Lead 1	Lead 2	Spec.	Actual	Cause	Remedy
Switch	Switch terminal <sup>1)</sup>	Switch housing	< 0.5	-	Switch faulty	Replace switch
Heating element in rear handle	Connector on wire from heating element	Connector on wire from heating element	1.6	1.5 - 2.0	Heating element OK	Install new heating element or repair insulation
				-	Break in wire, heating element damaged	
				0	Short circuit – damaged insulation	
Heating element in handlebar	Connector on wire from handlebar heating element	Connector on wire from handlebar heating element	6.4	6.0...8.0	Heating element OK	Install new handlebar
				-	Break in wire, heating element damaged	
				0	Short circuit – damaged insulation	Repair insulation

<sup>1)</sup> Pull out wire for this purpose



Component	Ohmmeter connection (use either test lead)		Resistance $\Omega$		If faulty	
	Lead 1	Lead 2	Spec.	Actual	Cause	Remedy
Generator	Connector on generator wire	Ground	0.6	0.5 - 1	Generator OK	
				-	Break in wire, generator damaged	Install new generator
				0	Short circuit – damaged insulation	Repair insulation



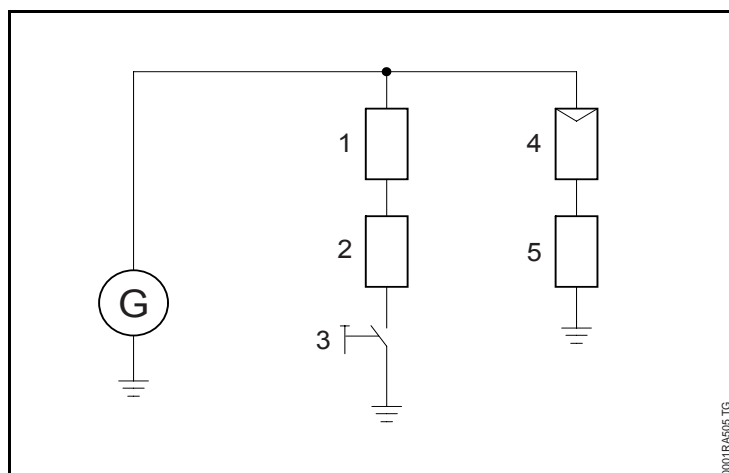





### Circuit Diagram




- G Generator
- 1 Rear handle
- 2 Handlebar
- 3 Heater switch
- 4 Thermostatic switch
- 5 Heating element (carburetor)


## 13.8 Wiring Harness


The wiring harness must be replaced if it is faulty.


- Remove the shroud,  6.4
- Remove the ignition module,  7.3
- Remove the carburetor,  12.5
- Remove the thermostatic switch,  13.1.3
- Remove the carburetor carrier,  12.8
- Remove the interlock lever,  10.2,  10.3
- Remove the filter base,  12.3

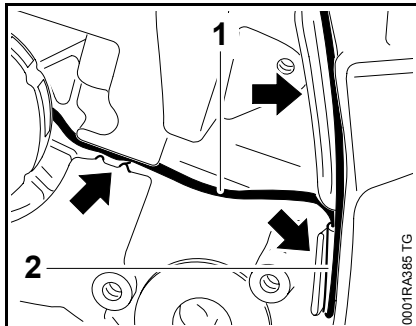


- Pull the wire (1) and connector (2) out of the guides (arrows).

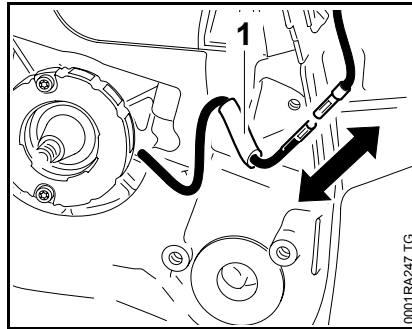


- Push back the insulating tube (1) in the direction of the generator wire and separate the pin and socket connector.
- Remove the air guide shroud,  12.4

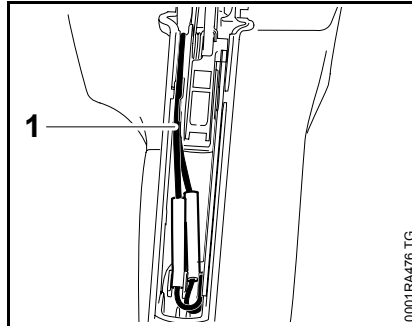


- Tug the wiring harness (1) a little to find the right connector.

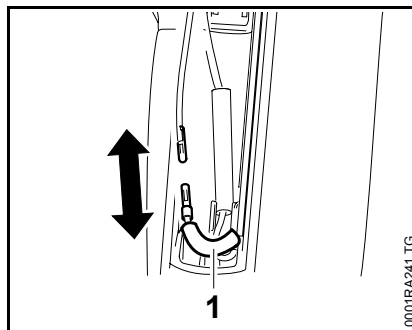

- Push the insulating tube (1) in the direction of the heating element wire and separate the pin and socket connector.

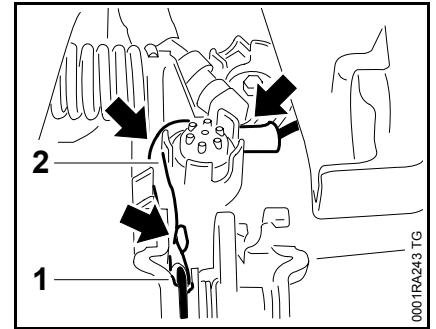


- Pull the wires (1) and the insulating tube (2) out of the guides (arrows).

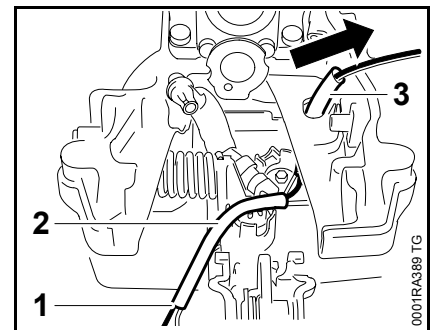


- Pull the wiring harness (1) out of the insulating tube (2).
- Pull the insulating tube (3) off the wiring harness.
- Check the wiring harness and insulating tubes and replace if necessary.

## Installing

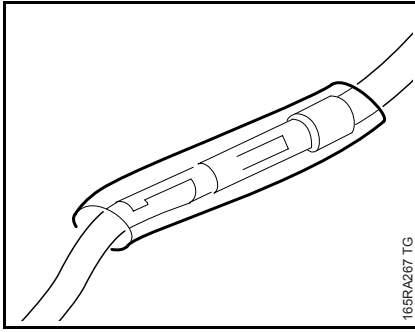


During all the following procedures:


- To reduce the risk of a short circuit, make sure the insulating tubes completely cover the connections.

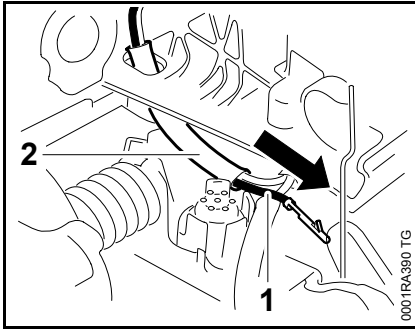

- Push the heating element/wiring harness wire (1) through the insulating tube (2).

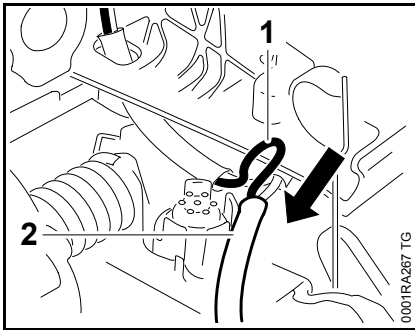


- Push the heating element/wiring harness wire (1) through the insulating tube (2).

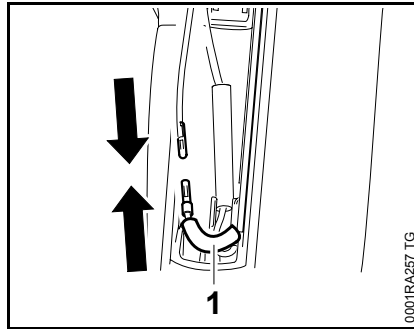


Before placing the wires in position, make sure they are the same length.


- Push the pin and socket together until they lock.
- Push the insulating tube (1) over the connector.

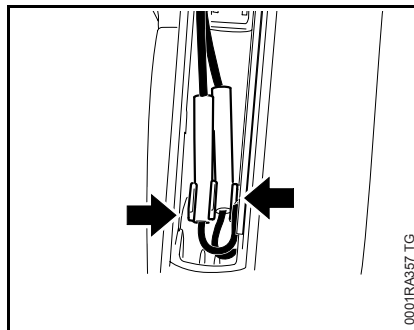

- Insulating tubes must be located in the guides (arrows).

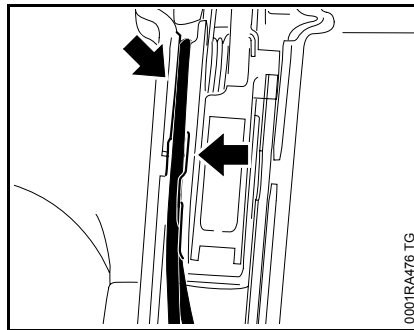

- Push the wires fully into the guides (arrows).

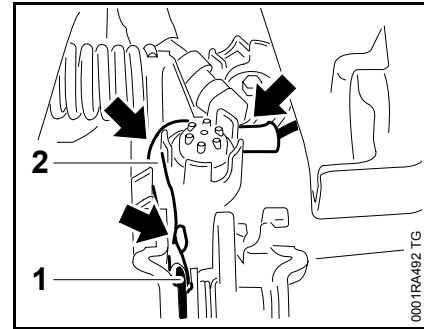

- Starting from the edge (1), push the insulating tube (2) into the guides (arrows).

Make sure the wires are laid neatly and straight (no loops).

- Install the air guide shroud, [12.4](#)
- Reassemble all other parts in the reverse sequence.
- Tightening torques, [2.5](#)

## 14. Special Servicing Tools

### New Special Tools

No.	Description	Part No.	Application	Rem.
1	Test flange	1140 890 1200	Leakage Test	
2	Service tool ZS (set) including Drilled plate 5910 893 2103 - Drilled plate for service tool ZS (set) 5910 007 2200	5910 007 2201  5910 893 2103	Removing and installing the crankshaft (starter side)  Pulling two halves of crankcase together	

### Existing Special Tools

No.	Description	Part No.	Application	Rem.
1	Carburetor and engine tester - Nipple - Hose for leakage test - Plug for leakage test	0000 850 1300 0000 855 9200 1110 141 8600 1122 025 2200	Testing engine and carburetor for leaks Testing carburetor for leaks Testing carburetor for leaks Leakage testing decompression valve	
2	Installing tool	0000 890 2201	Installing rope guide bushing	
3	Clamping strap	0000 893 2600	Compressing the piston rings	
4	Locking strip	0000 893 5903	Blocking the crankshaft	
5	Pliers DIN 5254-A 19	0811 611 8380	Removing and installing external circlips	
6	Screwdriver bit, T 27 x 125	0812 542 2104	Removing and installing spline socket screws with electric or pneumatic screwdrivers; tightening down screws with torque wrench	
7	Wooden assembly block	1108 893 4800	Supporting the piston	
8	Setting gauge	1111 890 6400	Adjusting air gap between the ignition module and flywheel	
9	Assembly drift	1114 893 4700	Removing and installing piston pin	
10	Assembly tube	1117 890 0900	Attaching springs	
11	Installing sleeve	1118 893 2401	Installing oil seal (clutch side)	
12	Installing sleeve	1122 893 2405	Installing oil seal (starter side)	
13	Installing sleeve	1122 893 4600	Protecting the oil seal (clutch side)	
14	Combination wrench	1129 890 3401	Spark plug	1)
15	Puller	1135 890 4500	Removing flywheel	
16	Service tool AS (set)  - Screw sleeve	5910 007 2205  5910 893 2409	Removing and installing crankshaft (clutch side)  Pulling two halves of crankcase together	

No.	Description	Part No.	Application	Rem.
17	Mounting plate for assembly stand	5910 850 1650	Clamping machine to assembly stand	
18	Ignition system tester, ZAT 4	5910 850 4503	Testing ignition system	
19	Ignition system tester, ZAT 3	5910 850 4520	Testing ignition system	
20	Torque wrench	5910 890 0302	0.5 to 18 Nm	
21	Torque wrench	5910 890 0312	6 to 80 Nm	
22	Installing tool 12	5910 890 2212	Installing hookless snap rings in piston	
23	Screwdriver	5910 890 2304	Adjusting carburetor	
	- Setting disk	5910 893 6600	Add-on for screwdriver (adjusting carburetor)	
24	Screwdriver bit, T 27 x 150	5910 890 2400	IS-P screws (4 mm)	
25	Hook	5910 890 2800	Detaching springs on clutch shoes	
26	Assembly stand	5910 890 3100	Holding saw for repairs	
27	Puller	5910 890 4400	Removing oil seals	
	- Jaws (No. 3.1)	0000 893 3706	Removing oil seal(s)	
28	Puller	5910 890 4500	Removing limiter caps	
29	Stud puller M8	5910 893 0501	Removing bar mounting studs	
30	Screw sleeve	5910 893 2420	Installing crankshaft	
31	Socket, 13 mm, long	5910 893 2804	Removing and installing decompression valve	
32	Hook	5910 893 8800	Removing pickup body	

**Remarks:**

1) Use for releasing only.

## 15. Servicing Aids

No.	Description	Part No.	Application
1	Lubricating grease (225 g tube)	0781 120 1111	Oil seals, sliding and bearing points
2	STIHL special lubricant	0781 417 1315	Bearing bore in rope rotor, rewind spring in fan housing
3	STIHL press fluid OH 723	0781 957 9000	Rubber components, AV buffers
4	STIHL multipurpose grease	0781 120 1109	High voltage output on ignition module
5	Dirko HT red sealant	0783 830 2000	Engine pan
5	Medium-strength threadlocking adhesive (Loctite 242)	0786 111 2101	
6	High-strength threadlocking adhesive (Loctite 270)	0786 111 2109	
7	High-strength threadlocking adhesive (Loctite 648)	0786 111 2117	
8	Standard commercial solvent-based degreasant containing no chlorinated or halogenated hydrocarbons		Cleaning sealing faces and carburetor, crankshaft stubs and flywheel taper

**englisch / english**

0455 553 0123. M0. J10. xxx.